



# Dell Inspiron 17R-5737 Optical Drive Replacement

The optical drive must be removed before removing the palmrest.

Written By: Mack Chabot





## TOOLS:

- [JIS #00 Screwdriver](#) (1)
-

## Step 1 — Battery



⚠ Make sure the laptop is off before attempting to remove the battery.

- Flip over your laptop so that the battery faces you.

## Step 2



- Slide each latch away from the battery to unlock it.

### Step 3



- Lift the battery upwards to remove it.
- ⓘ Continue holding the latches when removing the battery.

### Step 4 — Optical Drive



- Remove one 4.8mm screw with a JIS #00 screwdriver.
- Remove the optical drive.

To reassemble your device, follow these instructions in reverse order.