




Dell Latitude E6410 RAM Replacement

This guide will walk you through the steps of replacing the RAM in your Dell Latitude E6410.

Written By: Stephen Tate

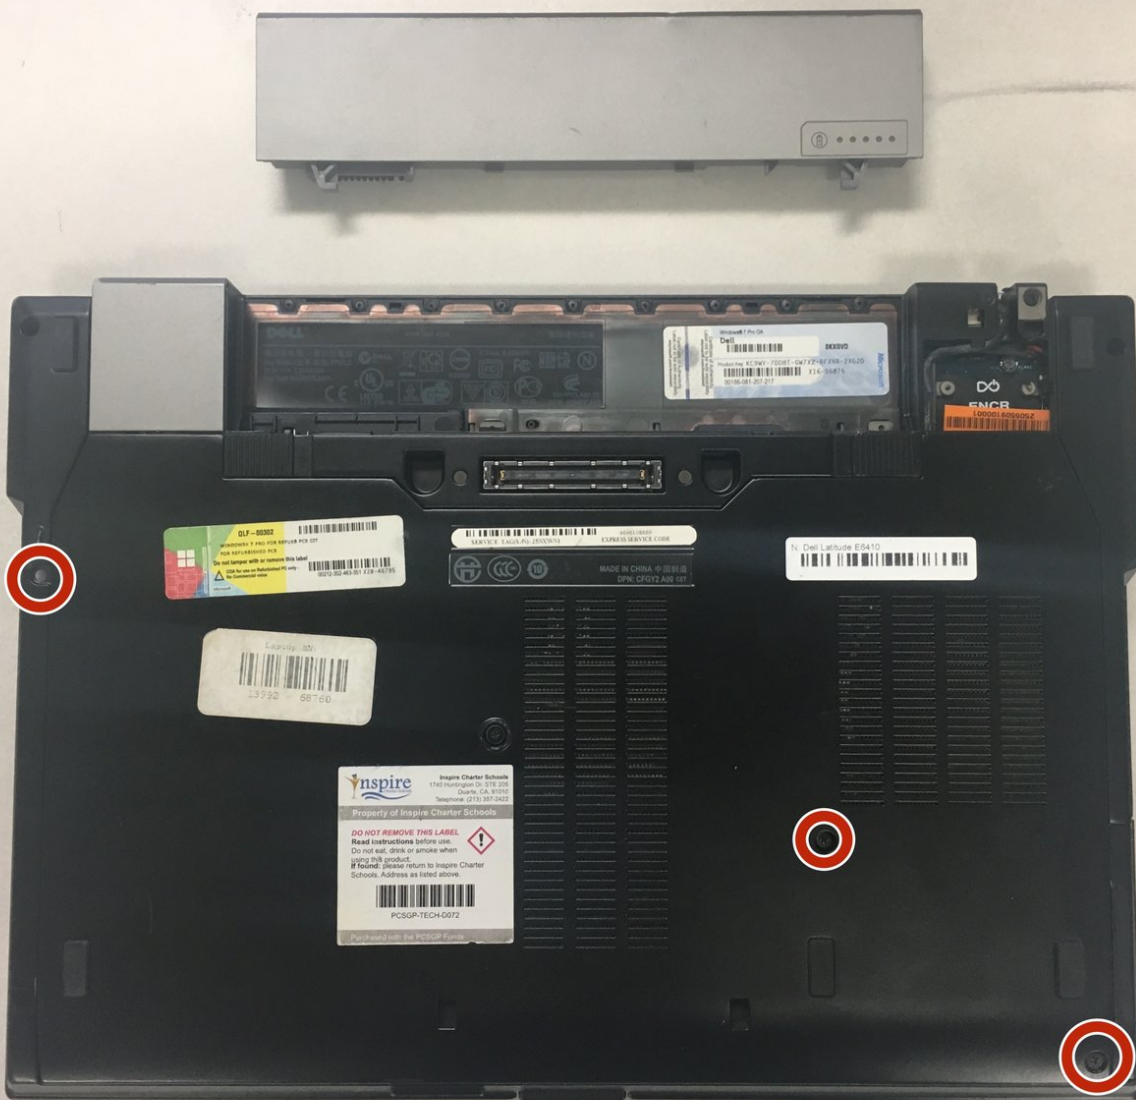

INTRODUCTION

This guide will walk you through the process of replacing your RAM.



TOOLS:


- [Fingers](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery



- Unplug power cord and place computer upside down on your desk.

Step 2

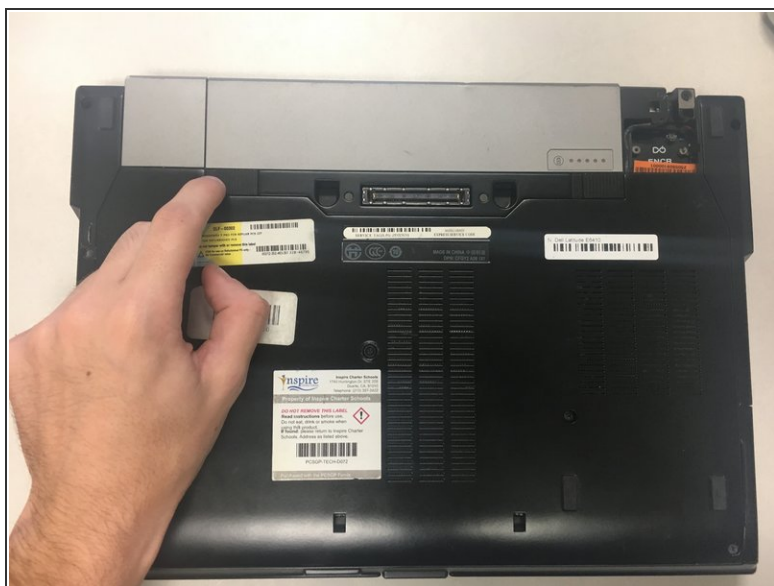


- Remove battery by sliding the locks inward and pushing the battery out.

Step 3 — RAM





- Remove the following 5mm screws from the bottom of your laptop.
- Loosen the 5mm screw in the middle.

Step 4

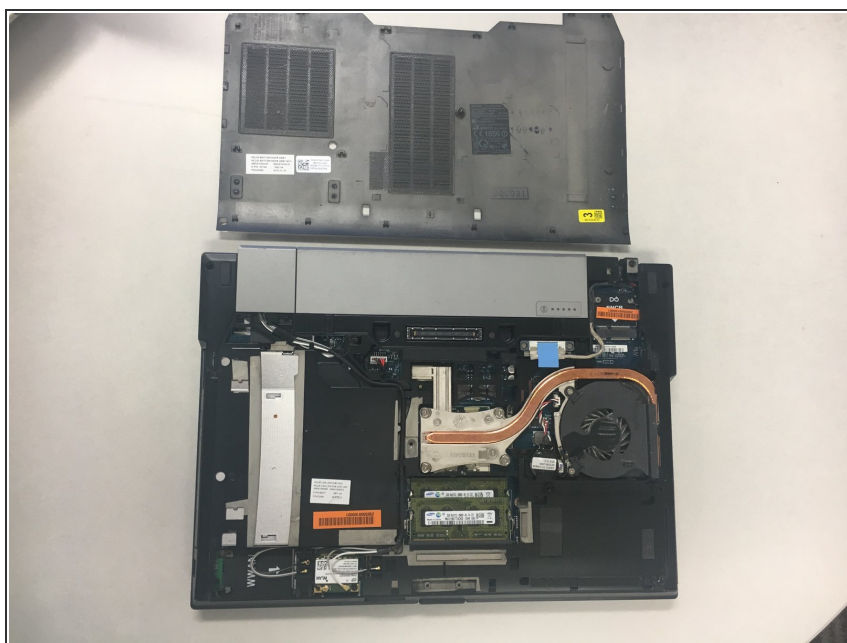

- Remove bottom cover by sliding it downwards.

Step 5

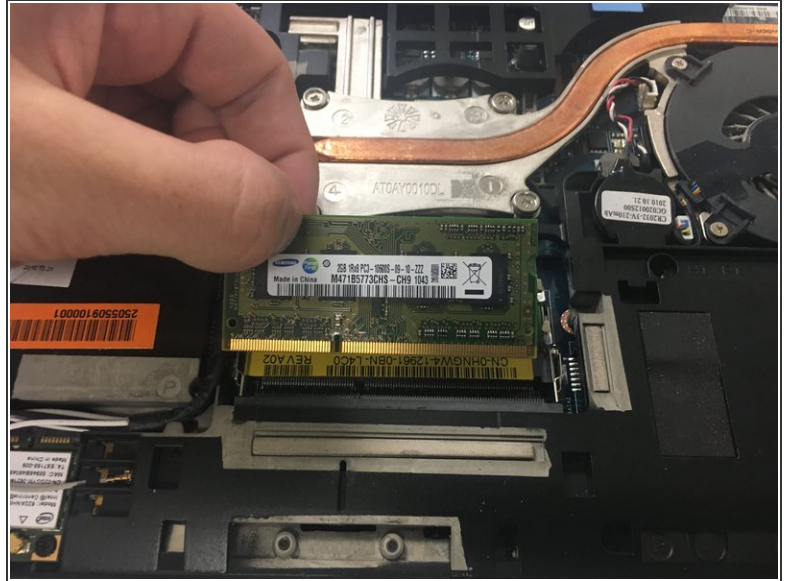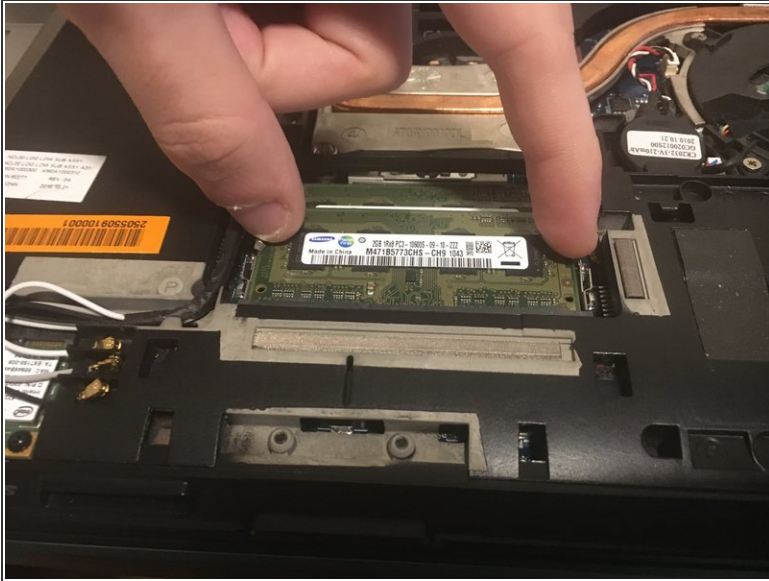

- Remove first RAM card by pushing clips outwards
- Pull the RAM card out.
- ❗ Repeat this procedure for the second RAM card.

To reassemble your device, follow these instructions in reverse order.