



Stanley 10-079 Box Cutter Blade Replacement

How to replace the blade on a Stanley 10-079 Box Cutter

Written By: Michael Cawley



INTRODUCTION

This guide will show you how to replace the blade on a Stanley 10-079 Box Cutter.



TOOLS:

- [Coin](#) (1)



PARTS:

- [Utility Blade](#) (1)

Step 1 — Knife Blade



- Here is the knife we will be replacing the blade on, its a Stanley 10-079 Box Cutter.

Step 2




- Using a screwdriver or a coin remove the single screw in the center of the box cutter

Step 3



- Carefully pull up on the top half of the cutter exposing the blade on the inside.

Step 4

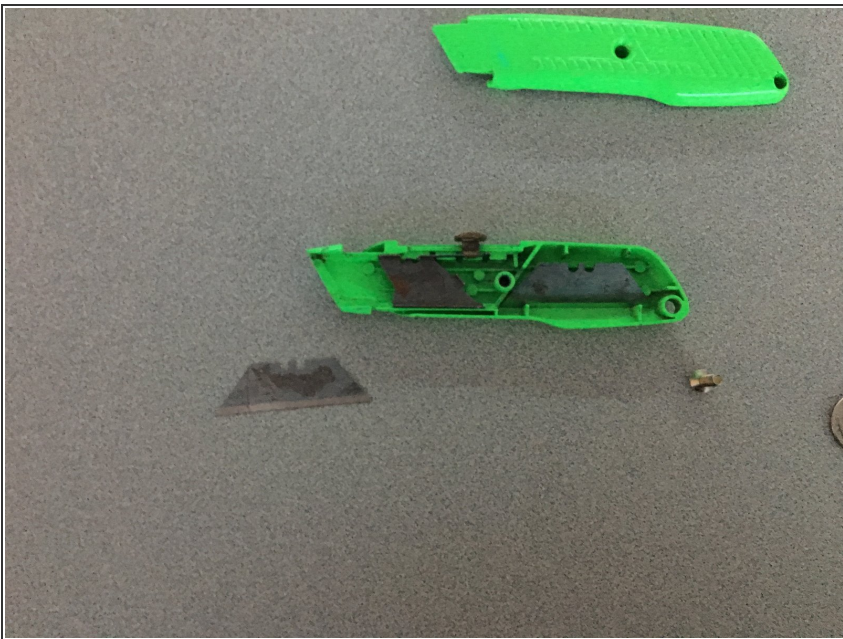

- carefully without cutting yourself lift the old blade out this should require no force.

Step 5




- with the old blade out replace it with a new blade from the back or one that was purchased separately.

Step 6 — Reassembly



- With the fresh blade in place carefully place the upper half of the box cutter on the lower half that contains the blade as shown in image number 2.

Step 7 — Final Assembly

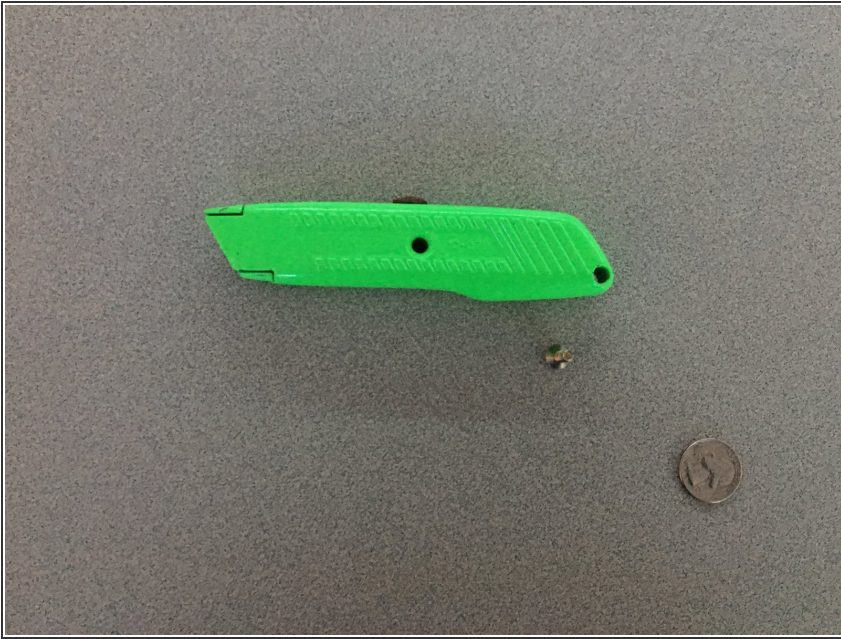

- insert the screw you first removed back into the hole in the center ensuring that you tighten it down not too tight to get undone without a power tool

Step 8



- With the center screw re-installed you are all set to use your Stanley 10-079 box cutter again with a brand new blade.

You are all set and ready to use your brand new installed blade! Here are some replacement blades that I found on amazon. <https://www.amazon.com/St Stanley-11-921L-5...>

