

LG G Vista Speaker Replacement

This guide will show you how to replace the loudspeaker in your LG G Vista. You will need a Phillips screwdriver size 000.

Written By: Key Baker



INTRODUCTION

This guide will teach you how to replace the speaker in your LG G Vista. The speaker is easily replaceable, and you will have a brand new speaker in no time as long as you have a Phillips #000 screwdriver.

TOOLS:

- Phillips #000 Screwdriver (1)
- iFixit Opening Tools (1)

Step 1 — Speaker




• Use a Phillips #000 screwdriver to remove five 3.0 mm screws.

Step 2



- Use a plastic opening tool, or your fingernail, to lift up the bottom hard shell cover.
- Remove the hard shell from the device.
- (i) This hard shell covering that you are removing *contains the speaker*.

Step 3

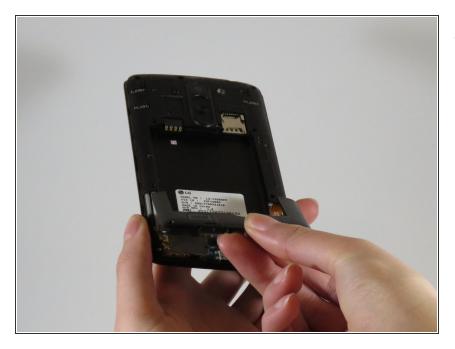

 To insert your new loudspeaker, simply take the piece and snap firmly into the place of the previous loudspeaker.

To reassemble your device, follow these instructions in reverse order.