


Huawei Mate 8 Display Replacement

Replace the broken display of your Huawei Mate 8 smartphone.

Written By: Dominik Schnabelrauch

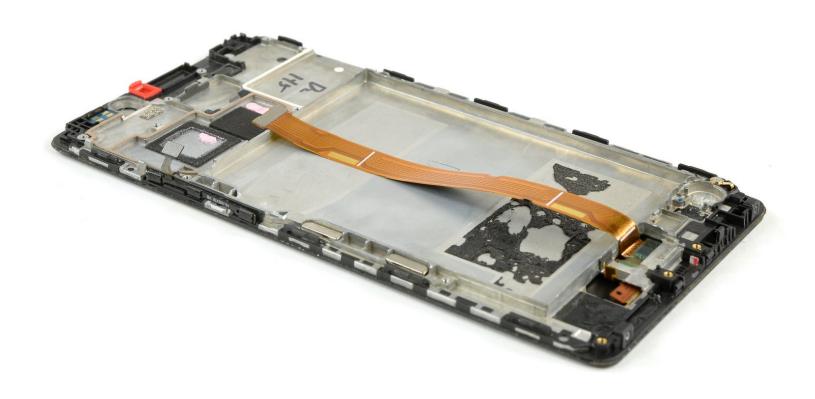

INTRODUCTION

Use this guide to replace the defective display of your Huawei Mate 8.



TOOLS:


- T2 Torx Screwdriver (1)
- iFixit Opening Picks set of 6 (1)
- iOpener (1)
- Phillips #00 Screwdriver (1)
- Spudger (1)
- Suction Handle (1)



PARTS:

• Huawei Mate 8 Screen (1)

Step 1 — Back Cover

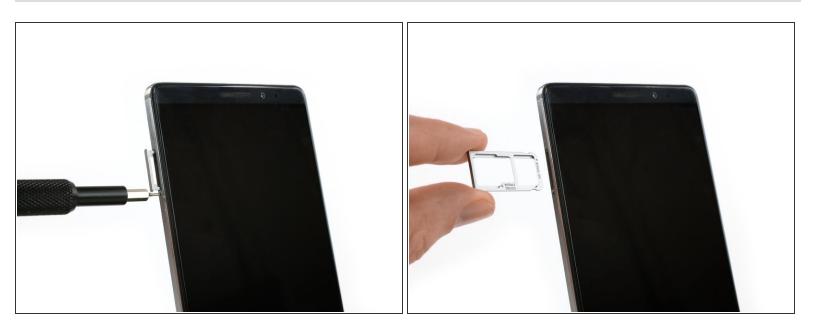

Switch off your phone and remove the SIM card tray.


Step 2



 Remove the Torx T2 screws from the bottom of the phone



 Use an iSclack or a suction handle in the bottom area of your phone to separate the display unit from the rear panel.

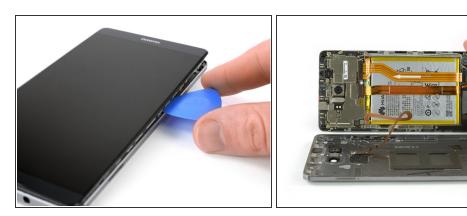





- Use an opening pick to fully separate the clips, releasing the phone.
 - ⚠ Do not fully remove the rear case. The fingerprint sensor cable is still connected to the back cover.
- Open the phone like a book from the SIM tray side.
- Use a spudger, to disconnect the fingerprint sensor cable.

Step 5 — Daughterboard interconnect cable







- Remove the liquid indicator sticker.
- Remove the Phillips #00 screw that holds down the metal shield.
- The metal shield is tightly held in place. If you try to remove it without holding it down on one side, it'll break easily.
- Use a spudger to remove the metal shield.


Step 6









 Use the flat end of a spudger to disconnect the display, daughterboard interconnect, and battery cables.

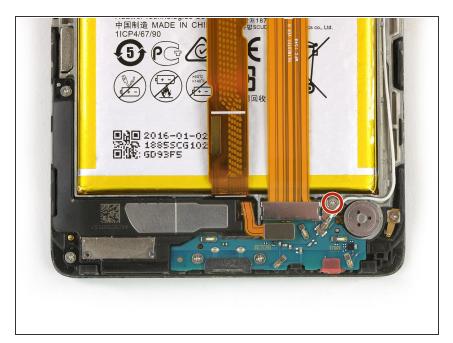

 Remove the Phillips #00 screw that holds down the interconnect cable bracket.

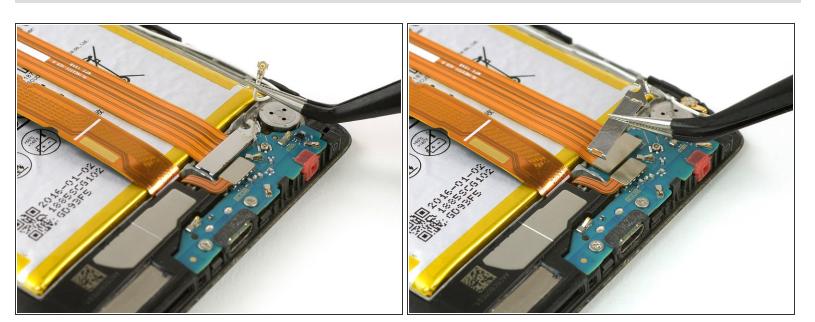


- Lift the coaxial connector off of its socket to allow access to the daughterboard interconnect cable bracket.
- Remove the bracket.

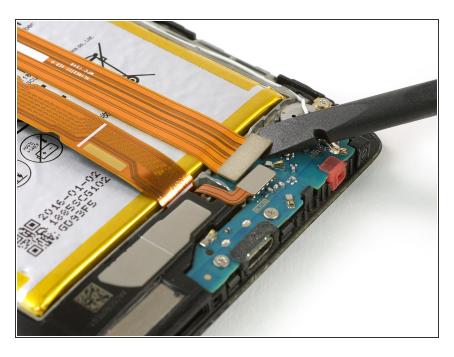


- Use a spudger to disconnect the interconnect cable.
- Remove the interconnect cable.

Step 10 — Battery

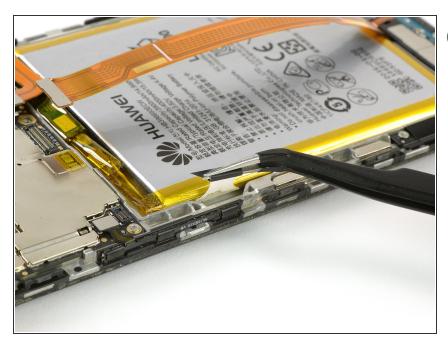


- The battery is glued in place with two adhesive strips. One with a pull tab and one without.
- Get a good grip on the pull tab near the power button and peel out the adhesive strip by steadily pulling at the tab in a flat angle.
 - if the adhesive strip rips, grab and twist it around the tweezer tips a couple of times and then continue.



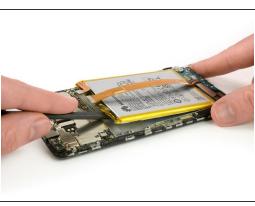




- ♠ Do not bend or puncture the battery, damage to the cell can cause battery fires.
- Heat an iOpener and place it on the phone for about a minute to loosen the remaining adhesive.
- Carefully insert the flat end of a spudger to separate any remaining adhesive at the top of the battery.

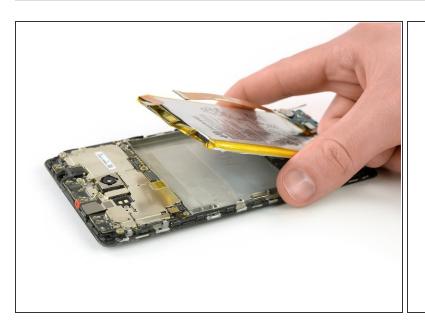




- Lift the top end of the battery to pull the battery off of the remaining adhesive strip.
- When reassembling your phone, apply <u>stretch release adhesive strips</u>, double sided adhesive tape, or <u>pre-cut adhesive</u> to secure the new battery.
- Never reinstall a battery that has been bent or damaged during removal.


Step 13 — Display

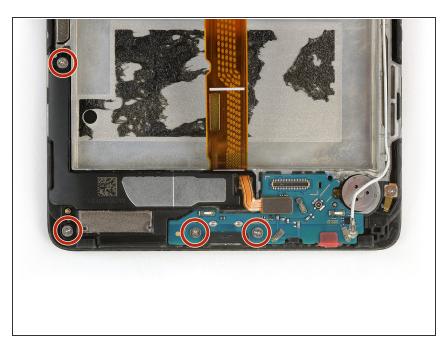

 Remove the four Phillips #00 screws holding the daughterboard and loudspeaker to the phone.

This document was generated on 2020-11-28 06:27:07 AM (MST).

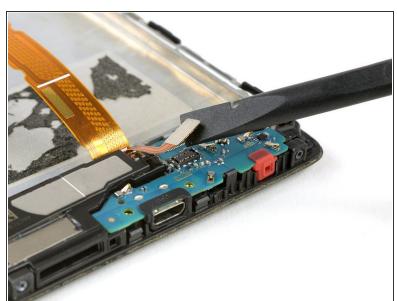

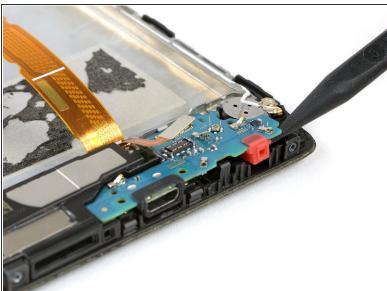


- Use the flat end of a spudger to disconnect the loudspeaker connector cable.
- Use the tip of a spudger to lift the daughterboard from the phone.






- Insert the flat end of a spudger under the loudspeaker at the gap on the left side.
- Work the spudger under the loudspeaker to seperate it from the adhesive and remove the loudspeaker.
- Use tweezers to take the vibration unit out of its housing.

Step 16

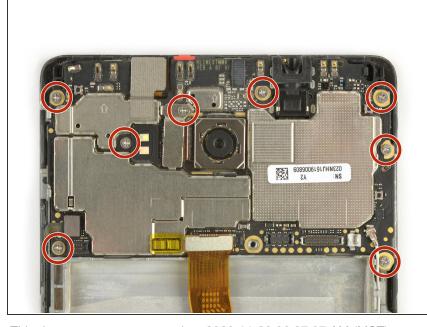


 Remove the eight Phillips #00 screws securing the motherboard to the phone.

This document was generated on 2020-11-28 06:27:07 AM (MST).

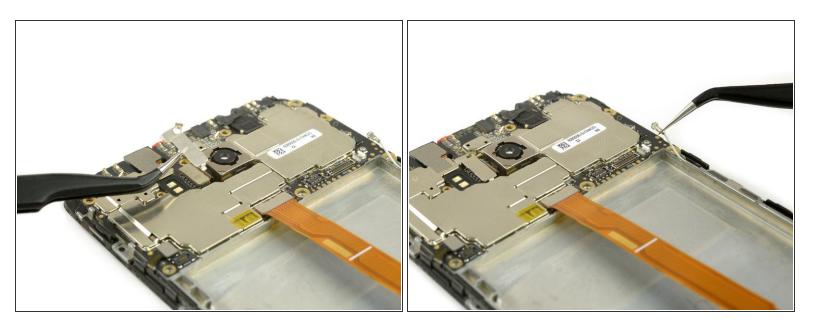

- Remove the bracket from the rear camera flex cable.
- Use tweezers to disconnect the antenna cable.

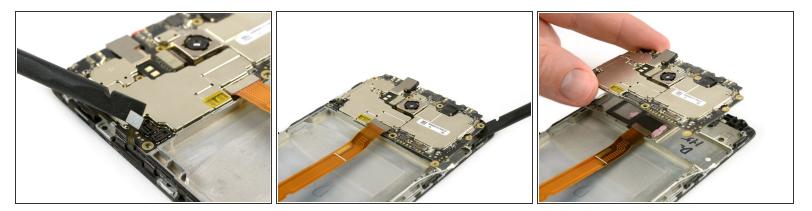


- Use the flat end of a spudger to disconnect the volume and power flex cable on the bottom left side of the mainboard.
- Work the flat end of a spudger under the top right side of the mainboard to pry it out.
- Remove the mainboard.






- Remove the antenna interconnect cable.
- Remove the power and volume switch assembly.

Step 20

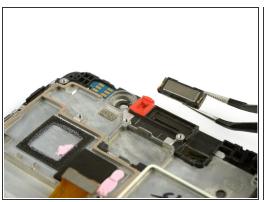

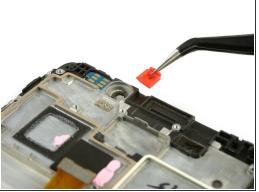



- Use tweezers to remove the earpiece speaker.
- Remove the red rubber gasket.
- Remove the ambient light and proximity sensor.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 06:27:07 AM (MST).