



# Sony Vaio Fit SVF14A190X Battery Replacement

Battery replacement for the Sony Vaio Fit SVF14A190X.

Written By: Randal Crosby



---

## INTRODUCTION

This is an easy to follow, step by step guide to help aid in the replacement of the battery for the Sony Vaio Fit SVF14A190X. The battery is a vital component to the device to ensure it can properly operate.




### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Battery Replacement



 Make sure the battery is drained or the computer is turned off.

- Use the Phillips head screw driver to remove the eleven 6 mm screws.
- Use the Phillips head screw driver to remove the one 4 mm screw securing the CD drive.

## Step 2



- Insert the plastic opening tool into the slit of the CD drive.
- Then pull it outwards.
- Grab the CD drive with your hand.
- Take the CD drive all the way out.

## Step 3



- Insert the plastic opening tool into the slit between the back cover and the rest of the computer.
- Move the plastic opening tool around all sides of the device.
- Peel off the back cover.

## Step 4



- Use the Phillips head screw driver to remove the four 7 mm screws.
- Lift the battery out with your hand.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-22 09:14:08 AM (MST).

