

# **Dell Vostro V130 LED Cover Replacement**

Written By: Johnathan Hammond



## INTRODUCTION

In this guide, we will show you how to remove and replace the LED Cover.

# **TOOLS:**

1

• Phillips #0 Screwdriver (1)

#### Step 1 — Remove the Screws



• Remove the screws that secure the base cover to the computer.

#### Step 2 — Removing the Base Cover




- Slide the base cover towards the front of the computer. Lift it up and away from the computer.
- If this is all you are doing Follow
  Step In Reverse if not Go to Next
  Step.

#### Step 3 — Disconnecting the Battery



 Lift the black cable-release clip to release the battery cable from the connector on the system board and disconnect the battery cable.

#### Step 4 — Remove Battery Screws

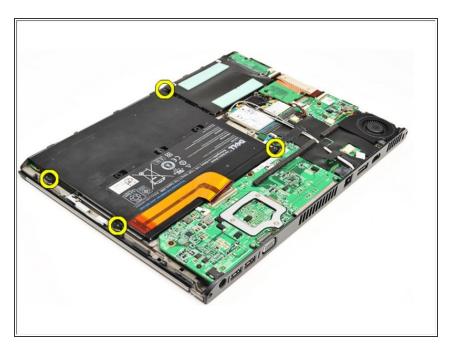

• Remove the screws that secure the battery to the computer.

### Step 5 — Lift the Battery



- Lift the battery up and away from the computer.
- If this is all you are doing Follow Step In Reverse if not Go to Next Step.

#### Step 6 — LED Cover



• Starting on the right side of the system, use a plastic scribe to pry up the LED cover from the computer.

#### Step 7 — Removing the LED Cover



- Pull the LED cover toward the keyboard and remove it from the computer.
- If this is all you are doing Follow Step In Reverse if not Go to Next Step.