




Dell Alienware 18 Coin-Cell Battery Replacement

Written By: darrius

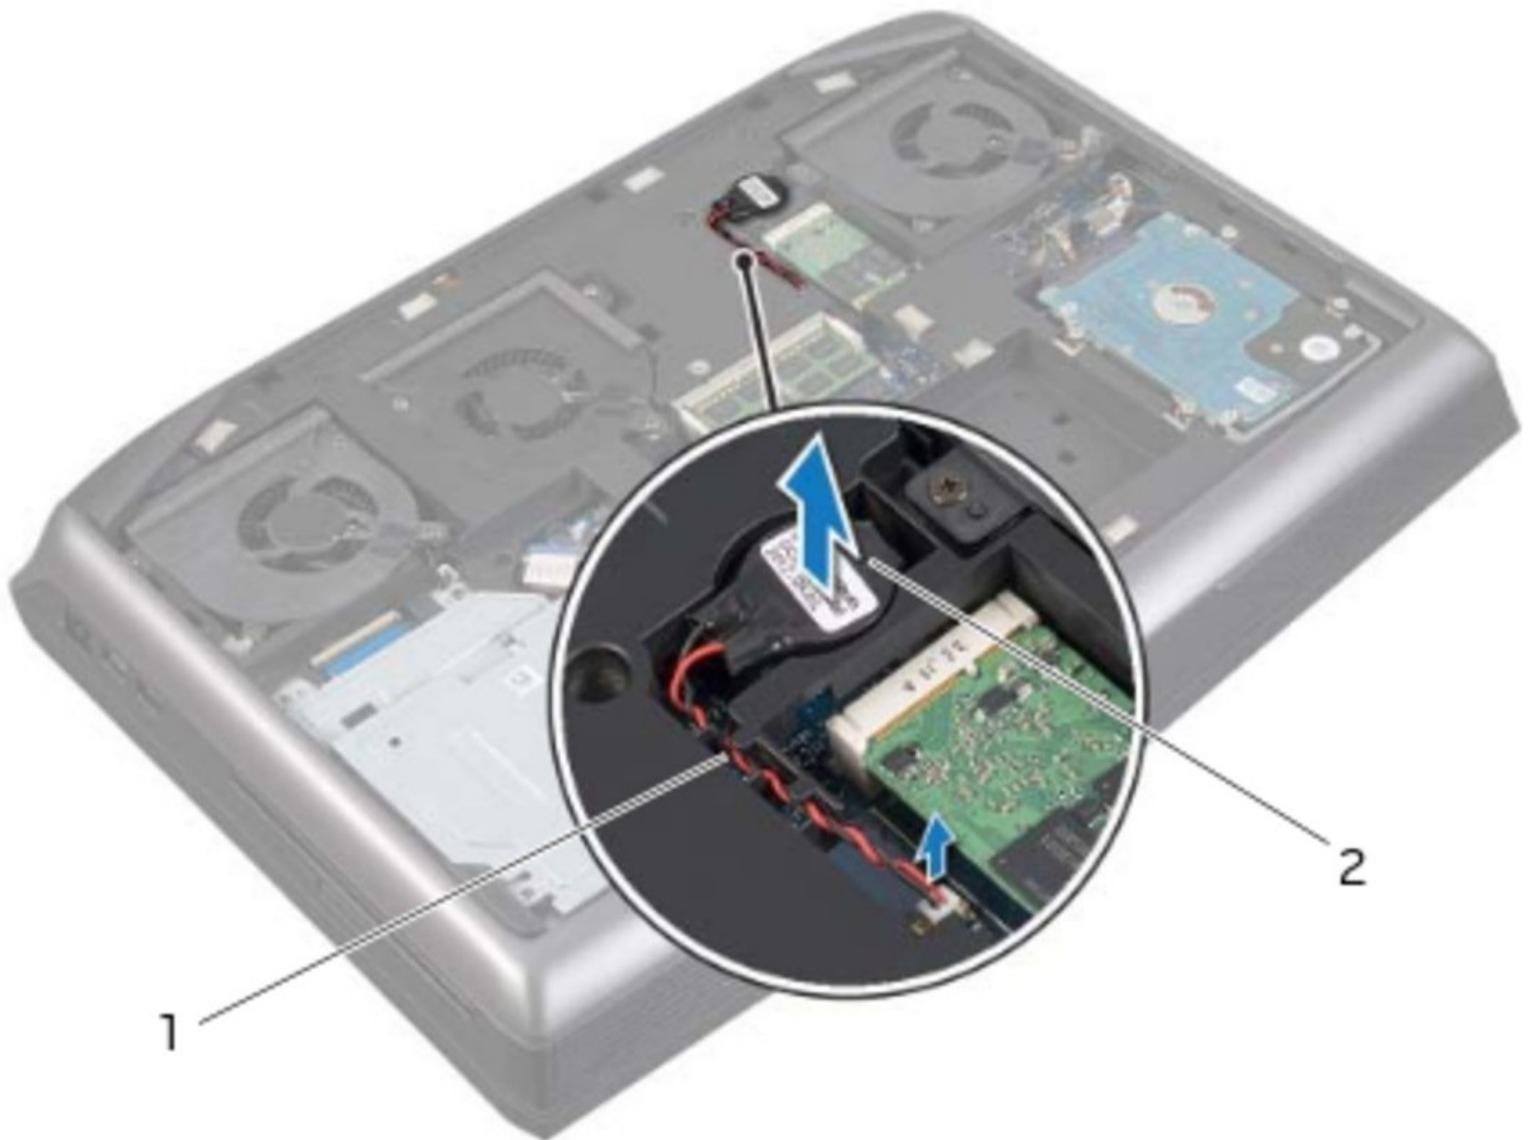

INTRODUCTION

In this guide, we will be showing you how to remove and replace the Coin-Cell Battery.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Before You Begin



⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before You Begin](#).

Step 2 — Remove the base cover screws




- Use a Phillips screwdriver to remove the three screws securing the base cover.

Step 3 — Slide the Cover



- Slide the base cover towards the rear of the computer and lift it off the computer base.

Step 4 — Disconnecting the Coin-Cell Battery

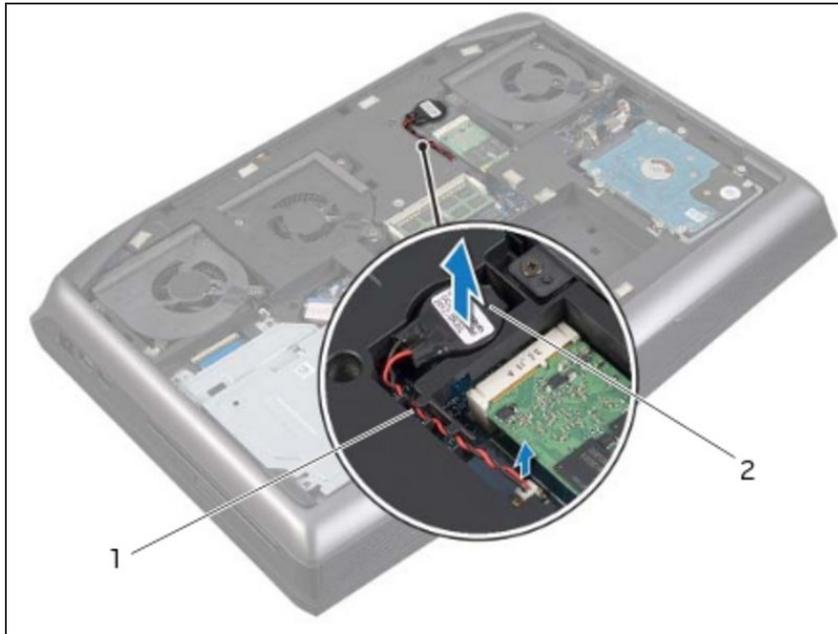


⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before You Begin](#).

⚠ WARNING: The battery may explode if installed incorrectly. Replace the battery only with the same or equivalent type. Discard used batteries according to the manufacturer's instructions.

⚠ CAUTION: Removing the coin-cell battery resets the BIOS settings to default. It is recommended that you note the BIOS settings before removing the coin-cell battery.


- Disconnect the coin-cell battery cable from its connector on the system board.

Step 5 — Removing the Coin-Cell Battery

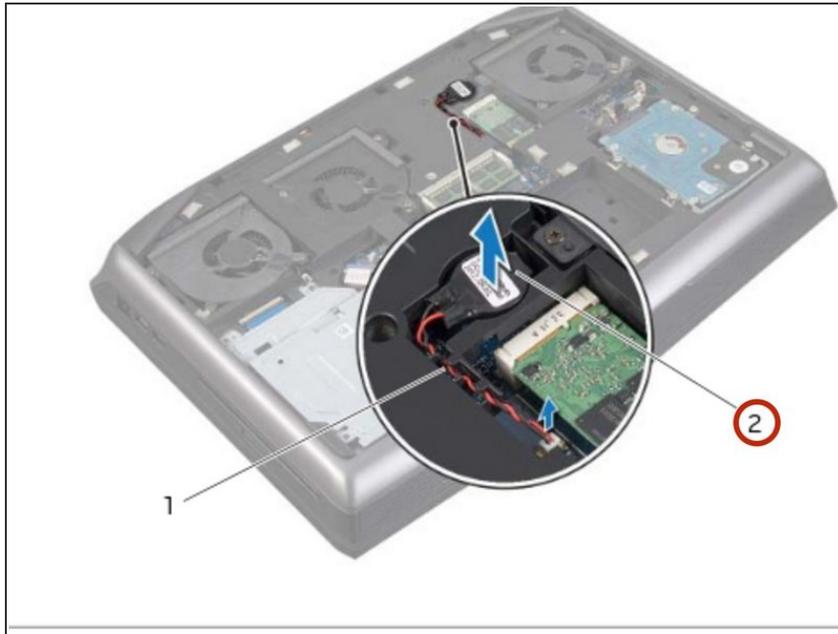


- Remove the coin-cell battery cable from the routing guides on the computer base.

Step 6 — Praying the Coin-Cell Battery

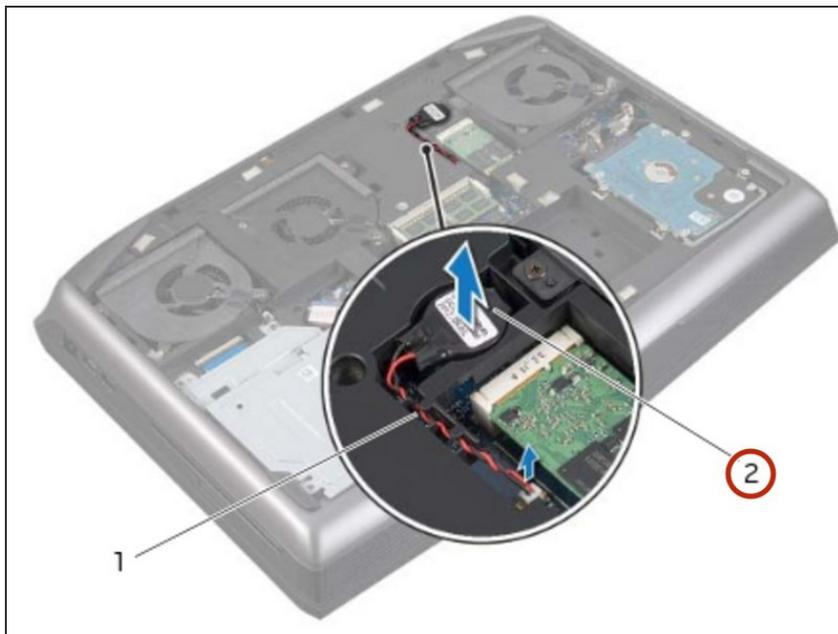


- Pry up the coin-cell battery from the slot on the system board.

Step 7 — Placing Coin-Cell Battery

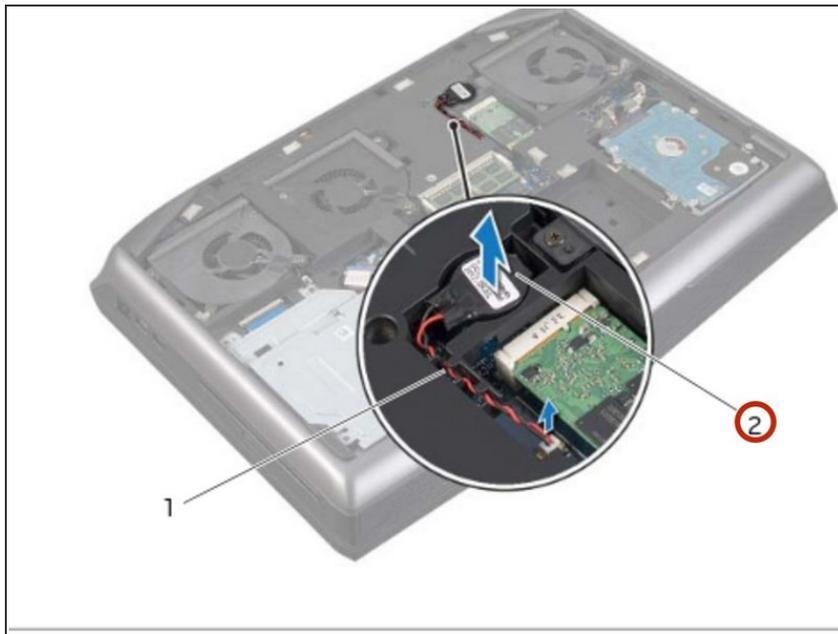

- Place the **NEW** coin-cell battery into the slot and press gently to adhere it to the computer base.

Step 8 — Routing the Coin-Cell Battery Cable

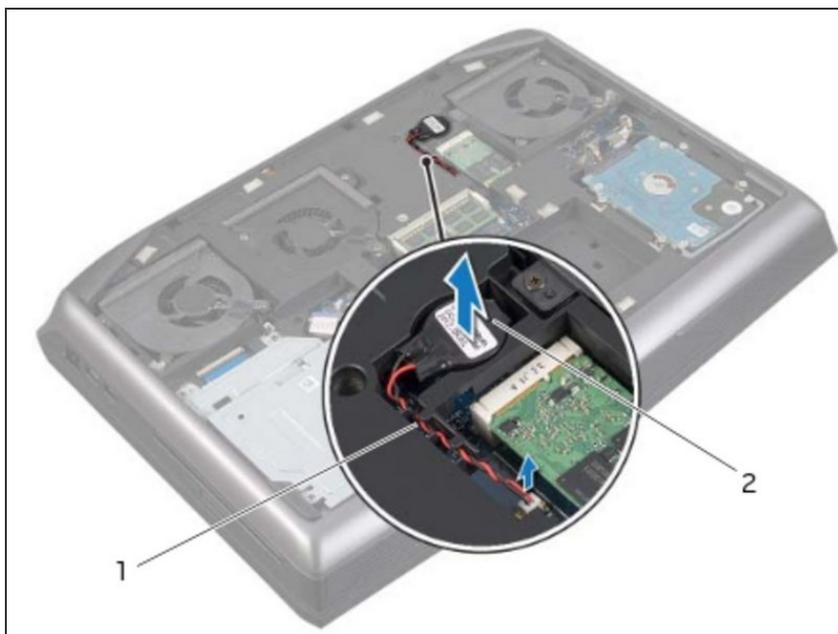

- Route the coin-cell battery cable through the routing guides on the computer base.

Step 9 — Connecting Coin-Cell Battery



- Connect the coin-cell battery cable to its connector on the system board.