




Acer Aspire One Cloudbook 14 AO1-431-C8G8

Speakers Replacement

This guide will help replace the dual speakers in your Acer Aspire One Cloudbook 14 AO1-431-C8G8.

Written By: Joseph

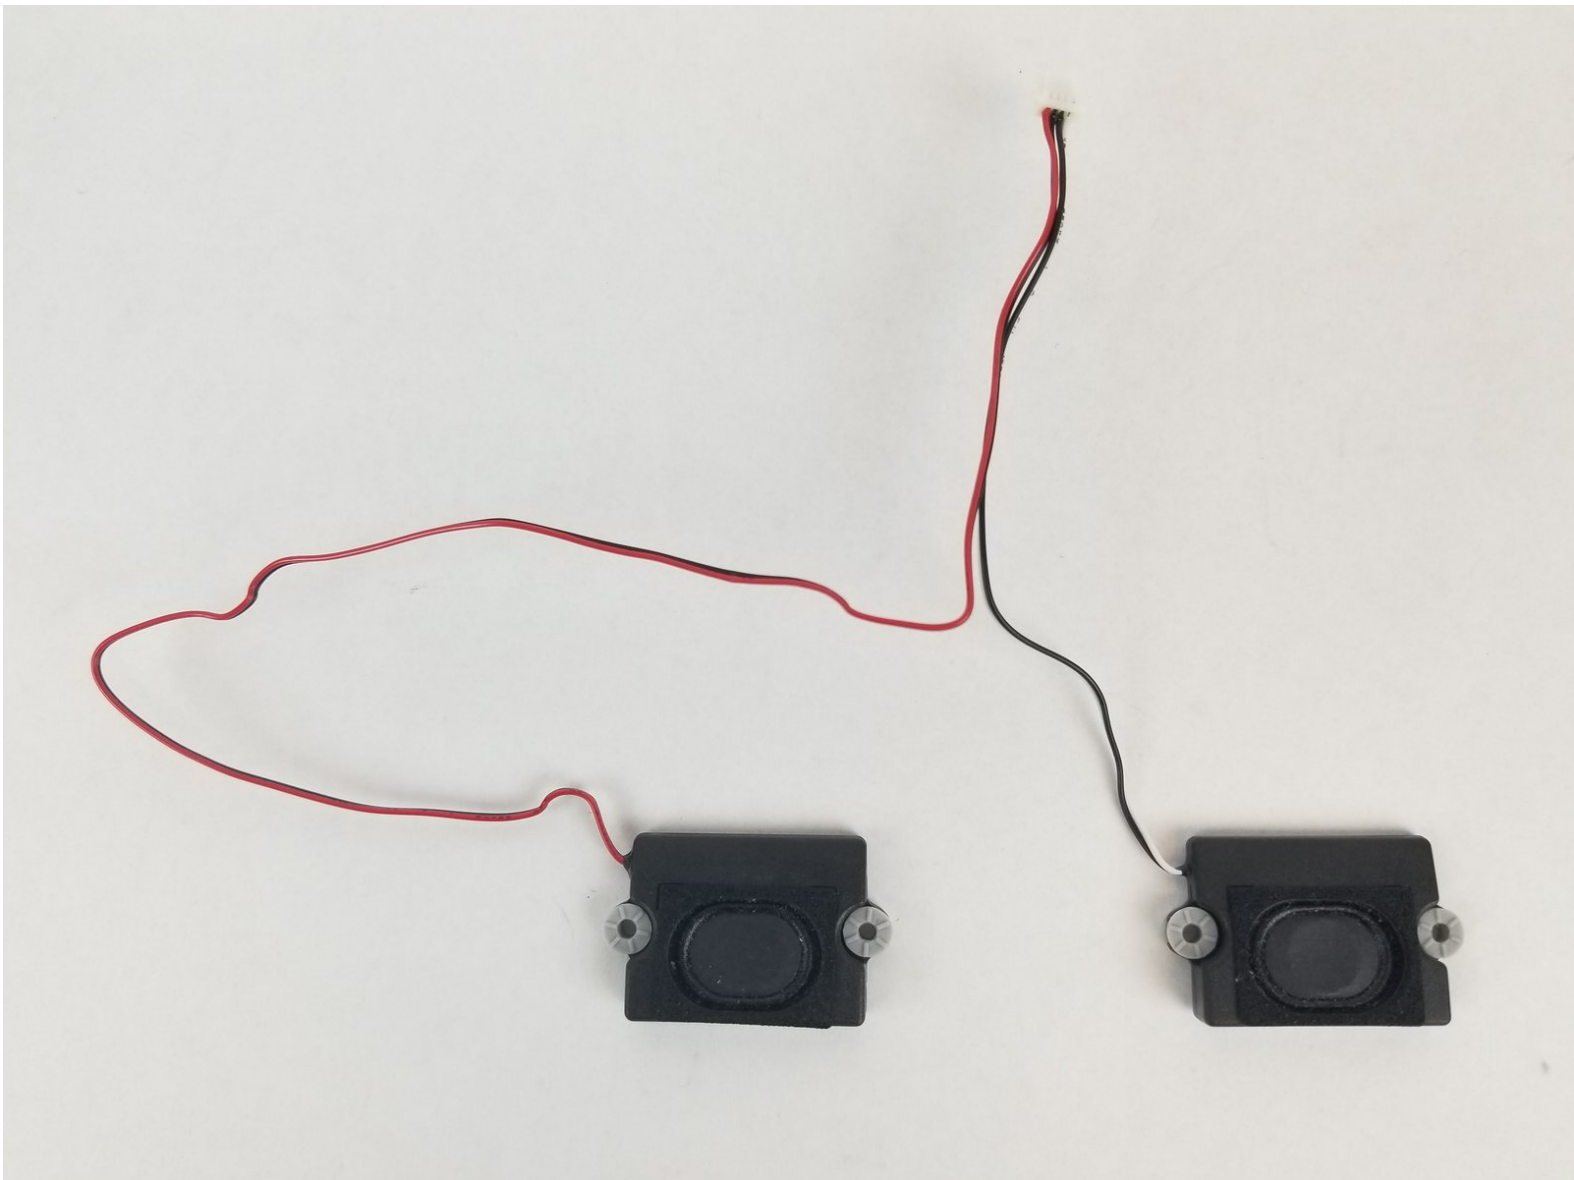

INTRODUCTION

The speakers are the main source of sound coming from the laptop. This guide will show you how to replace the speakers.



TOOLS:


- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Back Panel





- Remove the ten 7mm Phillips #0 screws from the bottom.

Step 2

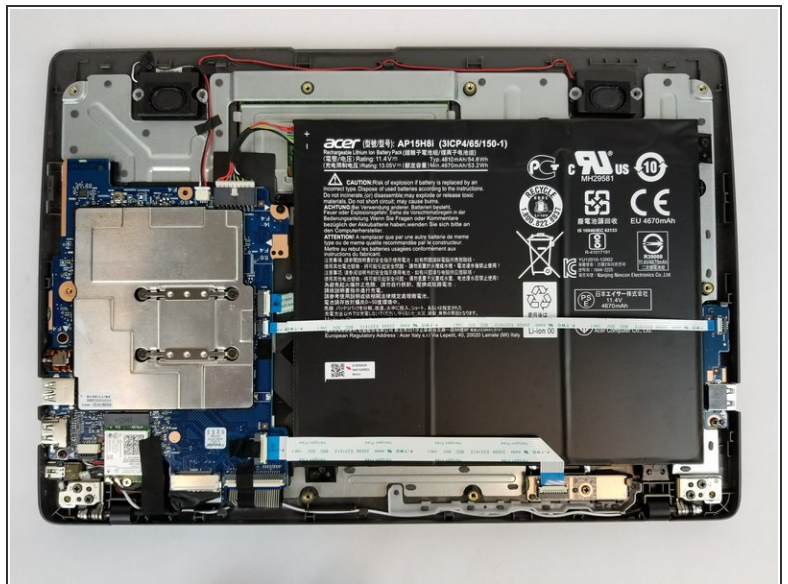


- Insert a plastic opening tool under the bottom cover and slid it around the perimeter until all of the clips release.

Step 3 — Speakers

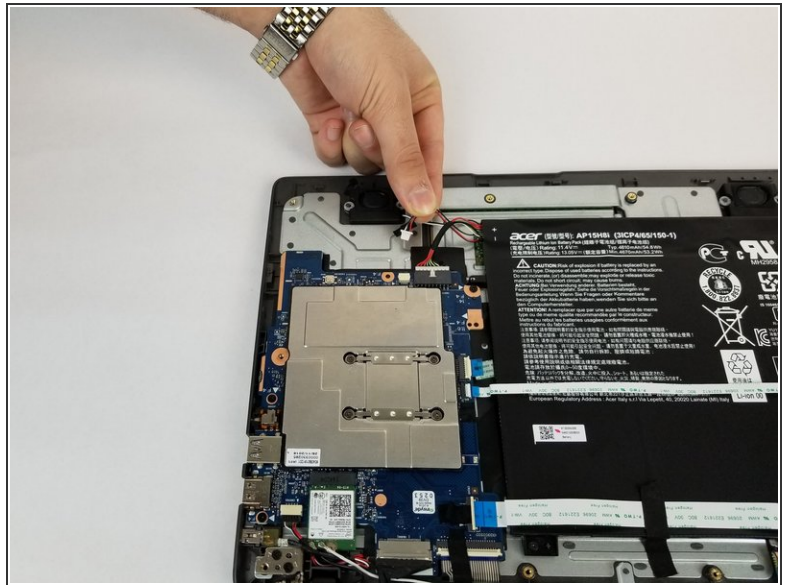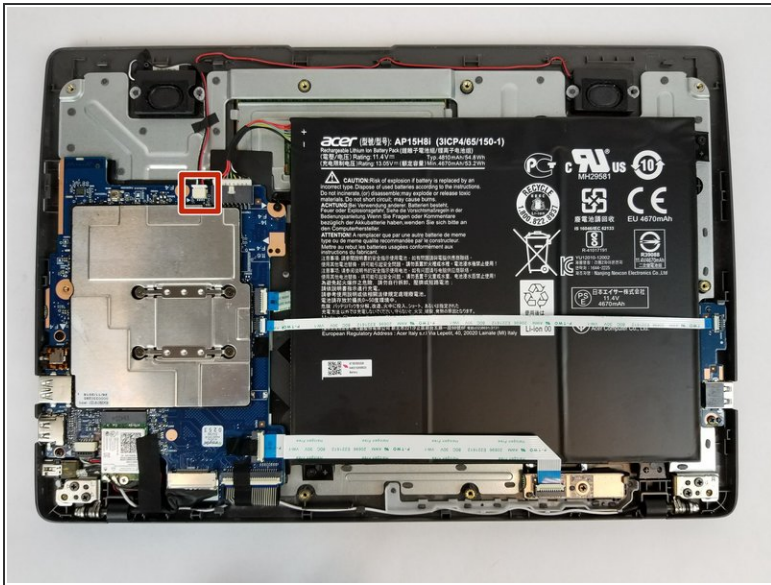

- Unplug speaker connector from motherboard.

Step 4

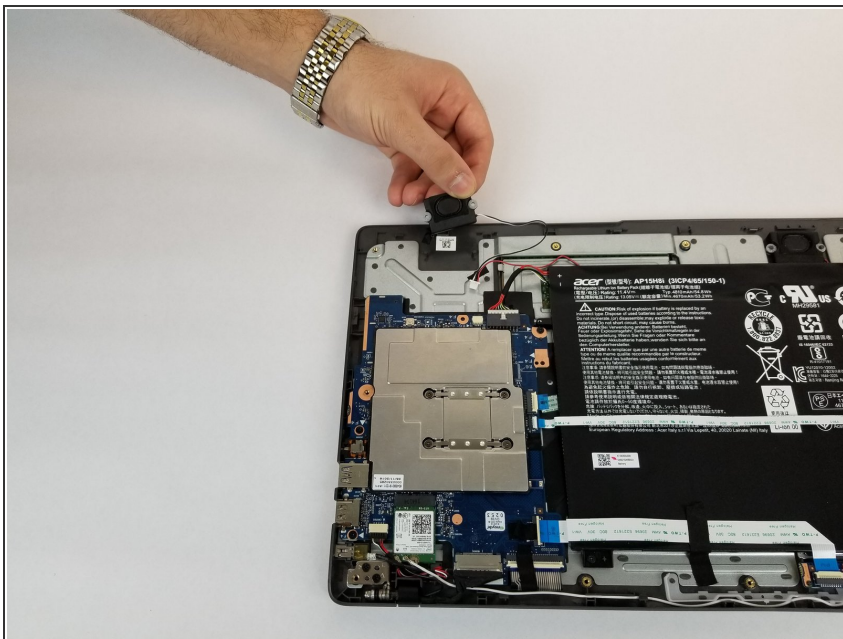

- Lift both speakers from pegs holding them in place.

To reassemble your device, follow these instructions in reverse order.