



Ring Video Doorbell Motherboard Replacement

Replace the Motherboard of the Ring Video Doorbell if any damage has occurred to it.

Written By: Abdulrahman



INTRODUCTION


In this guide, you will be shown how to take apart and replace the Motherboard of the Ring Video Doorbell step-by-step. You will need a Phillips screwdriver size PH00 and a Plastic Tool Opener.



TOOLS:



- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Motherboard

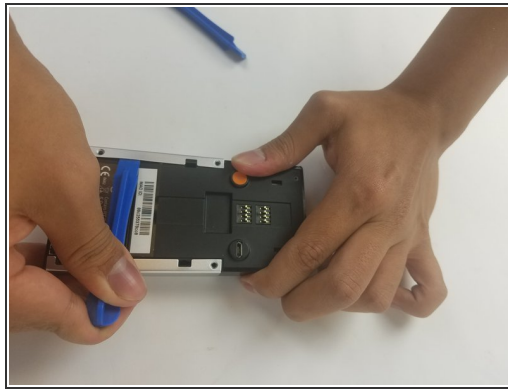


- Start by using the PH00 Phillips Screwdriver to take out the 6 1 mm screw's on the bottom of the device.
- Pry open the aluminium plate using the Plastic Opening Tool(s).
- Remove the 2 1 mm screws using the PH00 Phillips Screwdriver.

Step 2

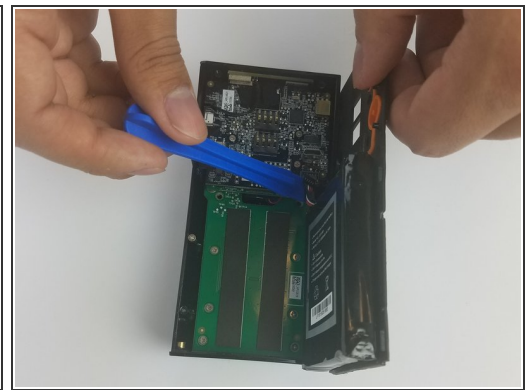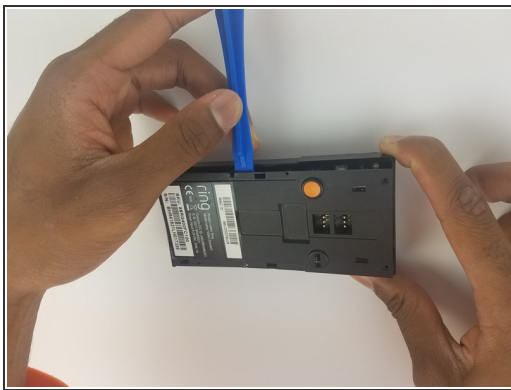

- Pry open the back case as shown using the Plastic Opening Tool.
- ⚠ Disconnect the battery from motherboard by carefully pulling up on the connector.


Step 3

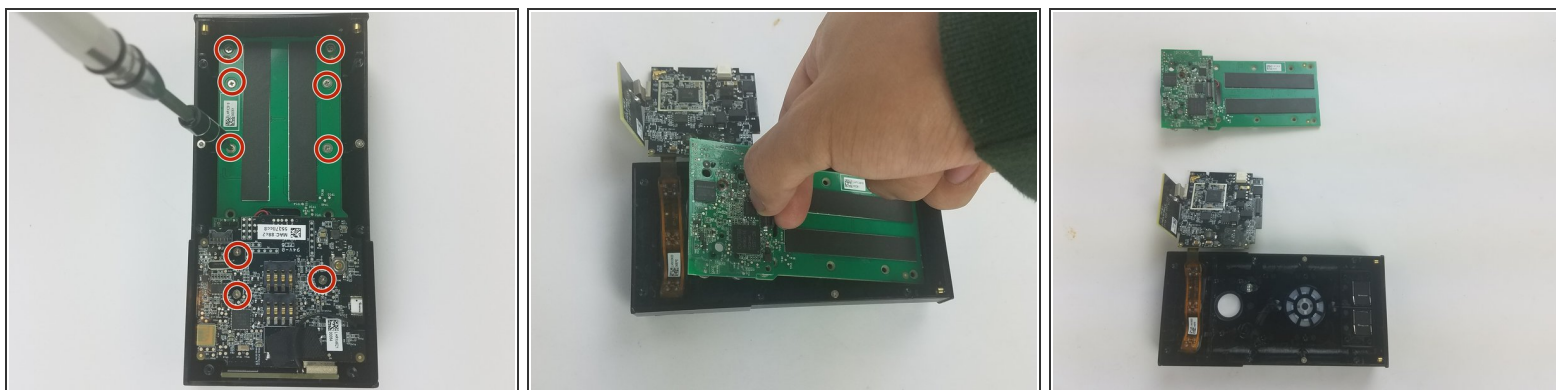

- Unscrew the 9 1 mm screwdrivers using a PH00 Phillips Screwdriver.

⚠ Carefully detach the motherboard, from the housing unit using your hands.

Step 4

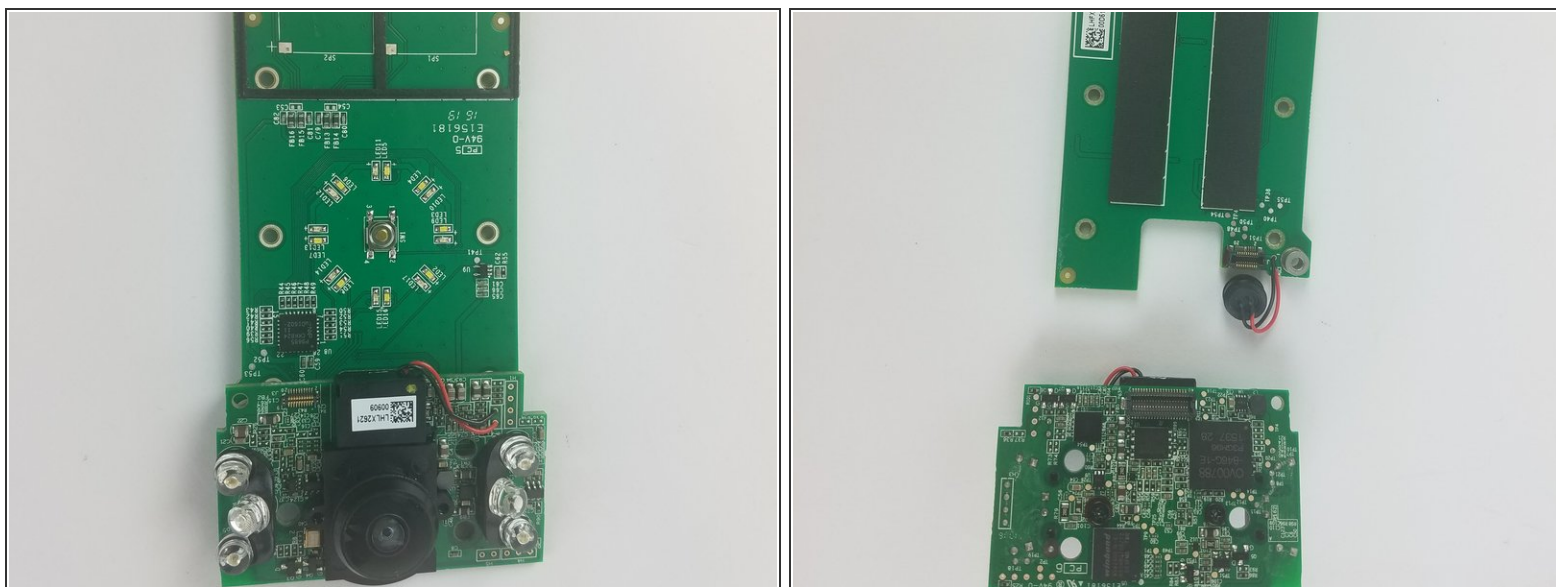

- Detach the upper part of the motherboard from the bottom, using your hands.

To reassemble your device, follow these instructions in reverse order.