

# **Dell Vostro 15 3562 Hard Drive Replacement**


Written By: Johnathan Hammond






- Phillips #0 Screwdriver (1)
- Spudger (1)

#### Step 1 — Battery

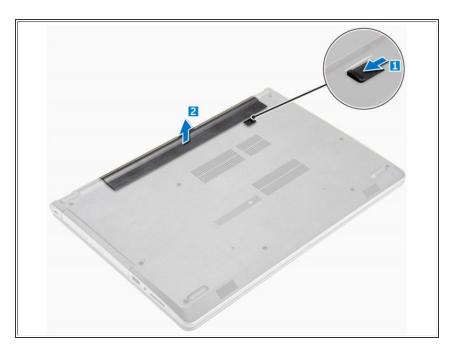


- Slide the release latch to release the battery [1].
- Remove the battery from the computer [2].

#### Step 2 — Optical-Disk Drive

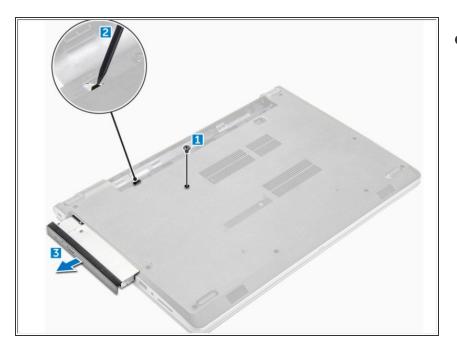

- Remove the M2L3 screw that secures the optical drive to the computer [1].
  - Using a plastic scribe, push the tab in the direction of the arrow indicated on the chassis. [2].
    - Slide the optical drive out of the computer [3].

## Step 3 — KeyBoard

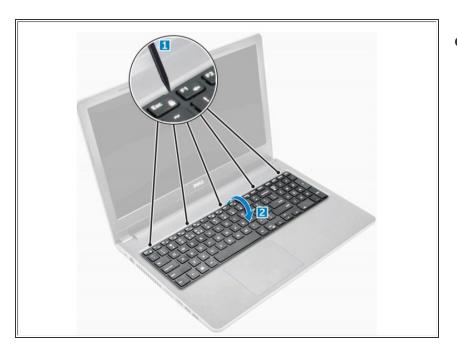


- Using a plastic scribe, release the five tabs from the slots located above the keyboard [1].
  - Flip the keyboard on the palm rest to access the keyboard connector cable under the keyboard [2].

## Step 4




- Disconnect the keyboard cable from the system board.
  - Remove the keyboard from the computer.

## Step 5 — Base Cover

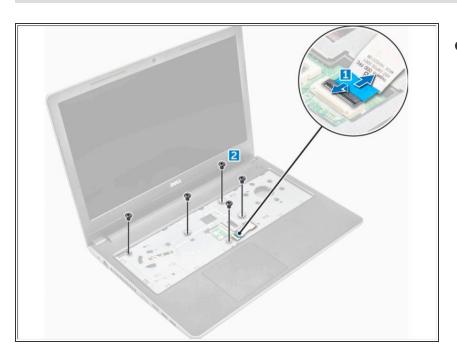


- Disconnect the optical drive connector and lift it to remove it from the system board [1].
  - Remove the M2L5 screws that secure the base cover [2].

## Step 6

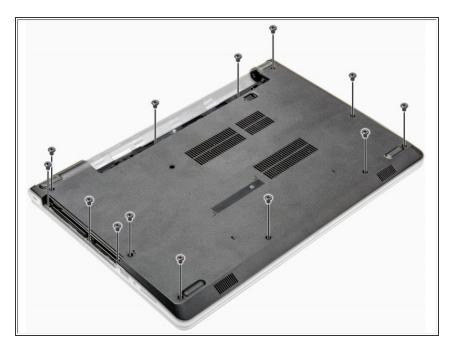


 Flip the computer and remove the screws (8 screws - M2.5L8; 3 screws - M2L2; 2 screws- M2L2) that secure the base cover to the computer.

## Step 7

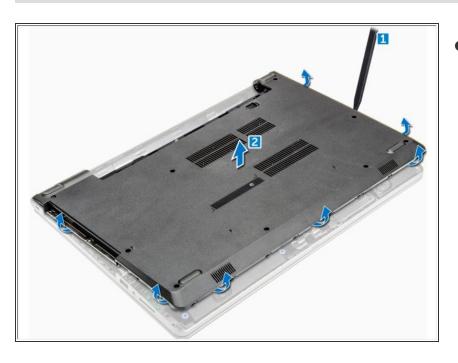

- Use a scribe to pry the edges of the base cover [1].
  - Lift the base cover and remove it from the computer [2].

#### Step 8 — Hard Drive

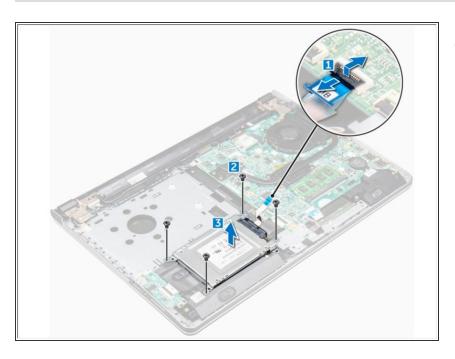

- Disconnect the hard drive cable from the connector on the system board [1].
  - Remove the M2L3 screws that secure the hard drive assembly to the computer [2].
    - Lift the hard drive assembly away from the computer [3].

To reassemble your device, follow these instructions in reverse order.