




HP Envy TouchSmart 4-1215dx Headphone Jack Replacement

A detailed guide on how to remove and replace the headphone jack for the HP Envy TouchSmart 4-1216dx.

Written By: Gabriel Castro

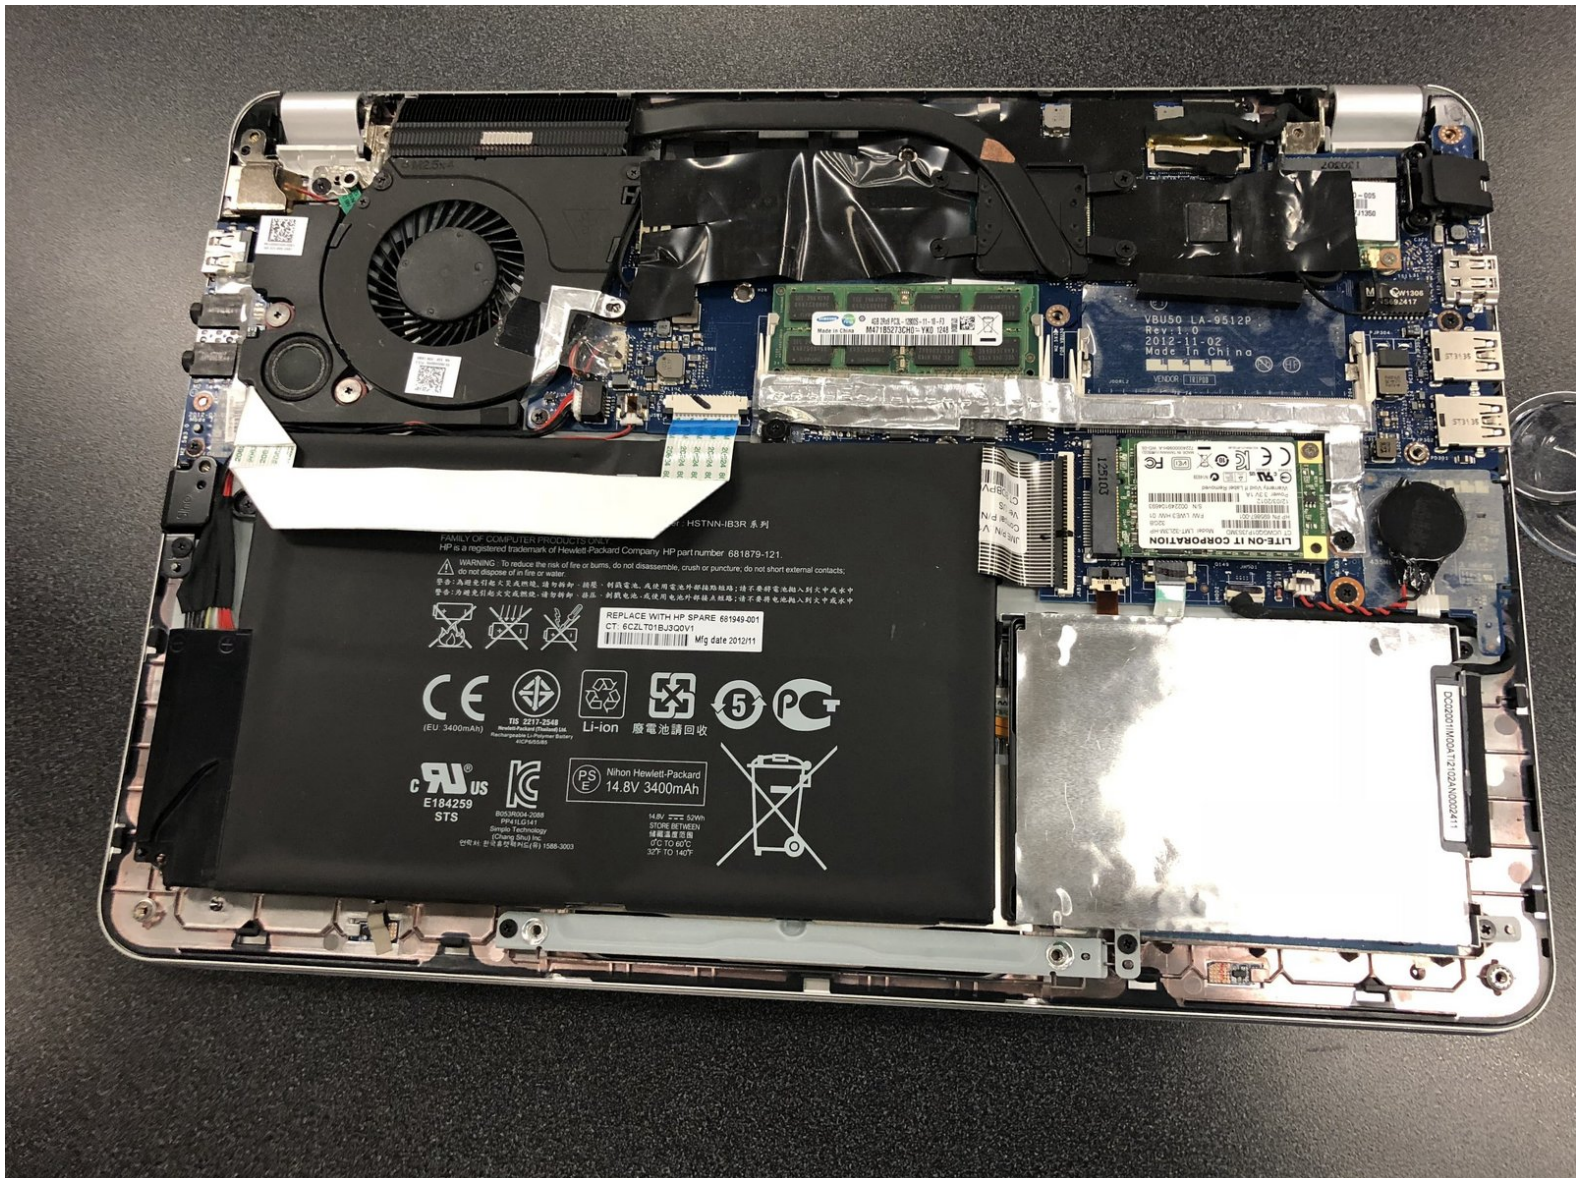

This document was generated on 2020-11-28 06:37:27 AM (MST).

INTRODUCTION



This guide will show you how to replace the headphone jack for the HP Envy TouchSmart 4-1216dx. Before removing the jack, the Back Panel and Fan of the device must be removed.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Back Panel Assembly

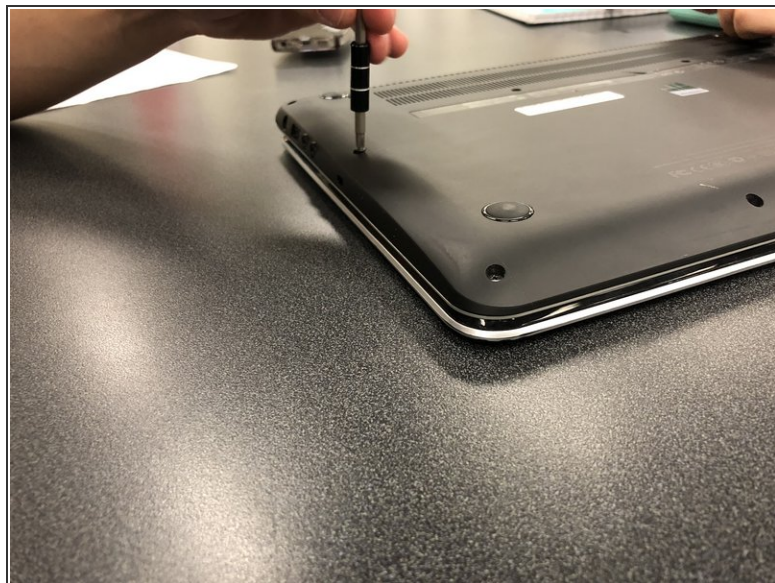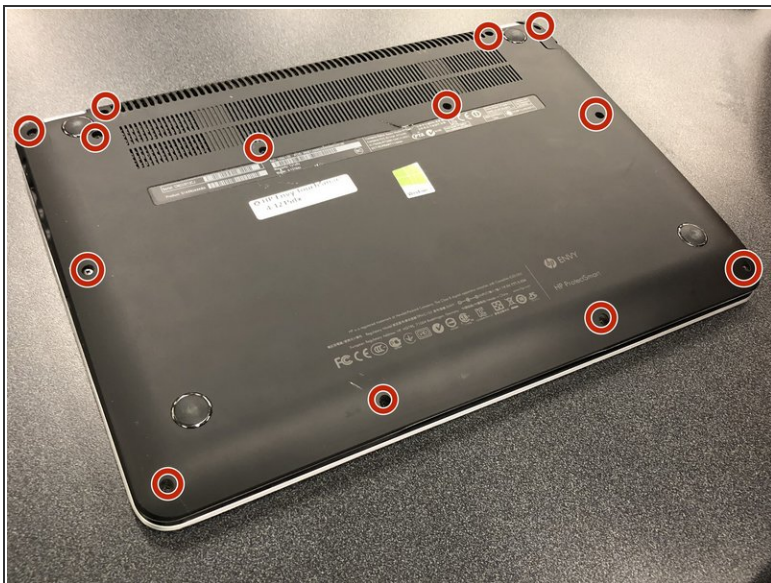


- Remove the thirteen Phillips #0 screws.

Step 2

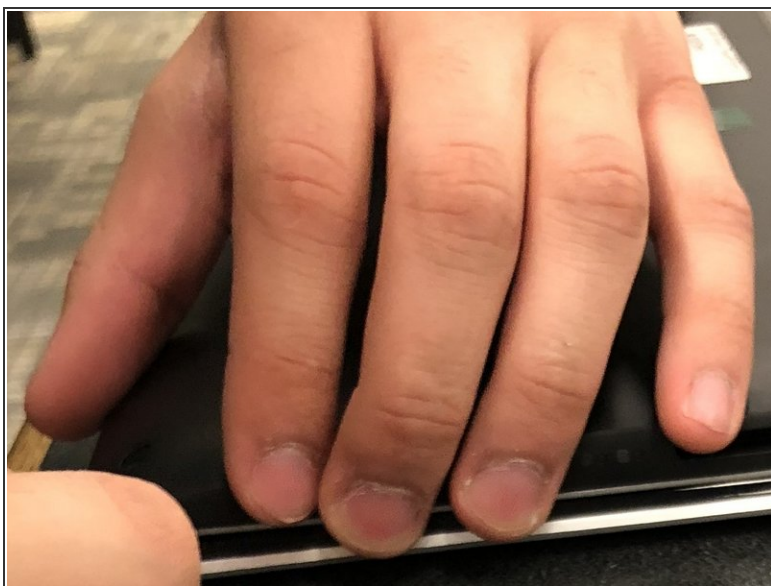



- Pull the panel up and off to remove from the laptop.

Step 3 — Fan

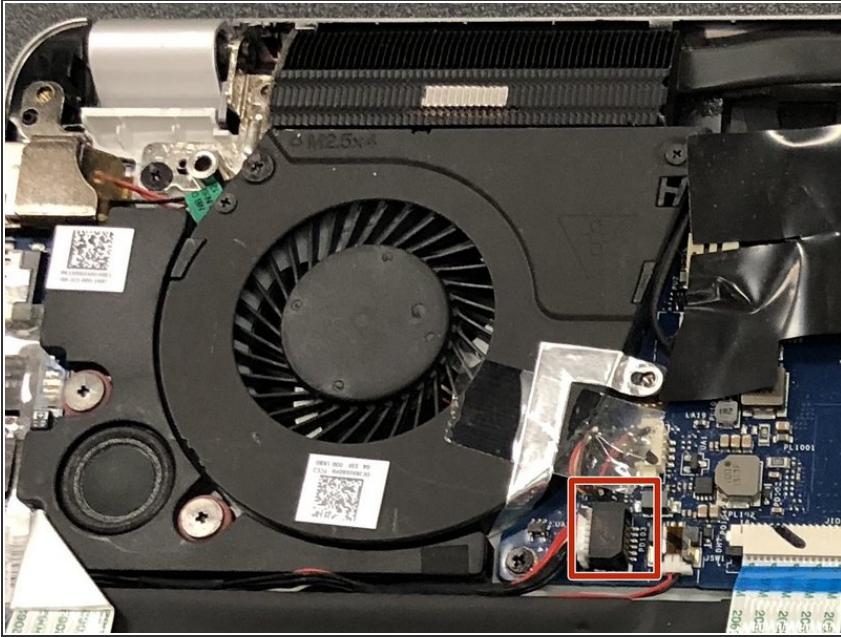

- Unplug the fan from the motherboard.

Step 4

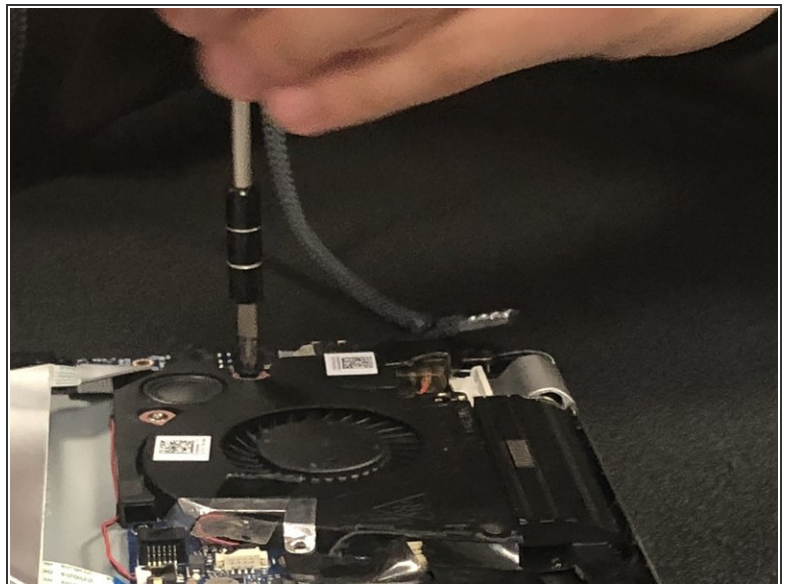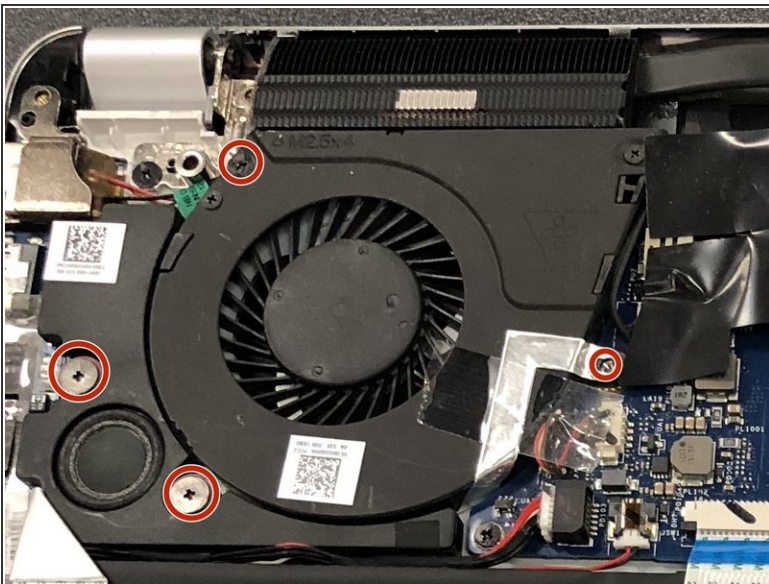


- Remove the four Phillips #0 screws holding in the fan.
- Pull out the fan.

Step 5 — Headphone Jack



- Unplug bus from motherboard

Step 6

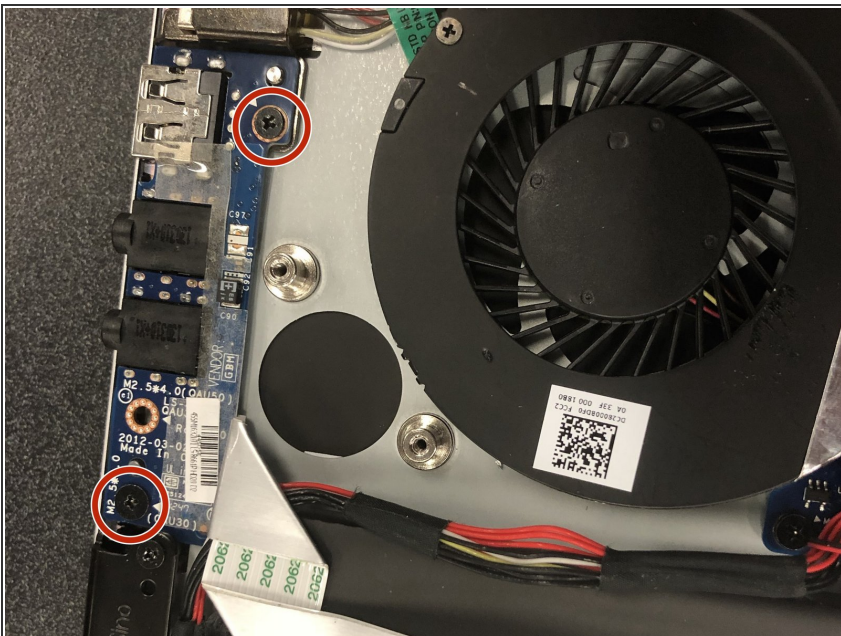

- Remove the two Phillips #0 screws that hold the headphone jack to the laptop.
- Pull out to remove.

To reassemble your device, follow these instructions in reverse order.