




Dragon Touch A1x Plus Speakers Replacement

This guide walks through the process to replace...

Written By: Josh Null

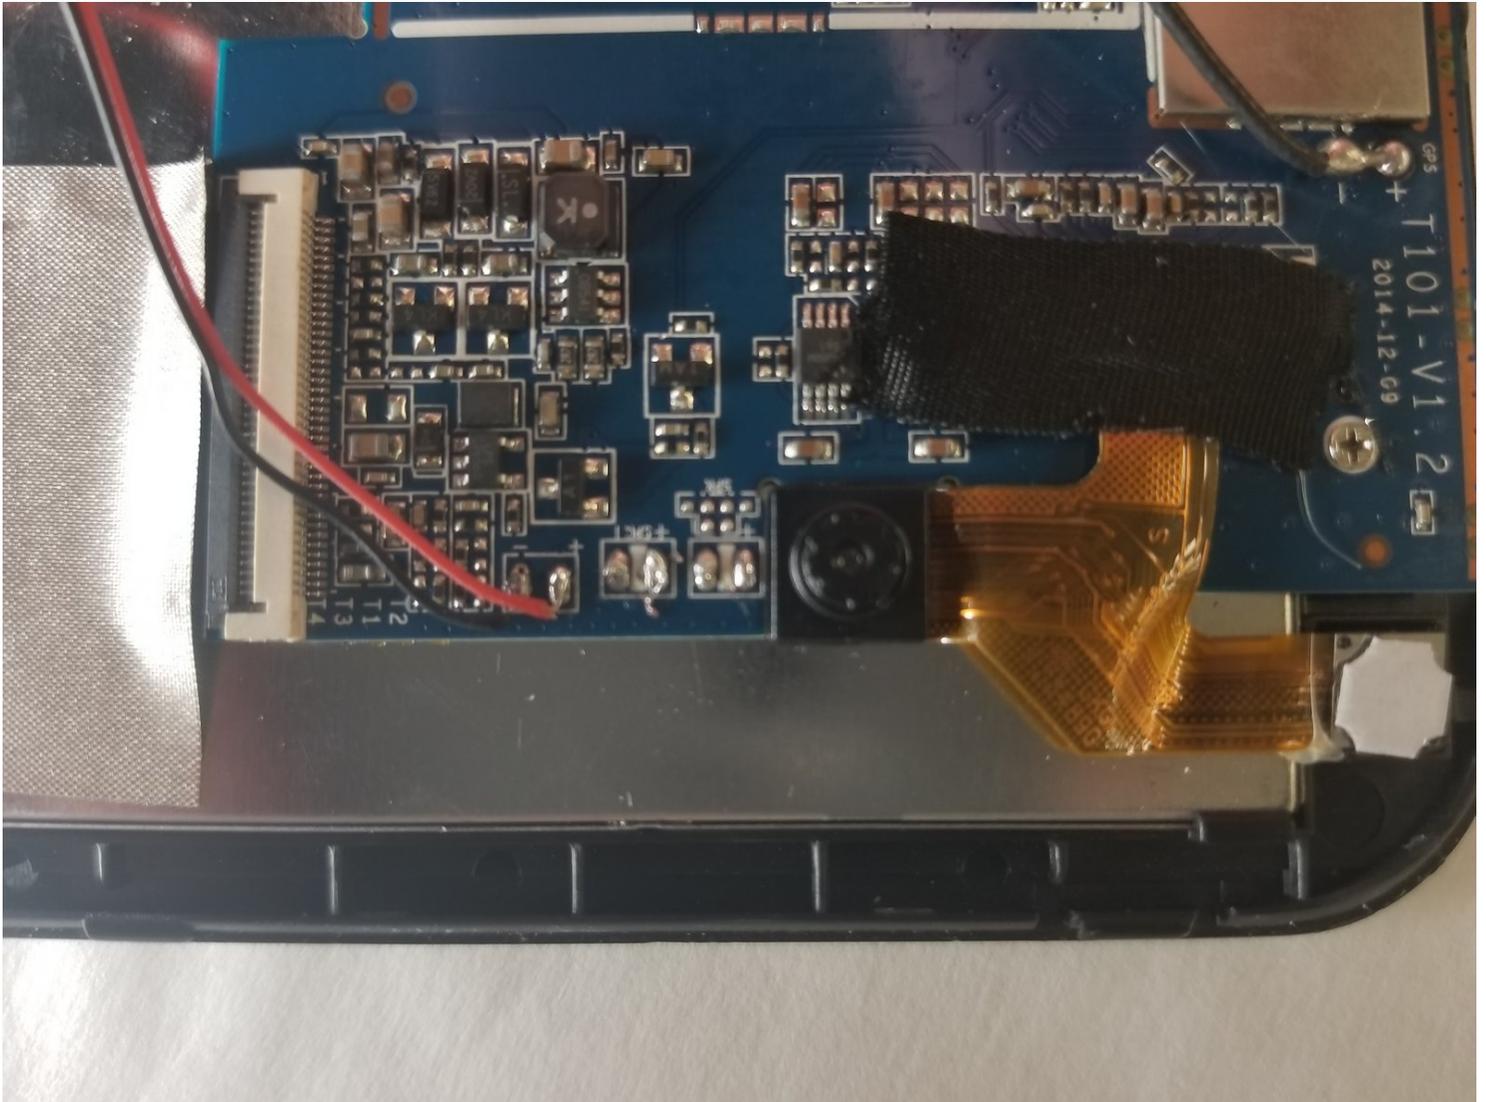

INTRODUCTION

This guide walks through the process to replace the back speakers on the device. For safety reasons, you must first disconnect the battery from the device. After the battery is removed, you can follow the rest of the directions to replace the speakers safely.

TOOLS:


[iFixit Opening Tool](#) (1)

[Plastic Cards](#) (1)

[Hair Dryer](#) (1)


[Soldering Iron 60w Hakko 503F](#) (1)

Step 1 — Battery

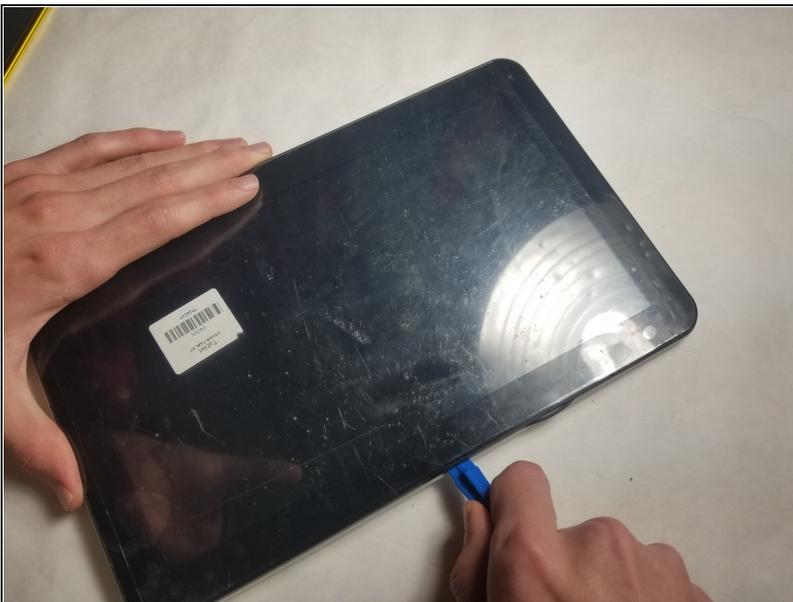


- Insert the plastic opening tool between the white back cover and black front over.

Step 2

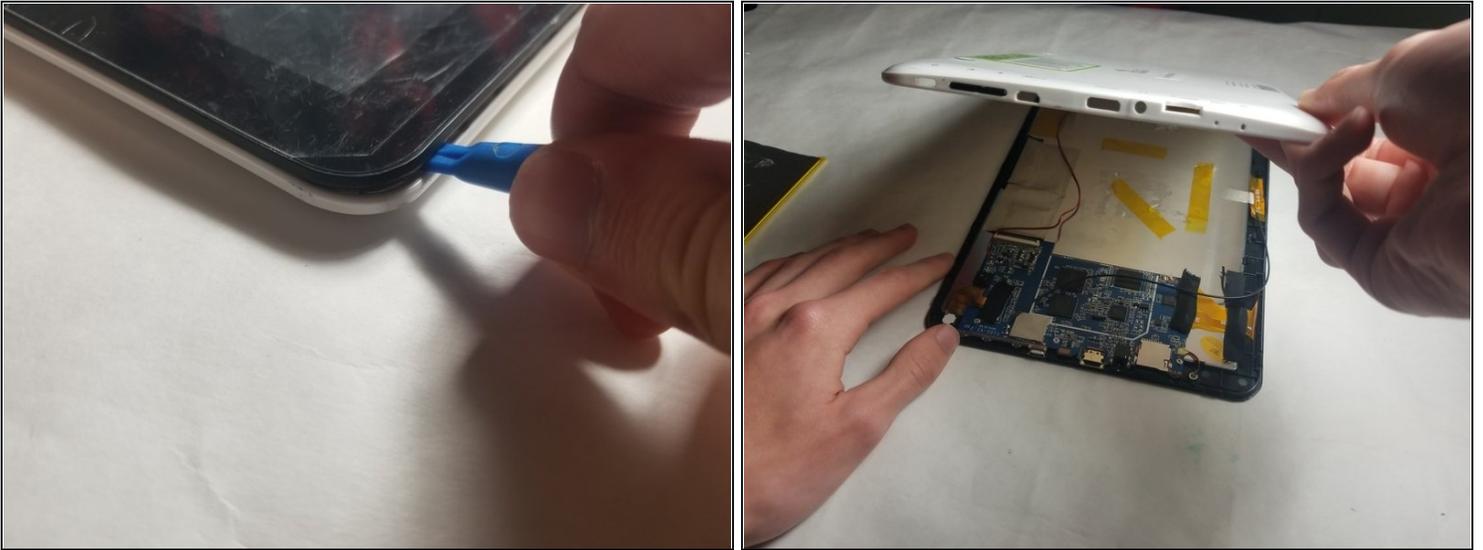

- Slide the plastic opening tool along the edge of the device until back cover is detached and remove the cover.
- ⓘ You may need to pry the back cover off using the opening tool while moving it along the edge.

Step 3

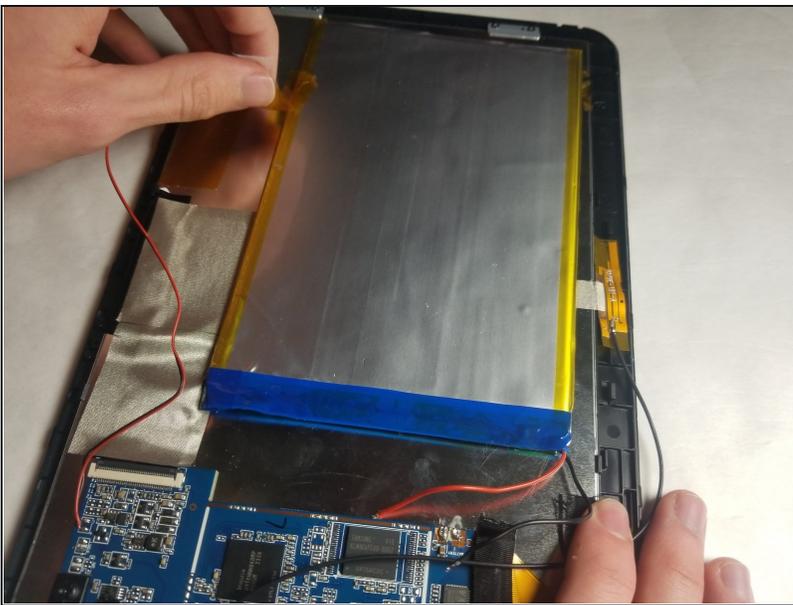

- Remove the yellow tape holding the battery to the device using your fingers or plastic opening tool if necessary.


Step 4



- Use the hair dryer to melt the glue holding the battery to the device.

⚠ Be careful not to overheat the battery as it could cause the battery to combust.


Step 5

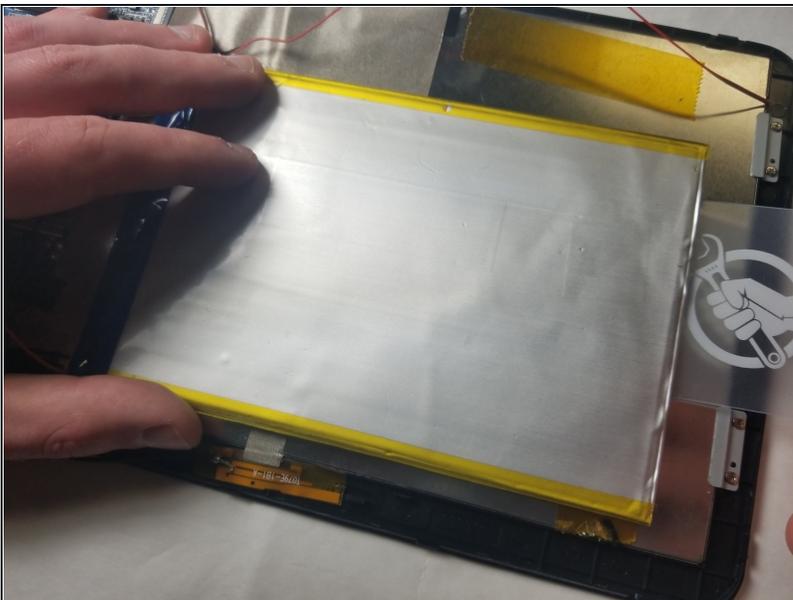

- Insert the [plastic card](#) under the battery and use it to remove the battery from the device.


⚠ Be careful not to deform the battery.

Step 6

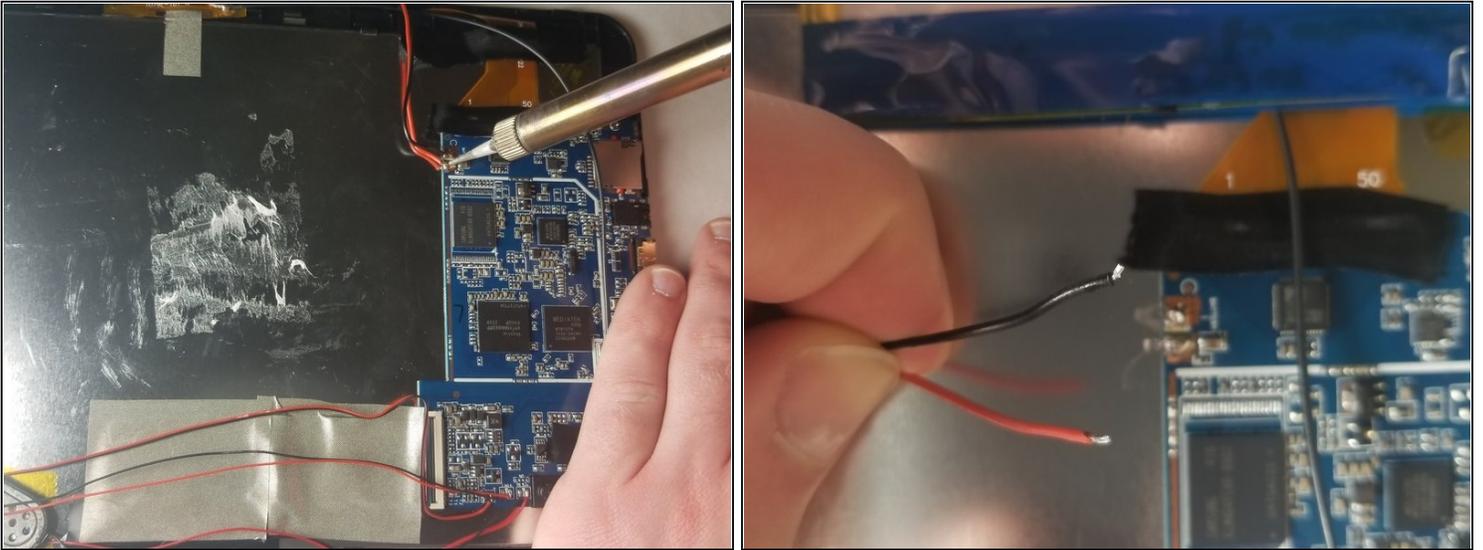

- [Desolder](#) the red and black wires connecting the battery to the motherboard and remove the battery.

Step 7 — Speakers

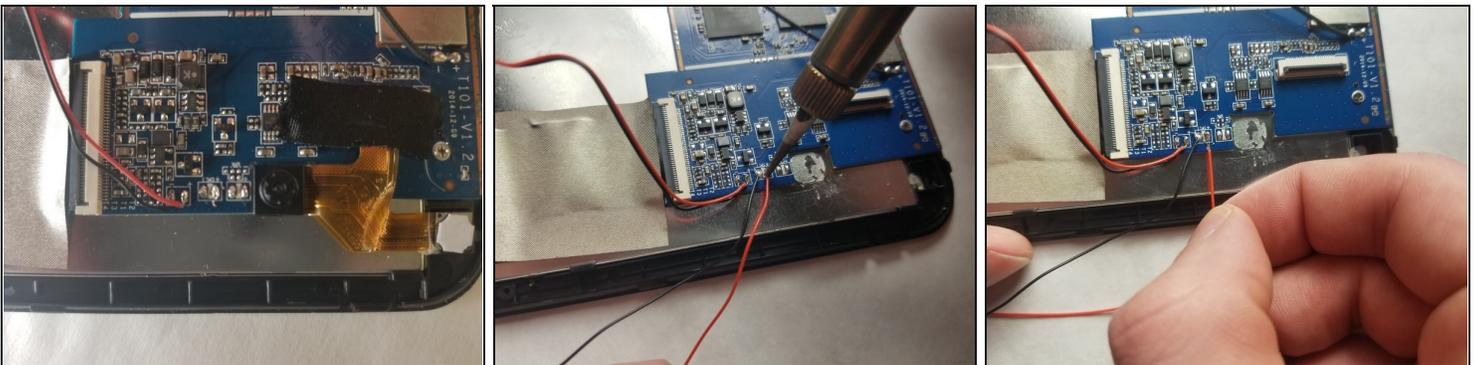

- [Desolder](#) the red and black wires connecting each speaker to the motherboard.

To reassemble your device, follow these instructions in reverse order.