



# Braven BRV-1M Front Speaker Screen Replacement

A broken front screen can cause further damage to the audio components of the device. Refer to this guide on the means of replacing the front speaker plate.

Written By: Erik Oliva



## INTRODUCTION


A crack or damage found on the front screen of the speaker can cause distorted or washed out audio. This guide can be used to learn how to properly remove and replace a broken front speaker screen.



### TOOLS:

- [Spudger](#) (1)
  - [3mm Hex Key \(or Bit\)](#) (1)
-

## Step 1 — Front Speaker Screen

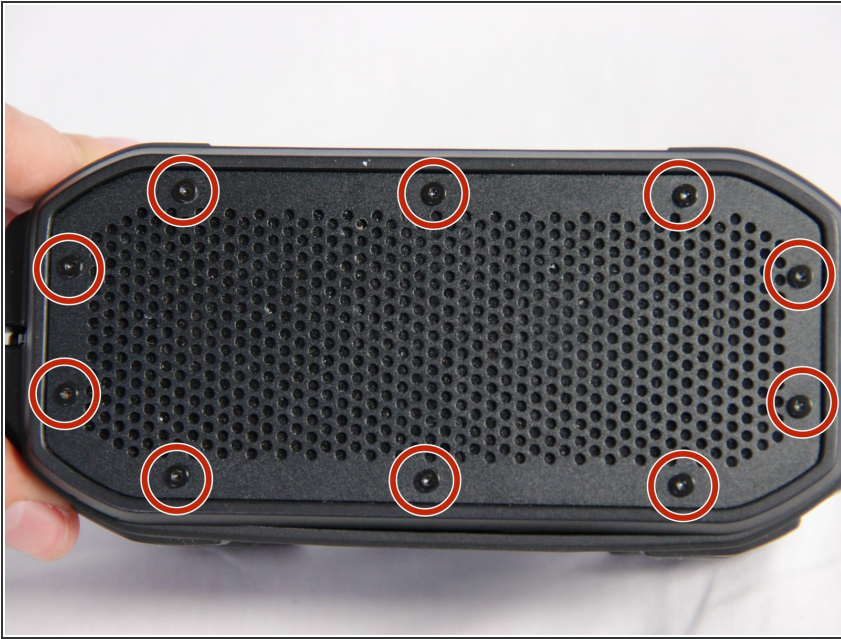

- To remove the front speaker screen, unscrew the 10 Hex 3mm bit type, 9mm long screws surrounding the screen.

## Step 2



- Gently lift away the front screen from the device.
- ⓘ A Plastic Spudger may be needed if one cannot find a proper grip.

To reassemble your device, follow these instructions in reverse order.