




# Black and Decker Toast R Oven Door Replacement

Written By: Jonathan

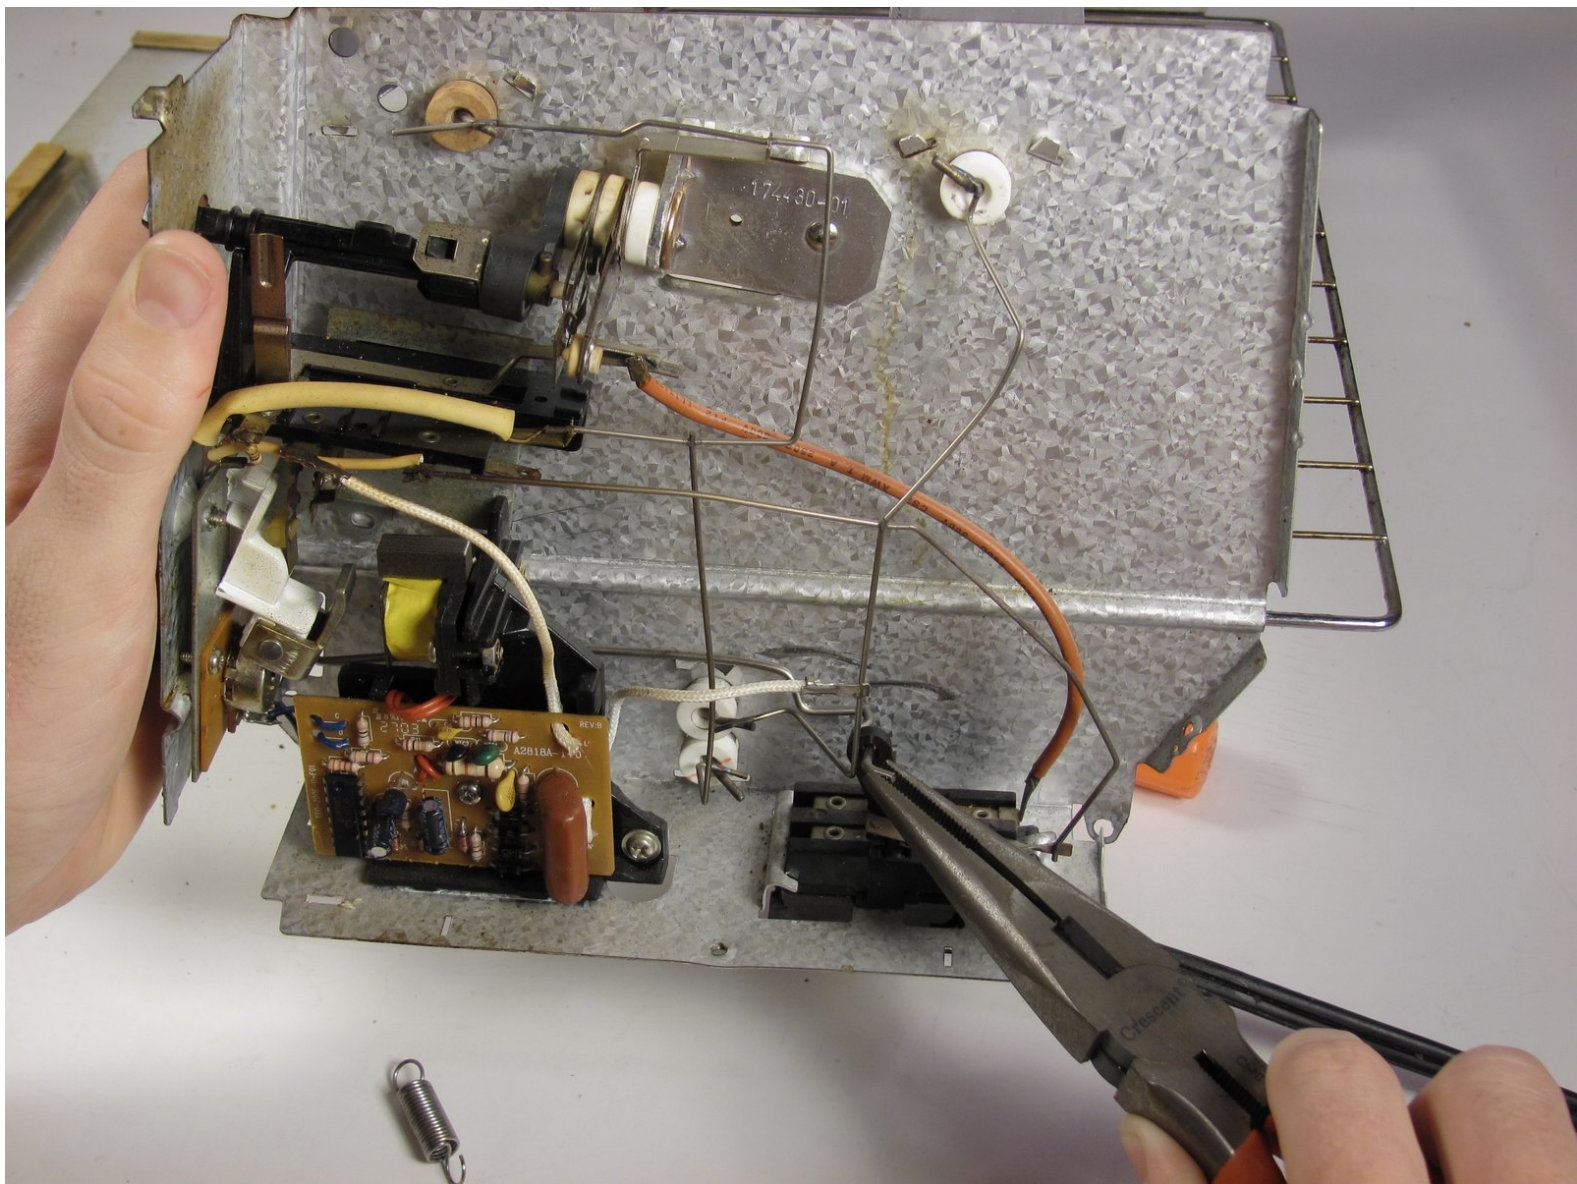

---

## INTRODUCTION

Learn how to manipulate your Black and Decker Toast R Oven in order to clean it, to replace its door-spring mechanism, and/or to replace its damaged door.


---



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [Large Needle Nose Pliers](#) (1)
  - [Smart Wrench](#) (1)
-


## Step 1 — How to clean out a Black and Decker Toast R Oven

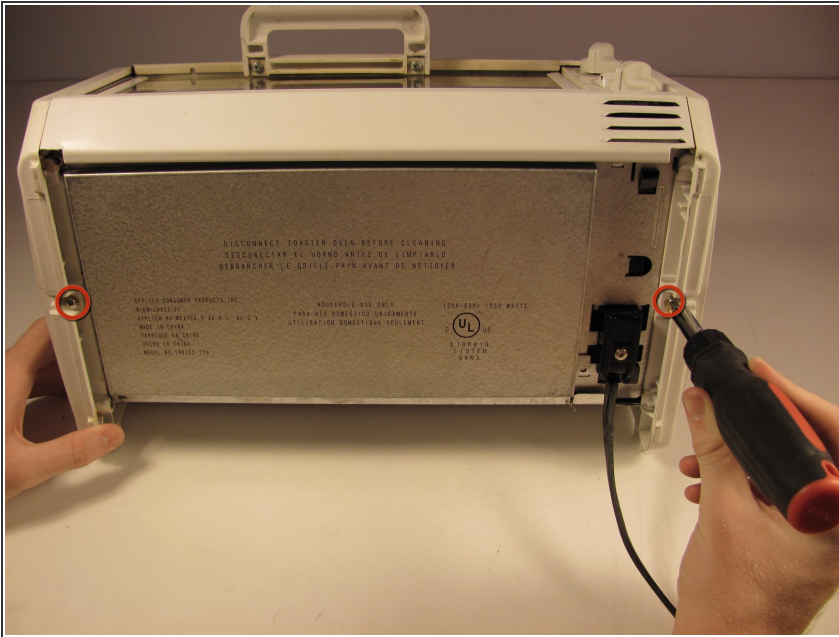

**⚠ Make sure that the toaster is unplugged before you begin.**

- Turn the toaster over with its backside face down.
- Remove the two Phillips #4 1cm screws that attach the side panels.

## Step 2

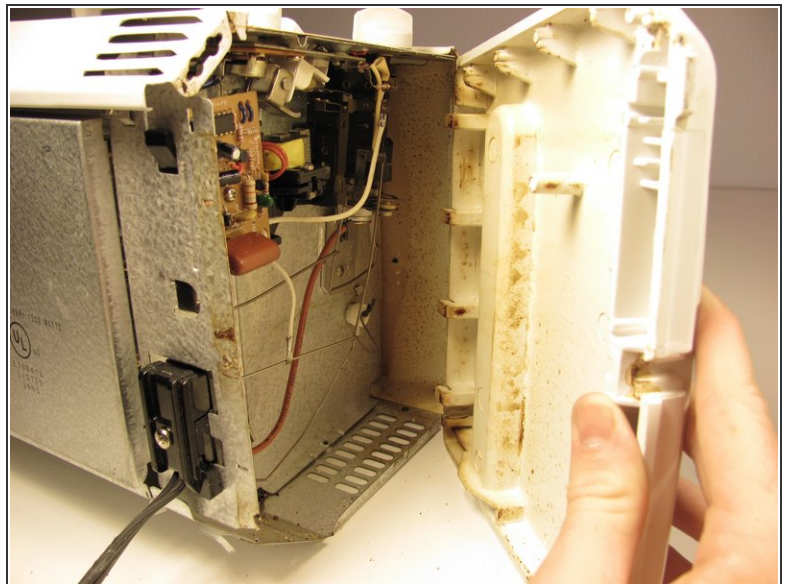


- Pull downwards (towards the bottom of the unit) and outward to remove the side panels.

## Step 3




- Remove the metal vent piece that is below the door.
- ⓘ This should slide off easily once both of the side panels are removed.

## Step 4

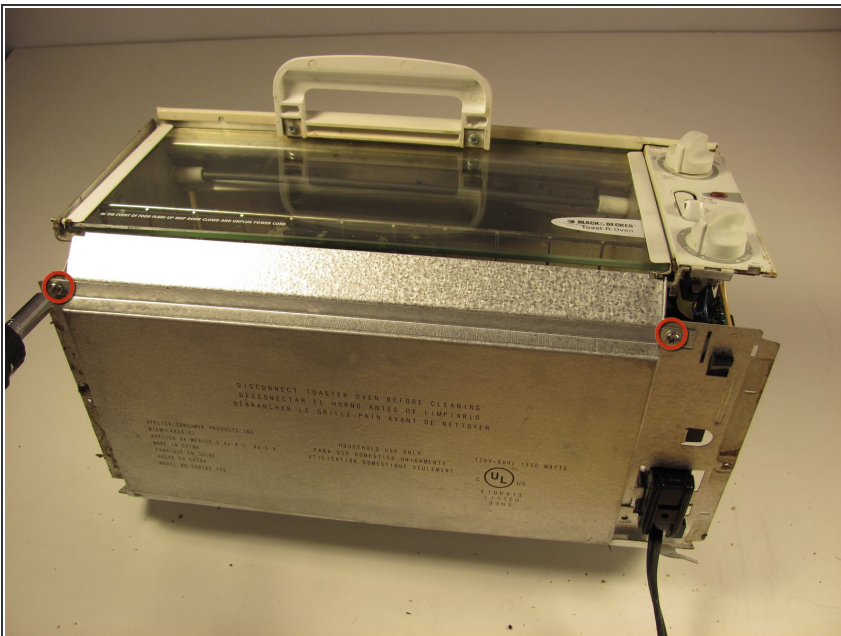


- Remove the two Phillips #4 1 cm screws, which connect the bottom panel to the unit.

## Step 5

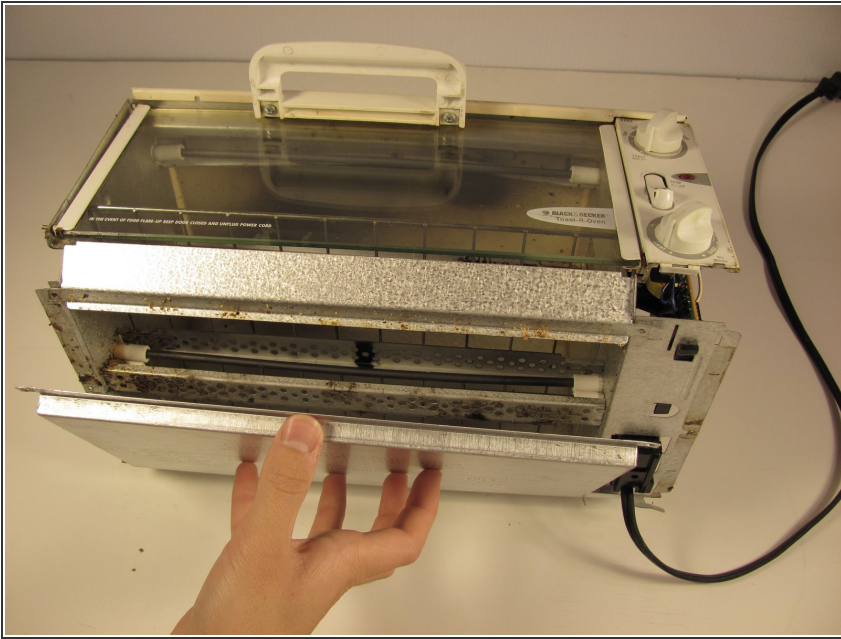


- Remove the crumb tray (the bottom, metal panel) from the toaster unit.

## Step 6

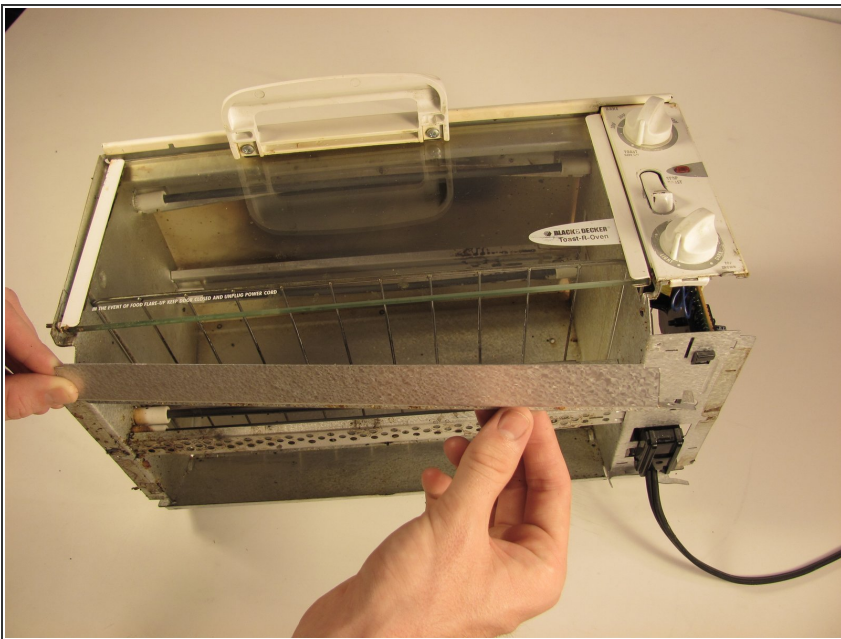


- Remove the aluminum strip from the bottom of unit; this is the piece that is directly under the door.

## Step 7

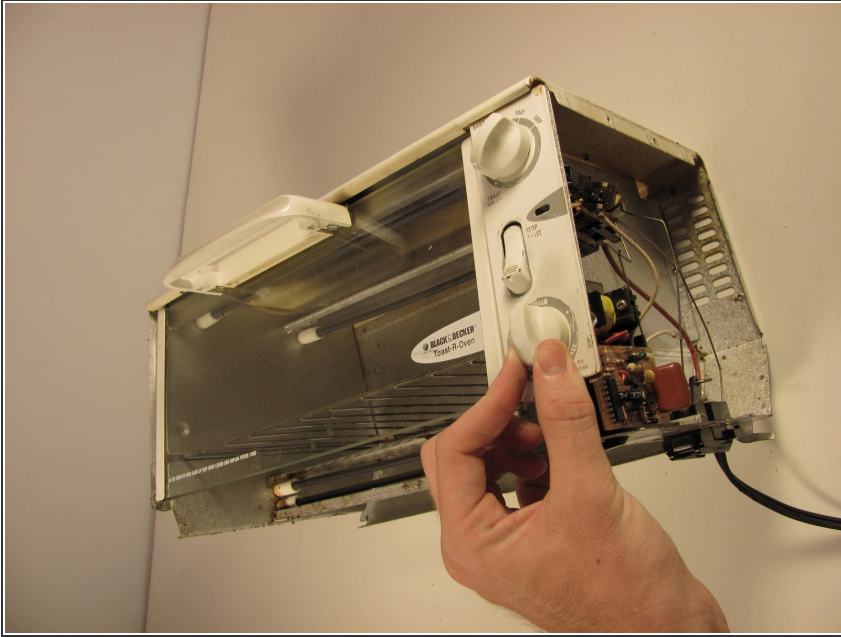


- Remove the knobs by pulling them upward; they should slide right off.
- When placing the knobs back on the unit, make sure the semicircle notch fits correctly in the hole so that the knobs don't fall off.

## Step 8

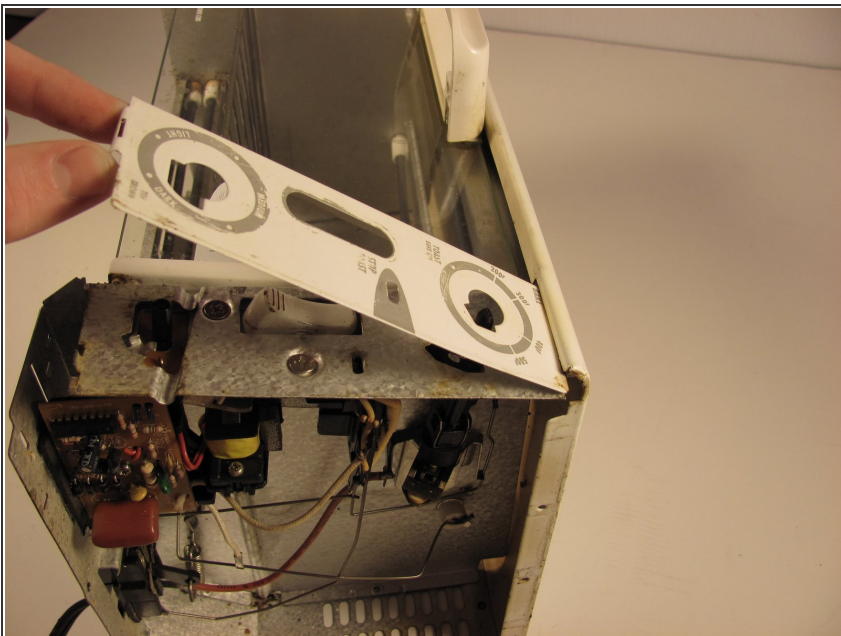

- Unhook the bottom of the the display panel from the toaster unit.
- ⓘ It will be a little tough to pry off, but don't be afraid to be forceful. You can use your hands, or pliers, to bend the metal piece backwards.

## Step 9

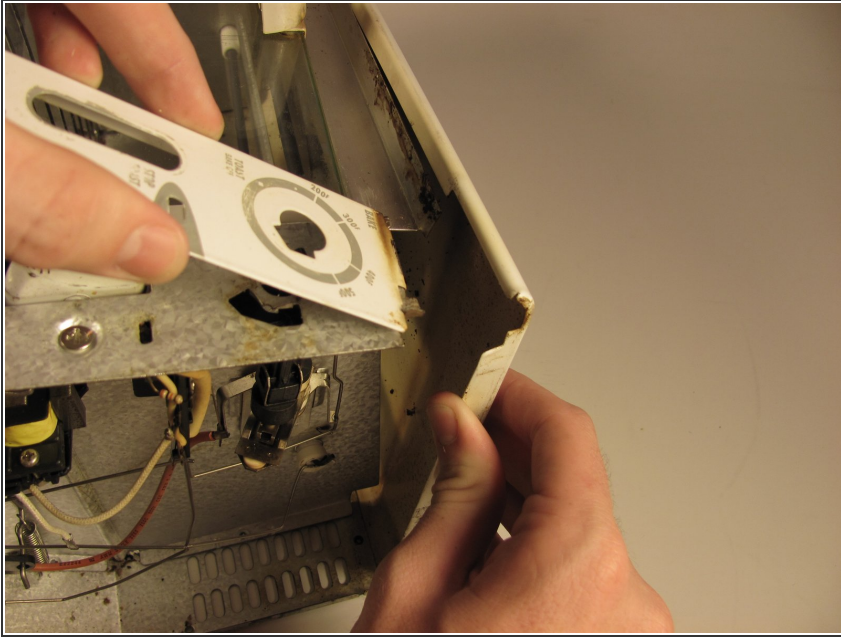

- Begin to detach the back panel from the toaster unit.
- Then, unhook the rest of the display panel.
- ⓘ This will also be a little tough to get off, but don't be afraid to be forceful.

## Step 10




- Finish removing the outside cover by lifting the lid upward.

## Step 11




- Remove the four Phillips #4 1 cm screws from the back of the unit.

## Step 12

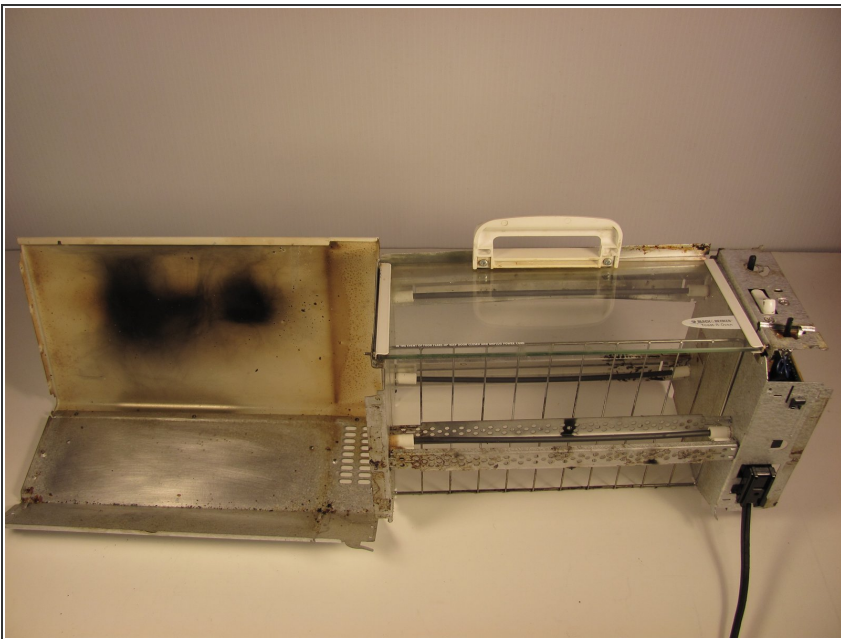



- Now, you can clean the outside units of the toaster oven.

## Step 13

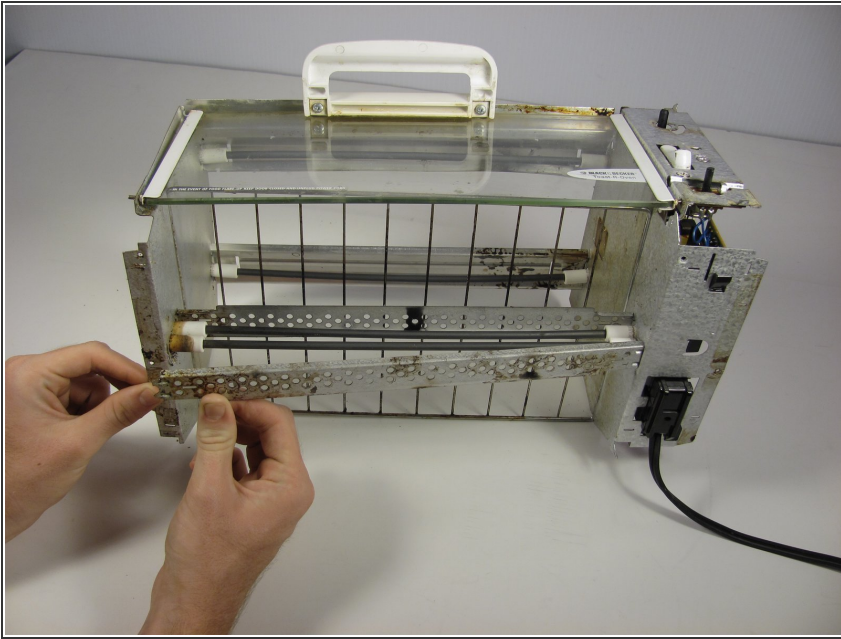


- Remove the the heating coil protection bar from the toaster unit by first pulling out the left side.

## Step 14 — Door Spring Mechanism

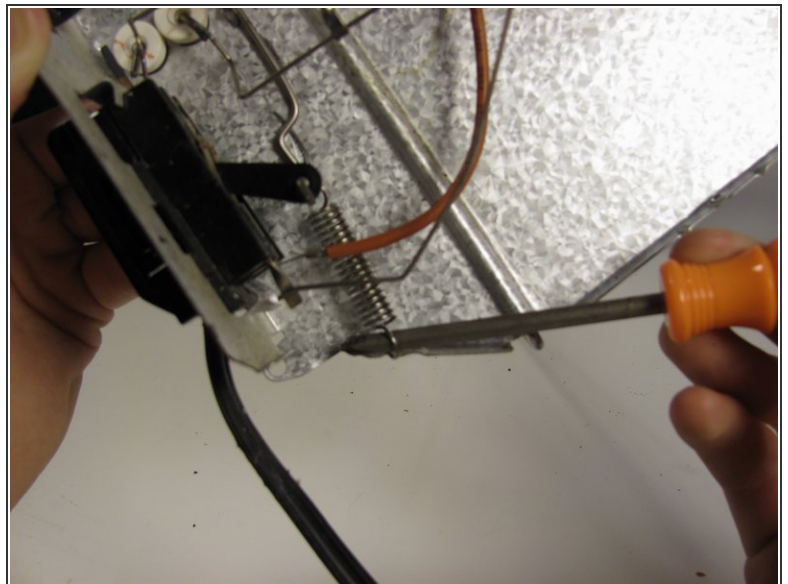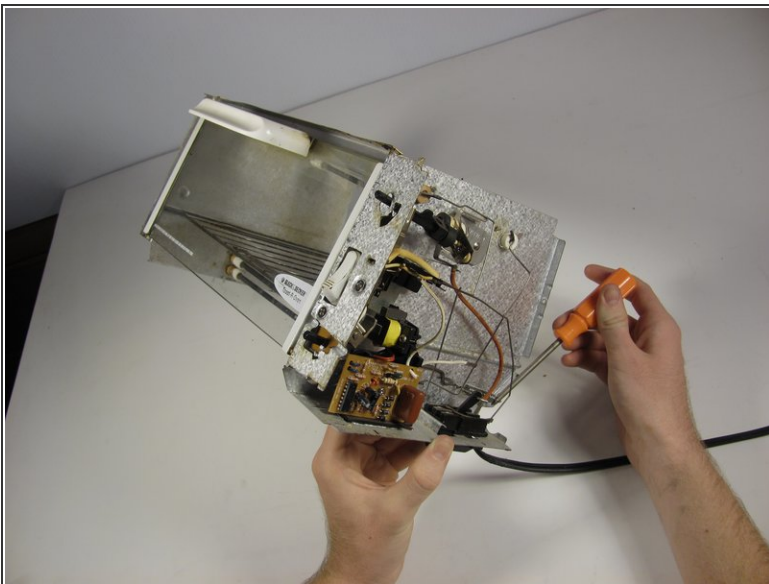



- Use the screwdriver to remove the spring from the unit.
- Place the screwdriver inside the spring loop.
- Pull to unhinge the spring from the back panel.

## Step 15

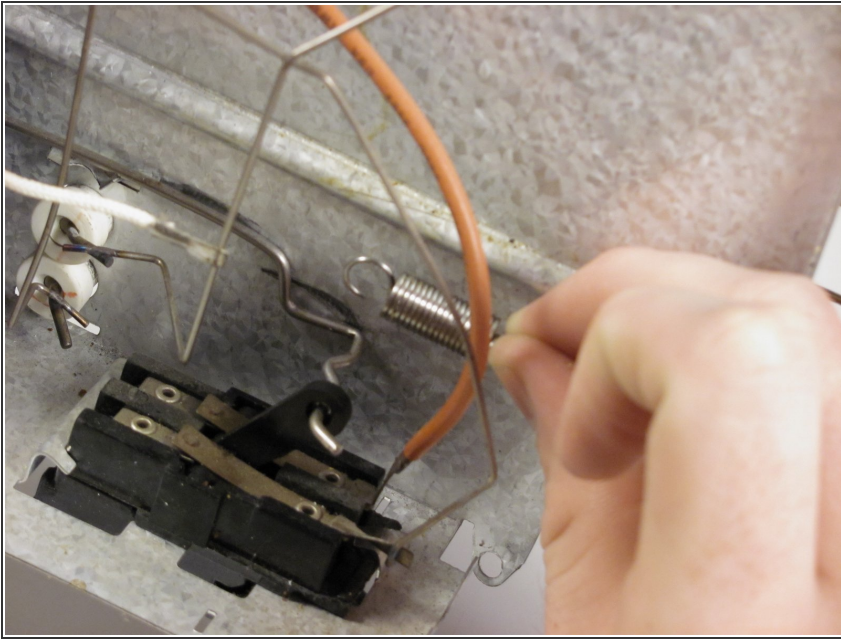


- Remove the spring from the door mechanism by pulling it off.
- Replace the old spring with a new spring.
- ⓘ When inserting a new spring, make sure that the spring is connected to the lower hole of the back panel (the hole above is used for the back casing).

## Step 16 — Door

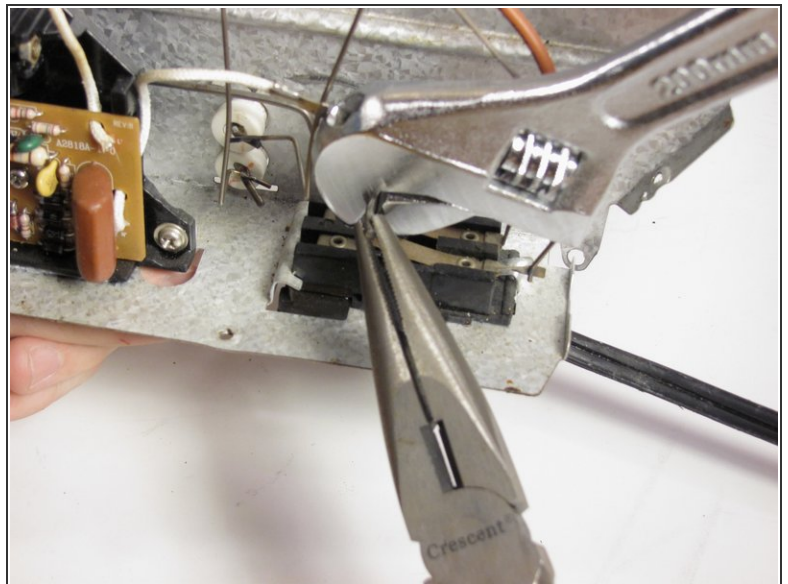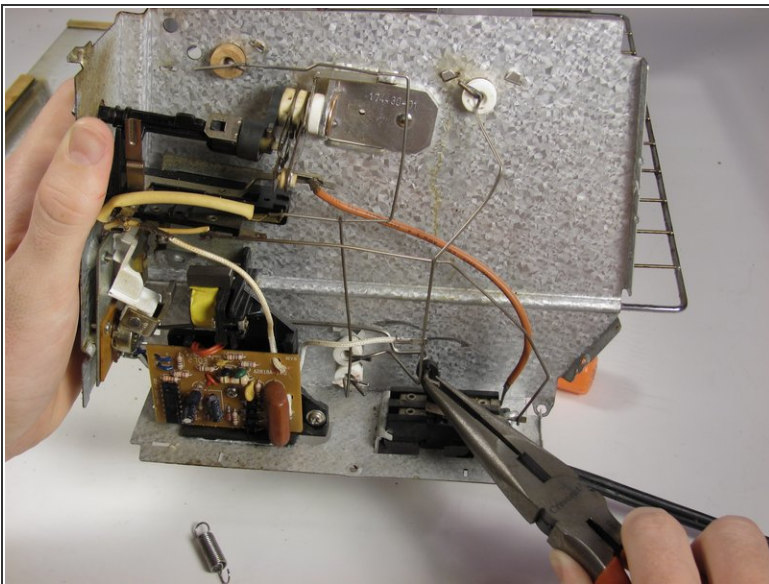


- Use the pliers and a wrench to straighten the outdoor mechanism.

## Step 17

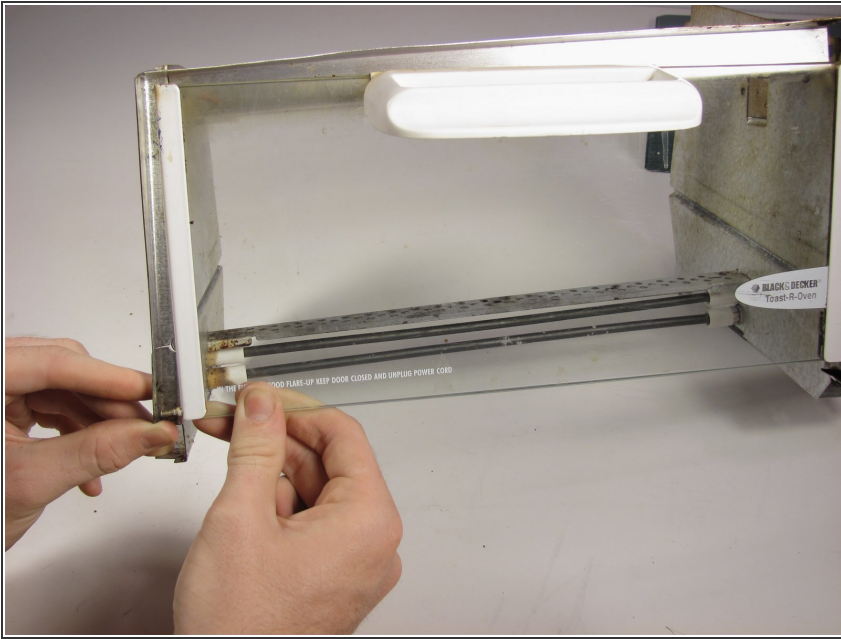


- Take off the left side of the door by separating the unit from the hinge.

## Step 18

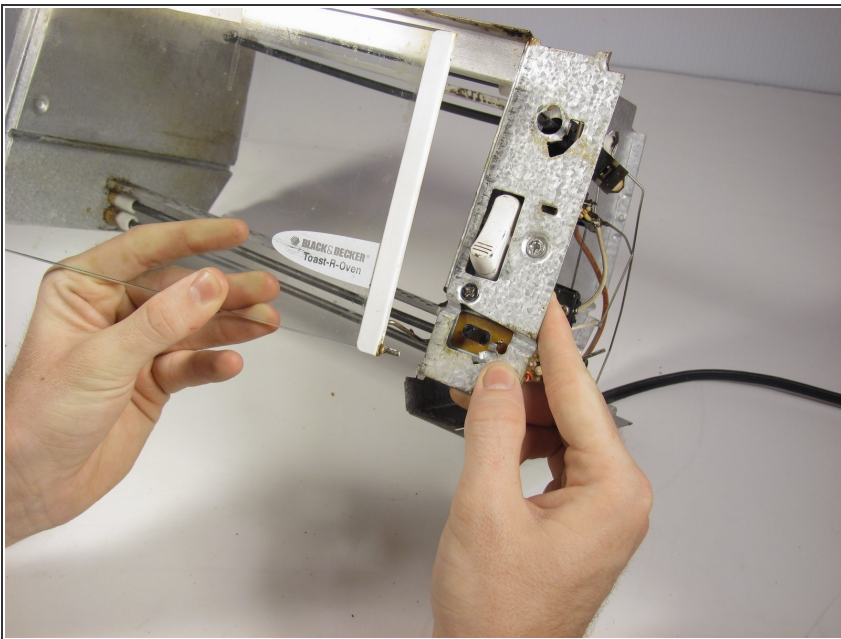


- Separate the right side of the door from the unit as in the previous step.

## Step 19

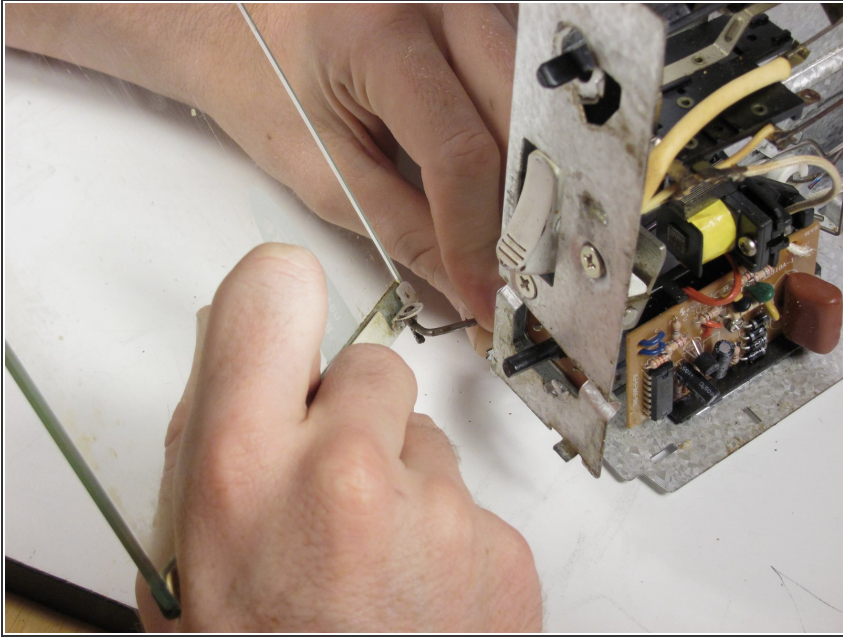

- Separate the door mechanism from the door by tilting the door to relieve the mechanism.

## Step 20

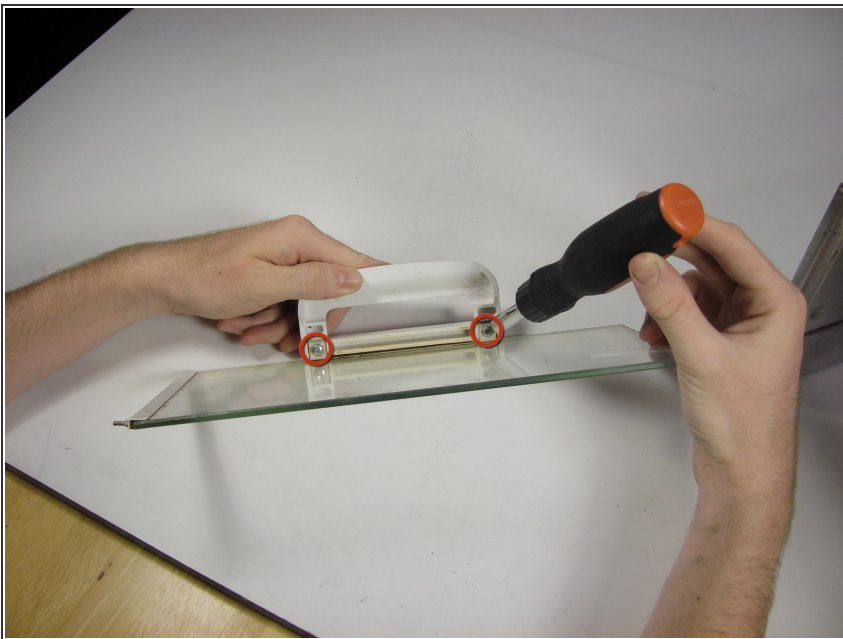

- Unscrew the two door-handle screws.

To reassemble your device, follow these instructions in reverse order.