


Google Home Mini Disassembly

A guide to disassemble Google Home Mini for...

Written By: Mia Sulaiman

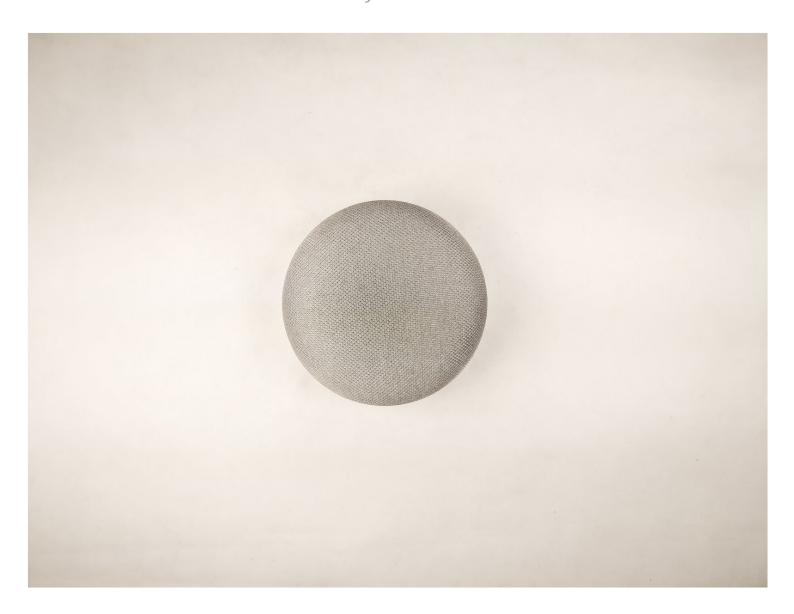

INTRODUCTION


A guide to disassemble Google Home Mini for further repairs.



Tweezers (1)


T6 Torx Screwdriver (1)

Step 1 — Google Home Mini Disassembly

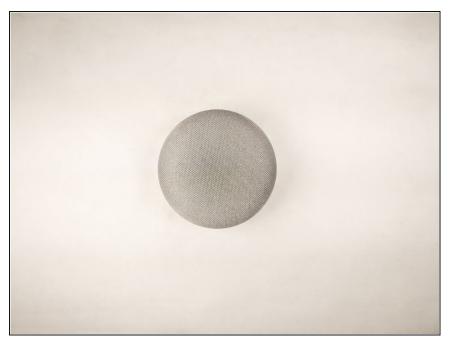

• Place device on a flat surface.

Step 2

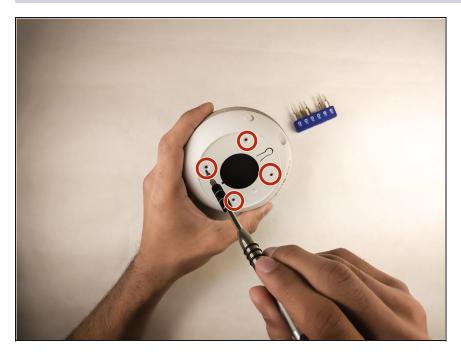

- Remove the rubber bottom as per the <u>Google Home Mini</u> <u>teardown guide</u>.
- Remove the four 7mm T6 Torx screws from the bottom.

Step 3




- Remove the lower half of the device.
- ⚠ Be careful as a black ribbon cable connects the two halves together.

Step 4



- Using a pair of tweezers, unlatch the Zero Insertion
 Force (ZIF) fastener that connects the ribbon cable to the board.
- i Flip up and push the ZIF fastener towards outside of the lower case to loosen it.

Step 5

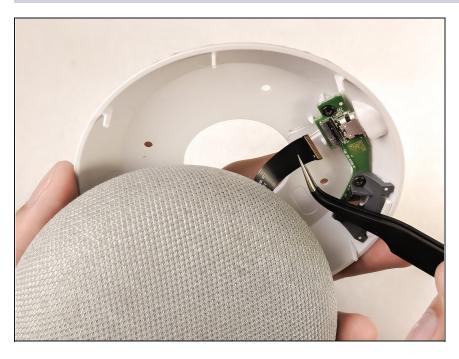

• Pull the ribbon cable off.

To reassemble your device, follow these instructions in reverse order.