



Fix Game Disc Tray wont open.

How to fix a CD/DVD tray not opening.

Written By: Matt Weatherly



TOOLS:

- [Tweezers](#) (1)
 - [Paper Clip](#) (1)
 - [Paper Towels](#) (1)
-

Step 1 — Fix Game Disc Tray wont open.



- Manually eject the CD/DVD Drive

Step 2



- There will be a gap in the middle of the CD/DVD tray. You will see 2 pulleys with a rubber belt. Use tweezers to carefully take the belt out.

Step 3



- Take a Damp paper towel and clean any dust and dirt off of the rubber belt.

Step 4



- Using the tweezers again carefully put the rubber belt back in. I have found it easier to get it around the big pulley first then on the small pulley.

Step 5



- At this point turn the system on and test it. I have done this on several system that the drive just would not open and it has solved the issues.

Enjoy your Original Xbox again! Please sent me a message if you have any questions about the steps.