

Dyson DC08 brush replacement

Dyson DC08 disassembly and carbon brush replacement.

Written By: christophe





- tournevis cruciforme (1)
- TR10 Torx Security Screwdriver (1)



New Item (1)

Step 1 — Motor







- Take off the dust cannister.
- Remove the suction hose.

Step 2







Extract the front filter.



- Extract the rear filter.
- Unscrew the first Torx screw.

Step 4



Optionally, remove the rear filter cover.





- Unscrew the 2nd Torx screw.
- Disassemble the suction hose connection (optional)


Step 6







- Remove the wheels.
 - (i) The wheels clip onto the body of the appliance.
- Unscrew the 4 Torx screws (two in the right and two on the left).

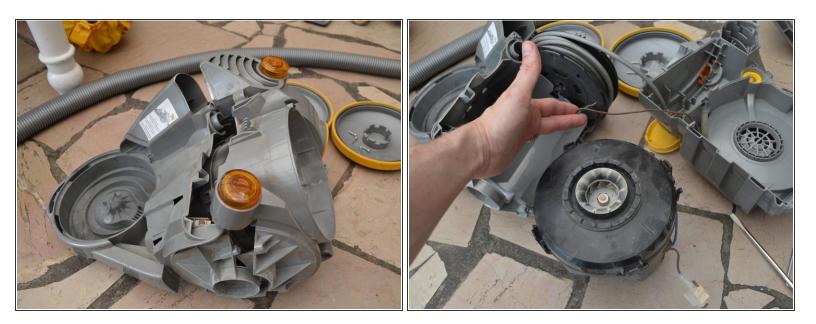

- Open the body of the vacuum cleaner.
- You can use a multimeter to test the switch.
- Disconnect the brown wire at the switch.
- Disconnect the blue wire at the single connector by the motor.
- Lift out the motor.





- Open the motor housing (4 clips).
- Remover the motor from its plastic casing.
- Disconnect the motor.

Step 9







disassembly of 2 engine coals (1 Phillips screw per coal)







- Worn brush.
- Opening the brush housing.

Step 11








Extraction of the brush and spring.





Removing the brush.

Step 13

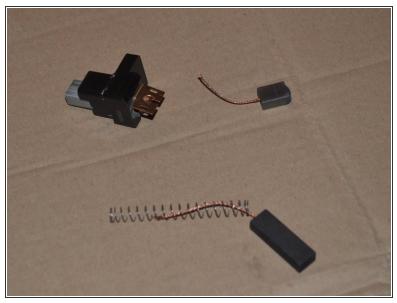



Soldering a new brush.

To reassemble your device, follow these instructions in reverse order.