


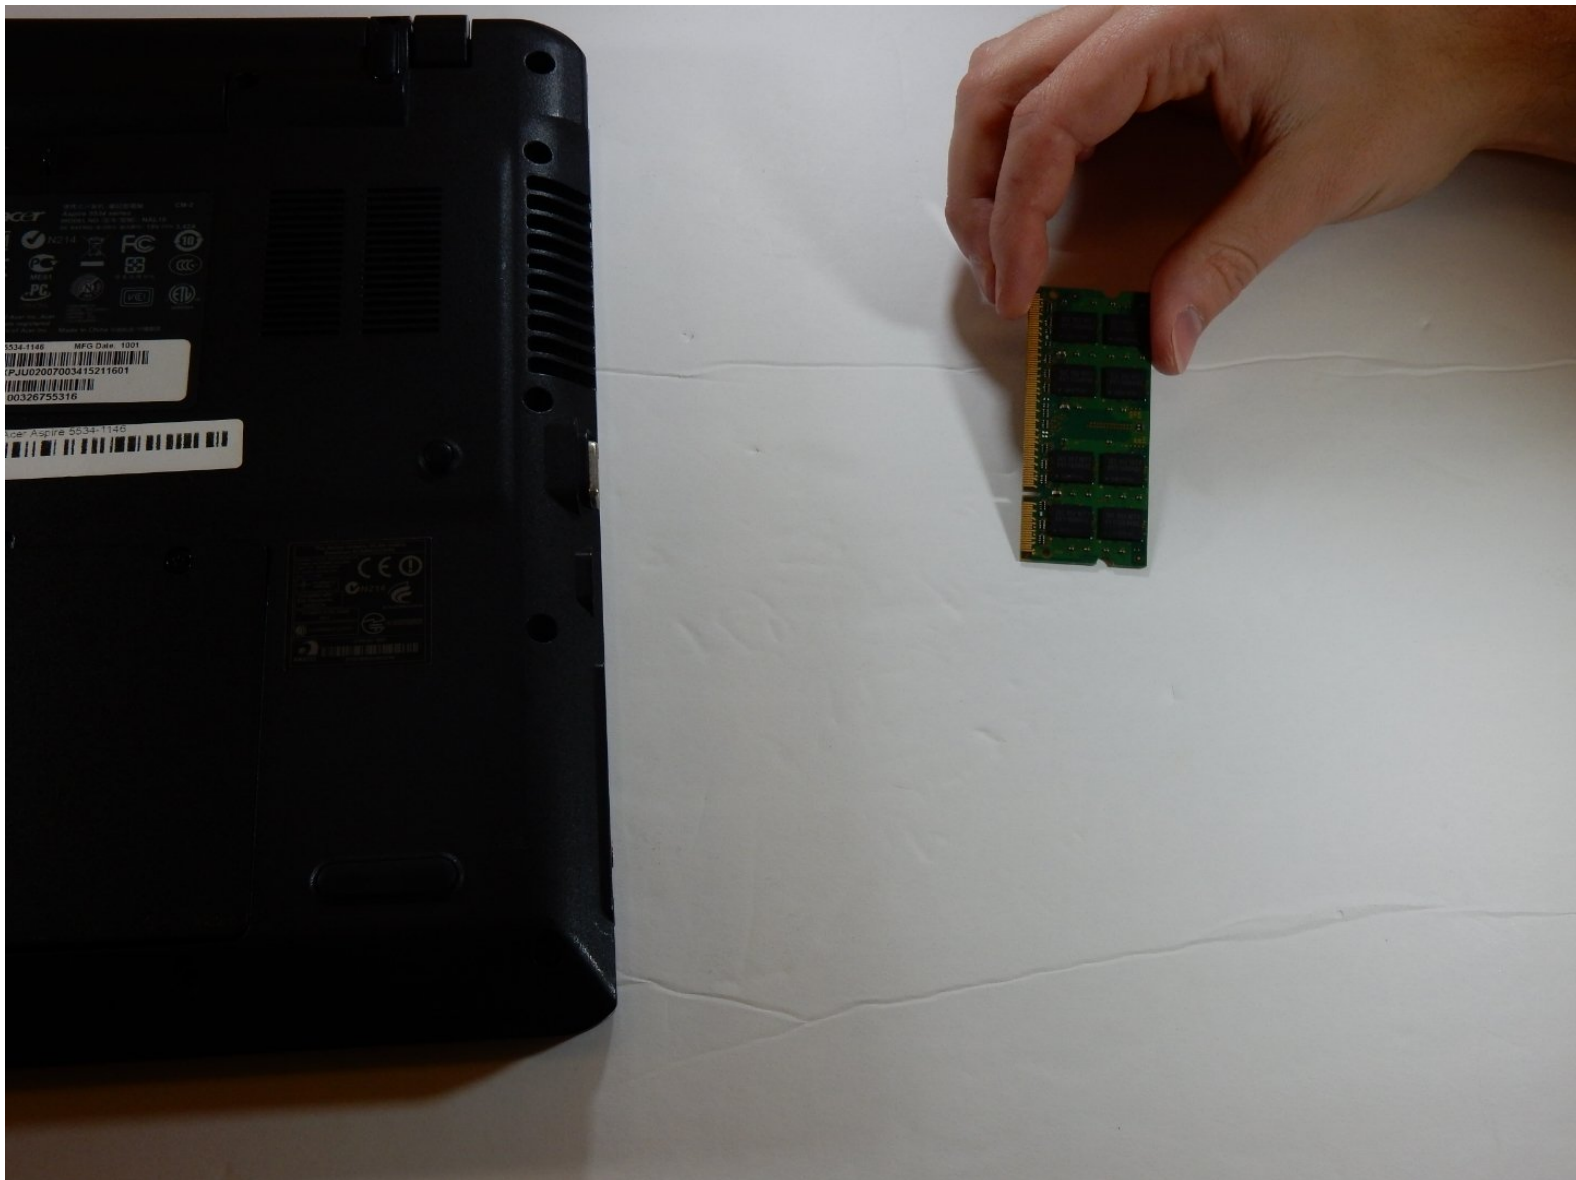

# Acer Aspire 5534-1146 RAM Replacement

Guide to removing the RAM from the Acer Aspire 5534-1146.

Written By: Trysten buckley



# INTRODUCTION

Replacing the RAM is a simple repair that takes 5 minutes. Make sure laptop is off and unplugged.



## TOOLS:

- [Spudger](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — RAM





- Flip laptop over to show the bottom and lay flat.
- Use the Phillips #0 screwdriver to remove the the two .8 centimeter screws from back plate.

## Step 2



- Use the blue colored spudger to loosen plate.
- Lift plate out of place.

## Step 3

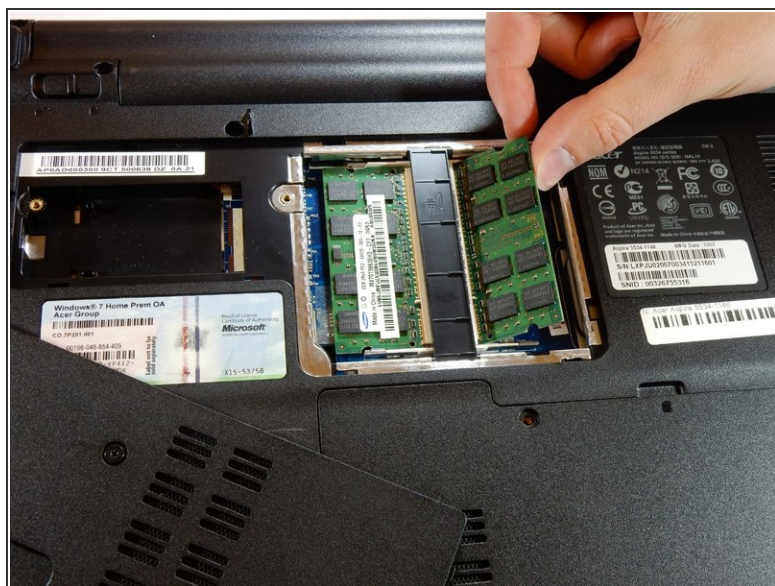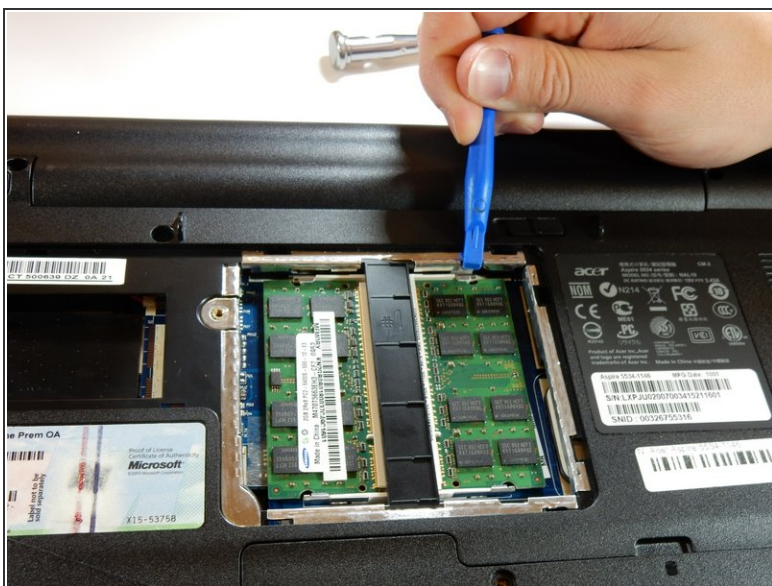

- Push down the marked bracket with an opening tool or plastic spudger.
  - Move the Ram at a 45 degree angle and pull out of place.
- ⚠ Do not bend the RAM stick brackets when removing the RAM.

To reassemble your device, follow these instructions in reverse order.