



HP LaserJet P1102w Printer Feed Spring Replacement

How to remove paper feeder spring in a HP LaserJet P1102w .

Written By: Jerome Etten



INTRODUCTION

These steps will show how to replace the paper feeding housing and the spring from the housing.

TOOLS:


- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Printer Feed Spring




- Flip printer on its back to expose the paper feeder housing.

Step 2

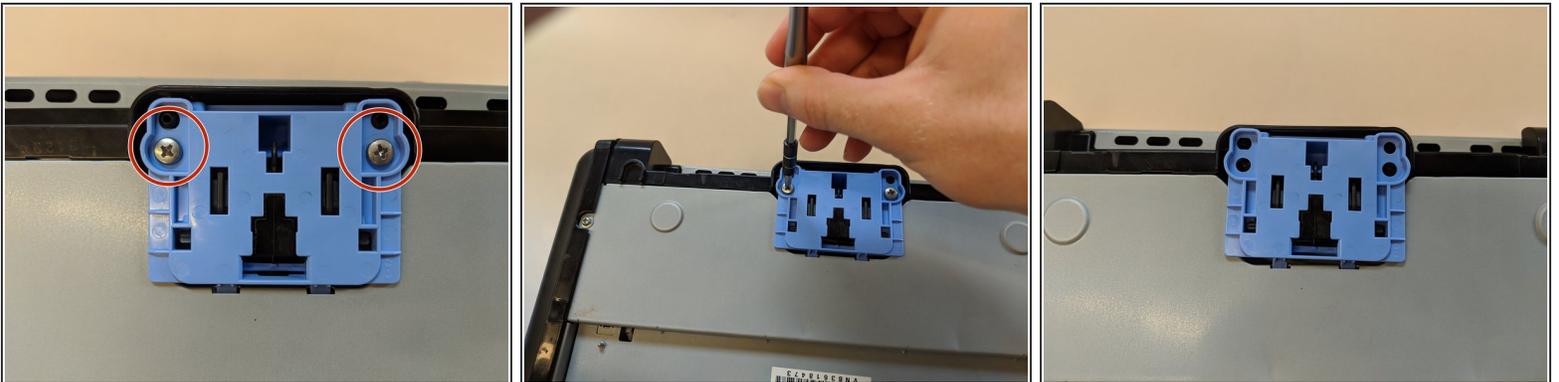


- Remove both of the #1 Phillip 10 mm screws.

Step 3

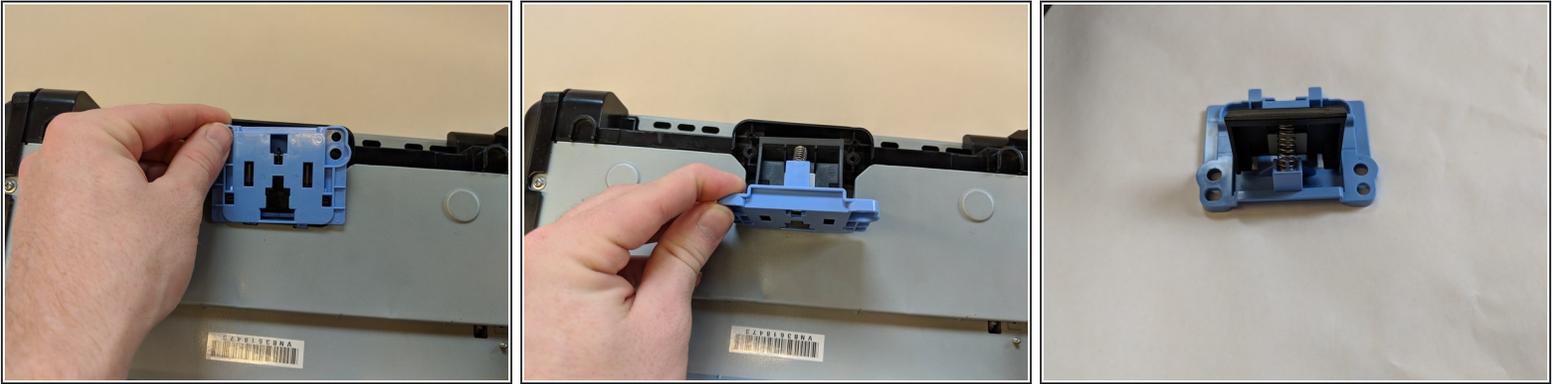

- Now with both screws out, remove the paper feeding housing from the printer.

Step 4

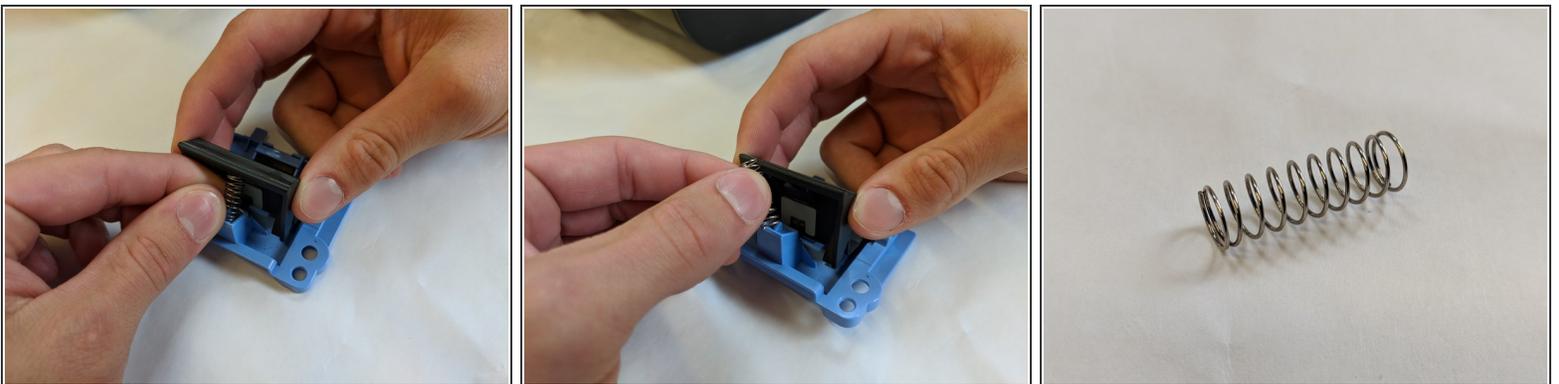

- Compress and remove spring from paper feed housing.

To reassemble your device, follow these instructions in reverse order.