



# Asus ROG G750JM-BS17N23 Keyboard Replacement

Keyboard not working or responding on Asus ROG G750JM-BS17N23.

Written By: Tanner



---

# INTRODUCTION

Use this guide if your keyboard is not operating correctly or to clean out any stuck keys.



## TOOLS:

- [Phillips #2 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Soundbar/speaker



- Using a plastic opening tool, remove the two rubber tabs circled in red.

## Step 2



- Remove both of the 8mm Phillips #2 screws from these slots where the rubber caps were removed.

### Step 3



- Slide the tab to pop the battery out of its holder.
- Pull the battery out of its slot.

### Step 4



- Remove the three 4mm Phillips #2 screws from the open battery slot as shown.
- Remove the two 5mm Phillips #2 screws.



## Step 5



- Begin prying up on the plate as shown in the pictures.

## Step 6




- Detach the single connector using your plastic opening tool.
- Remove the speaker bar.

## Step 7 — Keyboard



- Remove the six 8mm Phillips #2 screws to remove the display.
- Remove the two 4mm Phillips #2 screws.

## Step 8

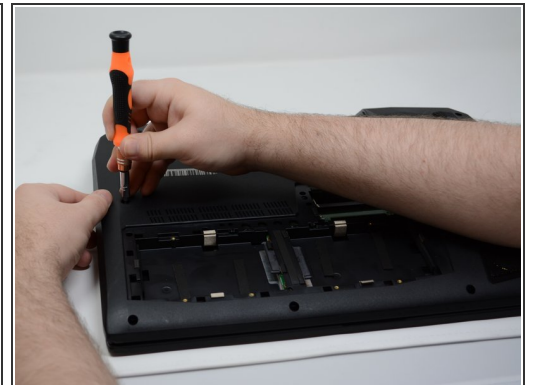


- Remove the four rubber tabs circled in green on the bottom of the device.
- Remove the five 4mm #2 Phillips screws.
- Remove the two 8mm #2 Phillips screws.
- Remove the two 1cm #2 Phillips screws.

## Step 9



- Pry around the keyboard on the top topside as shown to remove it from shell.

## Step 10

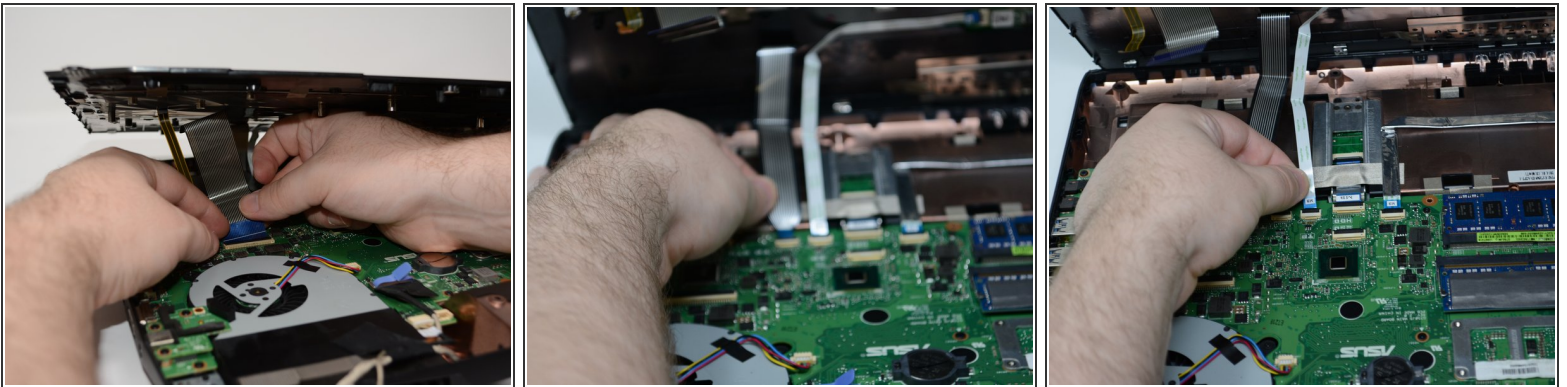

- Remove the four connectors using your pry tool.
- The keyboard will now be separated from the main computer.

To reassemble your device, follow these instructions in reverse order.