

Shark Flex DuoClean Power Cord Replacement

How to replace the power cord of the Shark DuoClean HV391 vacuum.

Written By: caoimhe



INTRODUCTION

Wire cutting and soldering may be required for more info on soldering visit the iFixit soldering guide.



TOOLS:

- T10 Torx Screwdriver (1)
- T15 Torx Screwdriver (1)
- Flush Wire Cutters (1)
- Soldering Iron (1)


Step 1 — Dust Cup





- Squeeze Dust Cup release buttons on either side of the component.
- Pull up to release Dust Cup.


Step 2 — Power Cord

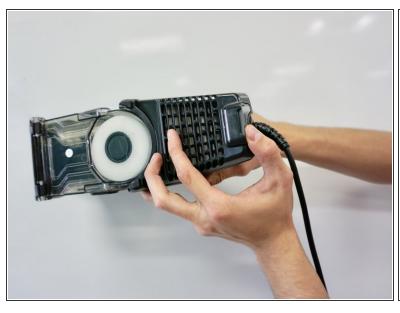



Remove the pre-motor filter with your hands.

Step 3

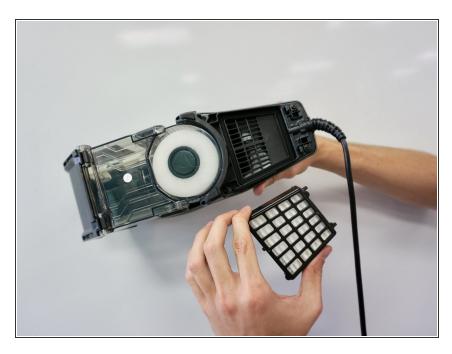


Remove the post-motor filter.

Step 4



 Remove the two 15 mm screws by twisting counterclockwise with the T10 Torx screwdriver.

Step 5

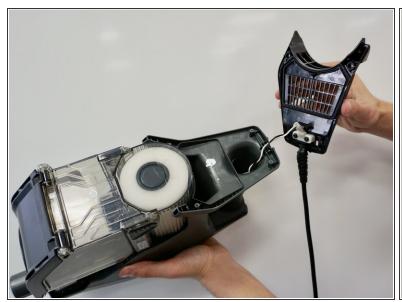



- Remove the two 12 mm screws by twisting counterclockwise with the T15 Torx screwdriver.
- To fully remove the power cord, cut the wires using a wire cutter.
- (i) For reassembly, use the soldering guide in the Introduction.

To reassemble your device, follow these instructions in reverse order.