


Dell XPS 15 9550 Battery Replacement

How to replace the battery of the Dell XPS 15 9550.

Written By: Brandon Schmidt

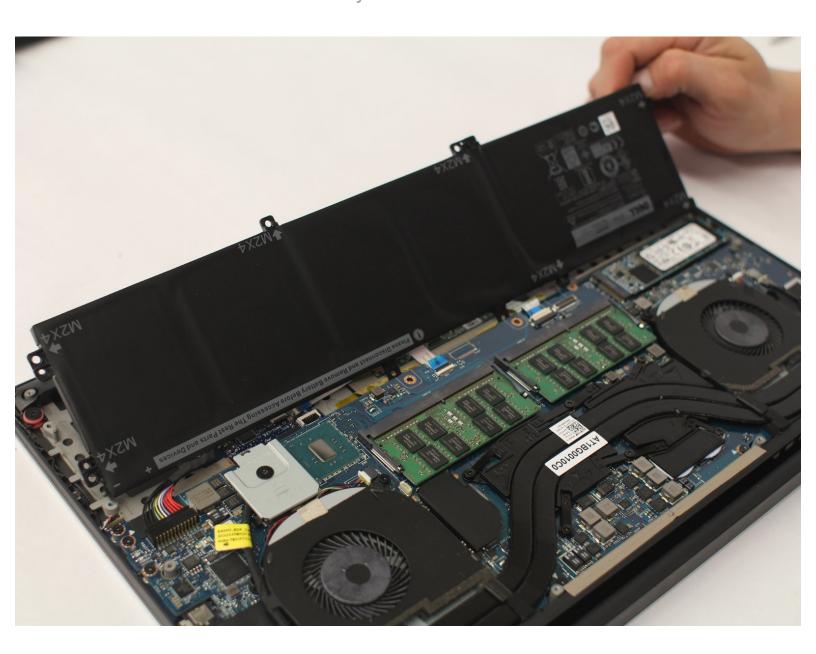

INTRODUCTION

If your Dell XPS 15 9550 laptop will not power on without being plugged in or not hold a charge for an extended period of time, you may need to replace your battery.



TOOLS:


- T5 Torx Screwdriver (1)
- Phillips #00 Screwdriver (1)



PARTS:


- Dell XPS 15 9550 and 5510 Precision 56
 Wh Replacement Battery (1)
- Dell XPS 15 9550 and 5510 Precision 84
 Wh Replacement Battery (1)

Step 1 — Back/Underside Panel

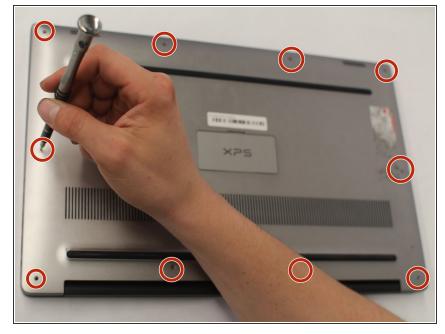

- Turn the laptop upside down.
- Make sure the laptop is turned off.
- Use a T5 Torx Screwdriver to remove the ten 3 mm long screws from the perimeter of the back of the laptop.

Step 2

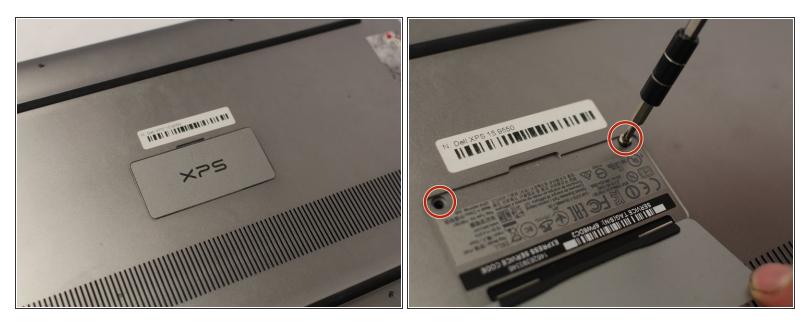

- Open up the information panel door (on the middle of the back side).
- While holding the door open, use a Phillips #00 Screwdriver to remove the two 10 mm long screws.

Step 3








 Carefully lift the 2 corners of the back panel close to the hinge upwards, to release the whole panel.

Do not force the panel off. If it does not come off easily, try to use a plastic spudger where it is stuck.


Step 4 — Battery

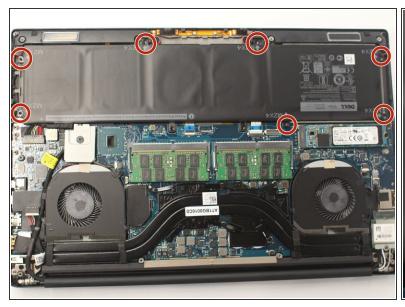



- Use a Philips #00 Screwdriver to remove the seven 3 mm long screws from the perimeter of the battery.
- (i) Each screw is labeled "M2X4" with an arrow pointing to the screw.

Step 5

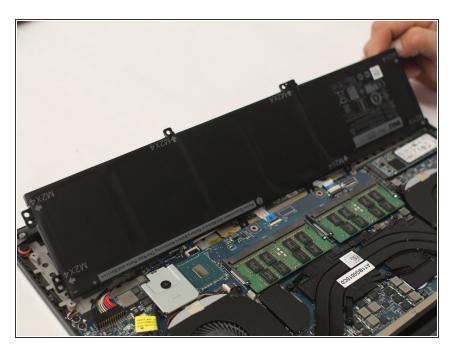

 Gently lift up on the backside of the battery.

Step 6







- Firmly grasp the black connector on both sides.
- Carefully pull the connector towards the battery, to release the connector and the battery from the laptop.

To reassemble your device, follow these instructions in reverse order.