



# Canon PowerShot SD30 Screen Replacement

This guide will direct you through the process of replacing the screen.

Written By: Erin Brophy



---

## INTRODUCTION

Is your camera not displaying your photos correctly or is the screen not showing any images?  
Consider using this guide to replace the screen of your camera.


---




### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Tweezers](#) (1)
-


## Step 1 — Front Cover

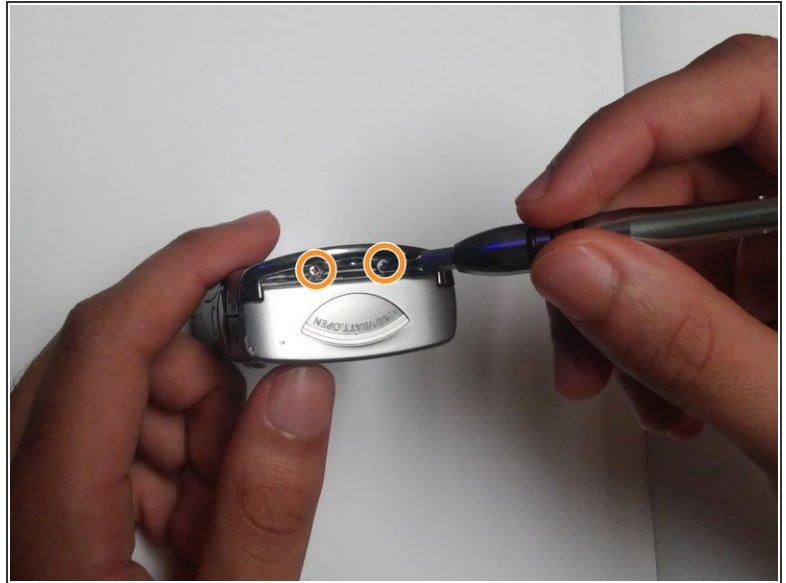

 Be sure to remove the wrist strap and battery before removing the cover.

- Remove the two 2mm black screws that are located on the underside of the camera.
- Remove the two 3mm silver screws from the right side of camera.

## Step 2

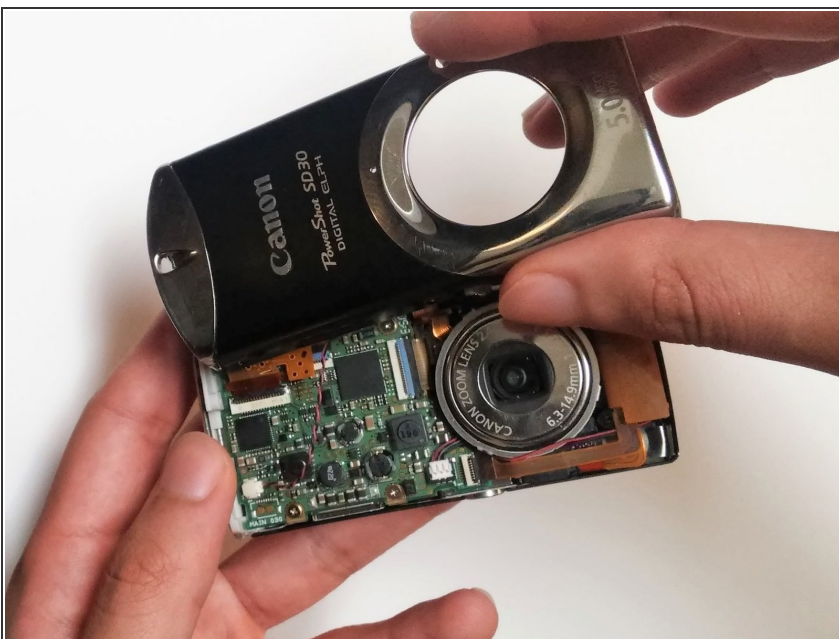

- Gently remove the front cover.

### Step 3 — Back Cover



**i** Remove the wrist strap and battery before removing the back cover.

- Remove the 2mm screw from the back of the camera.
- Remove two 2mm screws from the bottom of the camera.
- Remove two 2mm screws the left side of camera.

### Step 4



- Gently remove the back cover.





## Step 5 — Screen






- Remove top button panel by removing the screw located at the top right of the panel.

## Step 6

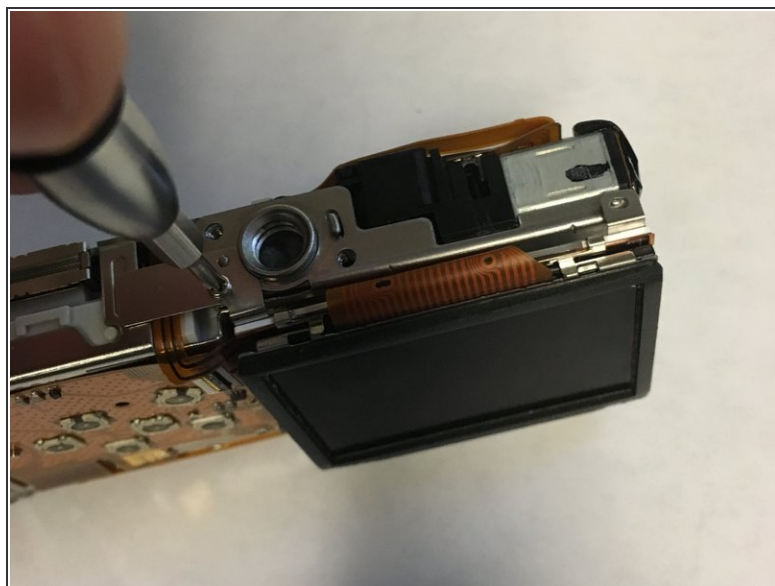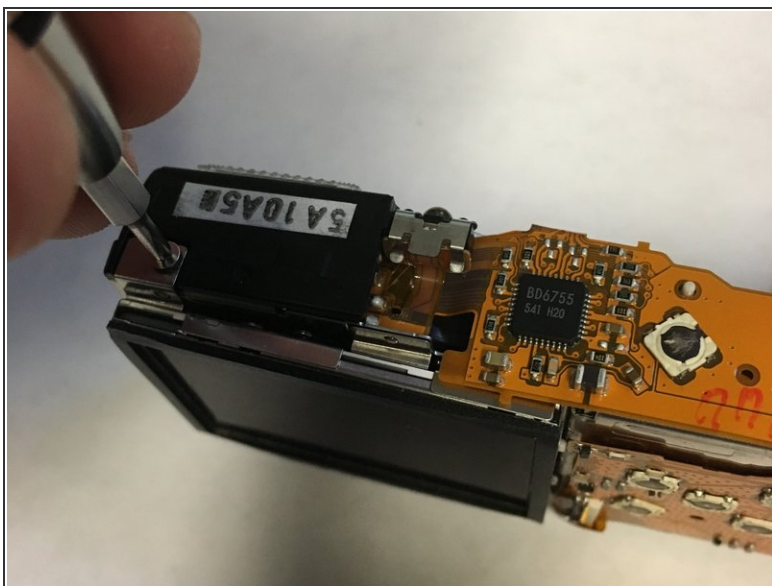


- Remove screws both at the top and the base of the screen to free the screen.

## Step 7

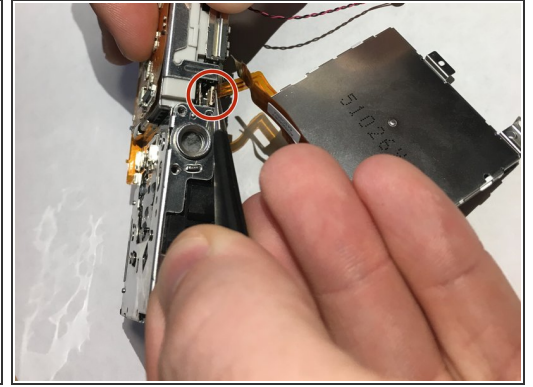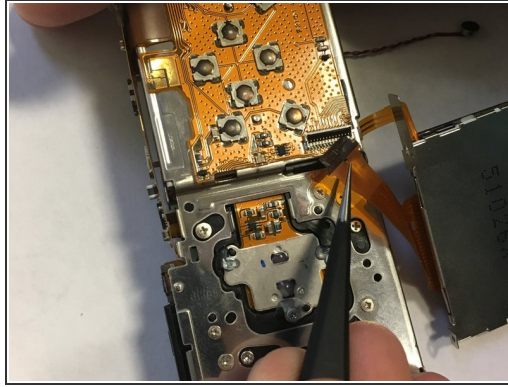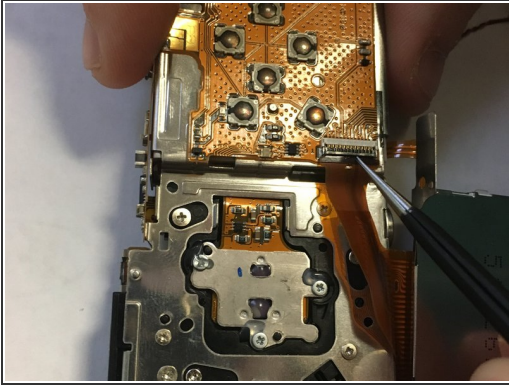

- Use tweezers to lift the tab that secures the screen wire and remove.

 You need to do this for both wires.

To reassemble your device, follow these instructions in reverse order.