



# HP 17-bs049dx Back Panel Replacement

This disassembly guide will show you how to disassemble a back panel for the HP 17-bs049dx.

Written By: Megan Paige



## INTRODUCTION


During the process, be careful with the placement of removed screws. This back panel disassembly is required to access all internal components.

---

### TOOLS:


- [Phillips #0 Screwdriver](#) (1)
  - [Metal Spudger](#) (1)
-

## Step 1 — Battery

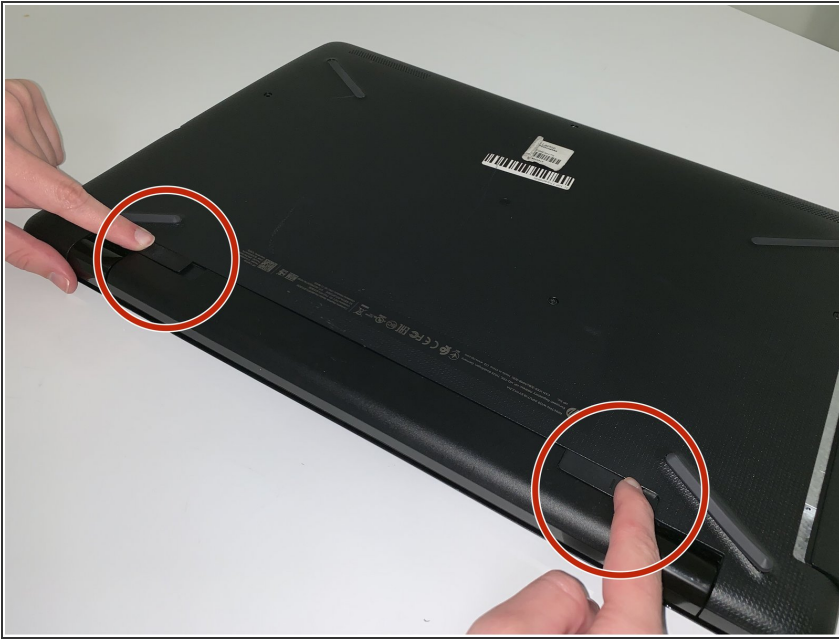


- To remove the battery, simply push the tabs towards each other.
- ⚠ The battery will come out with force, be sure to keep anything fragile away from the laptop during this process.

## Step 2 — Back Panel

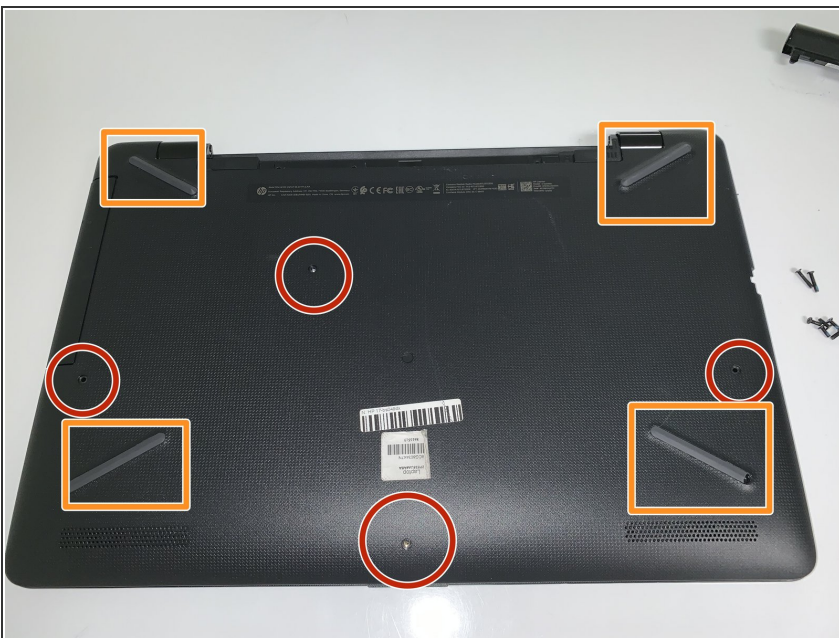

- Remove the four screws (13.7mm) with a Phillips #0 screwdriver.
- Be sure to lift all four rubber tabs to access screws (7.51mm) underneath.
- ⚠ Rubber tabs will require force to access screws.

### Step 3

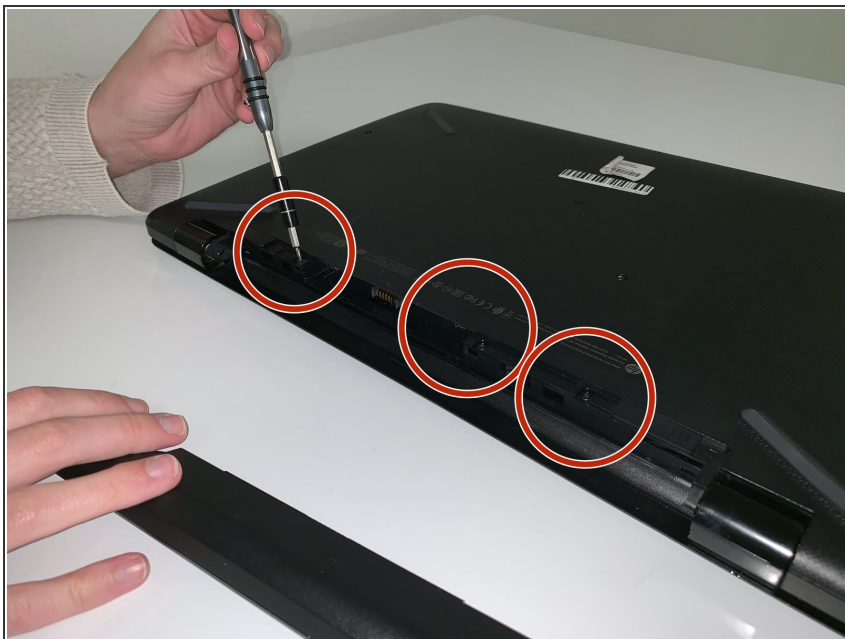

- Use the Philips 0 screwdriver to unscrew the screws (7.51mm) that were underneath the battery.

### Step 4



- Pull outwards on the disk reader to remove from main frame.

⚠ This removal will require force.


⚠ All screws must be removed before removing disk reader.



## Step 5



- Lift back panel to access internal components.

 You will need to use force to pry it open.

To reassemble your device, follow these instructions in reverse order.