




# HP Chromebook CB2L Trackpad Replacement

In this guide you will be shown how to remove the trackpad from the HP Chromebook CB2L.

Written By: Nathan Petrie

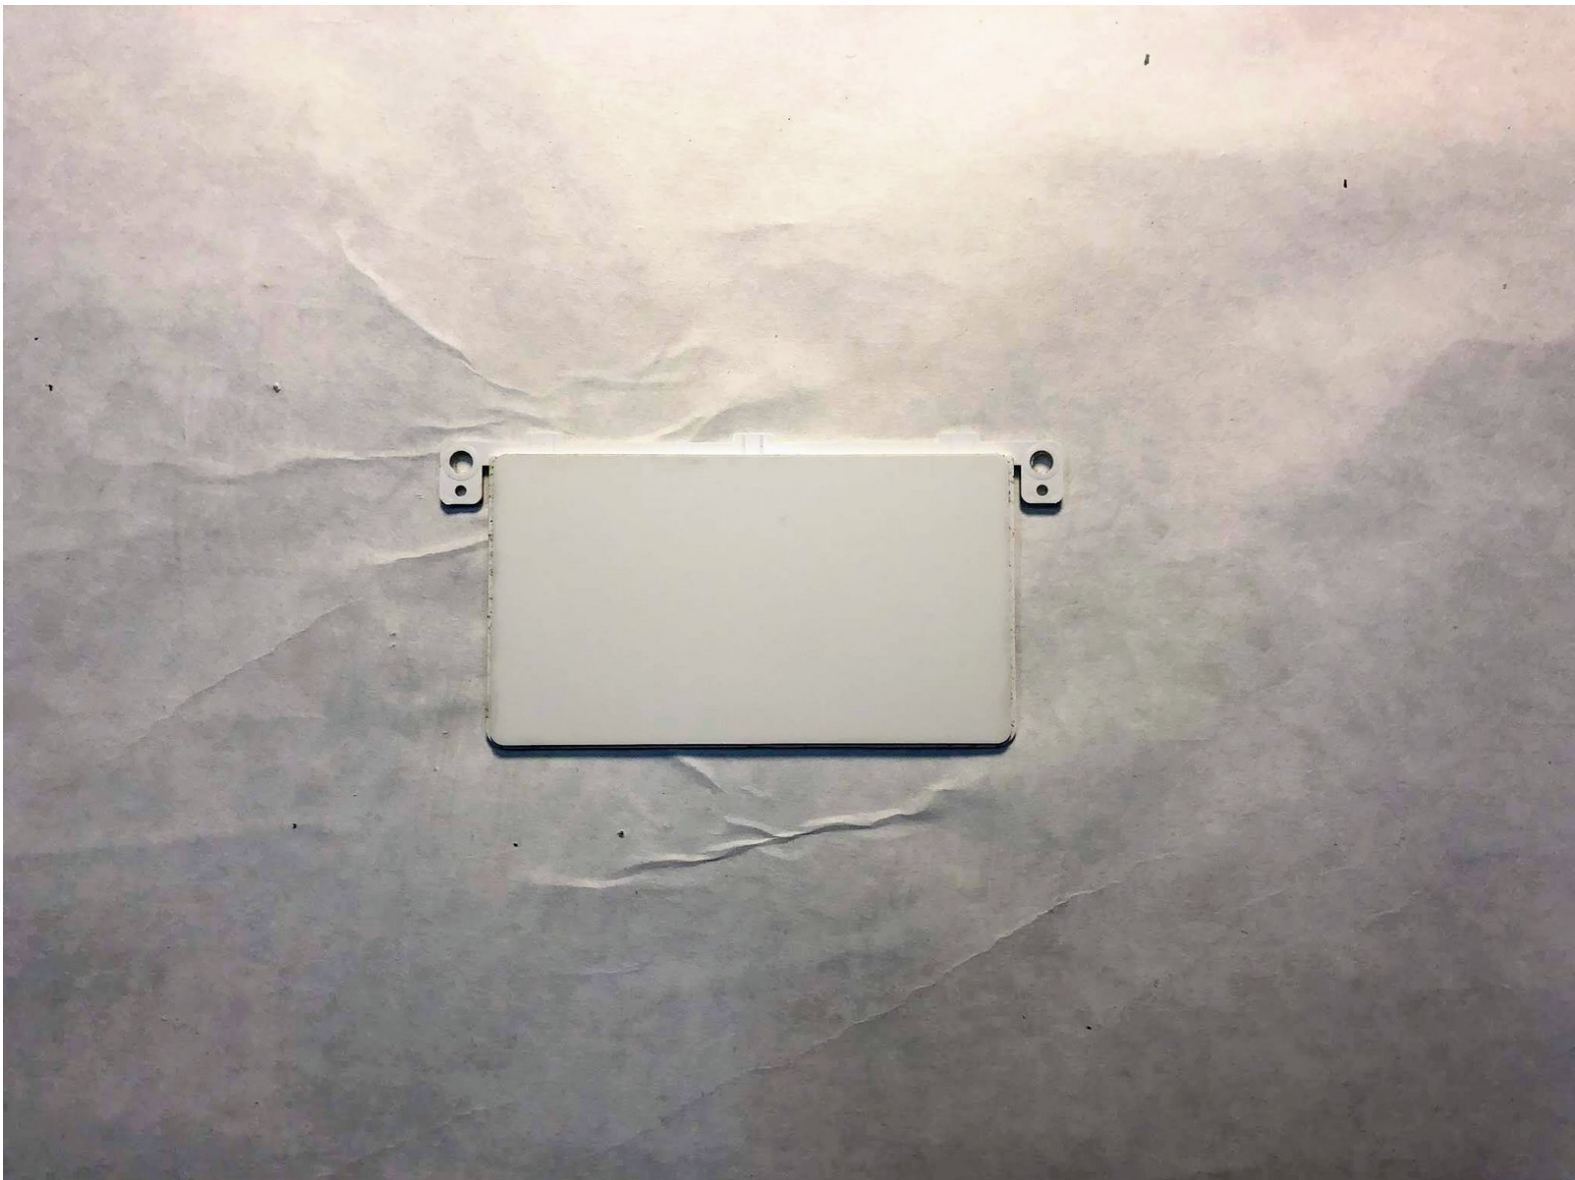

---

# INTRODUCTION

In this guide you will be shown how to remove the trackpad from the HP Chromebook CB2L.


---



## TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-


## Step 1 — Trackpad

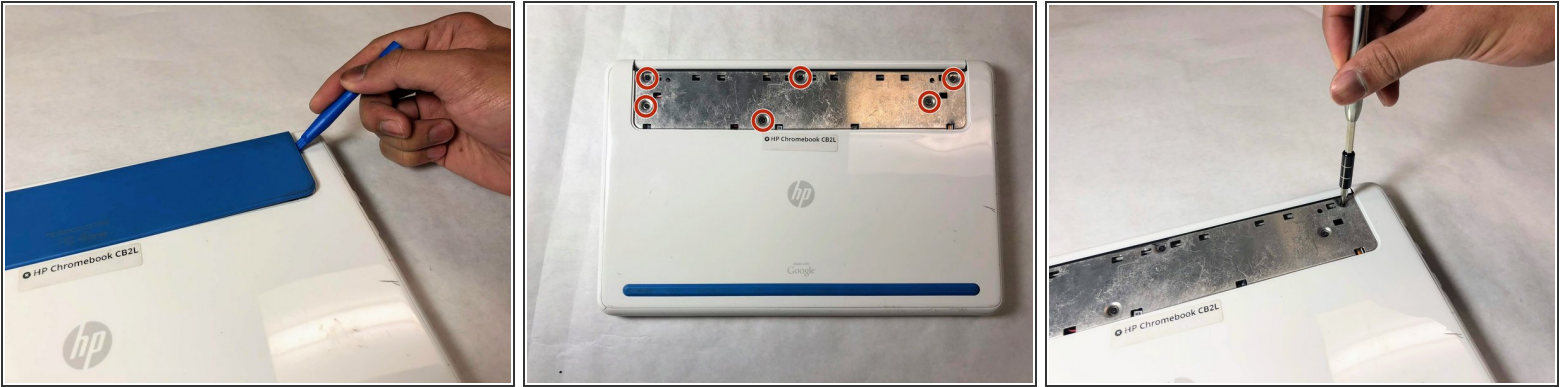

- Flip the Chromebook over, and starting at the top right or left hand corner of the large blue piece, use the plastic opening tool to remove it.
- Remove six 4.77mm screws using the Phillips #1 screwdriver.

⚠ This part has fragile plastic connectors on it. Do not damage them.


## Step 2

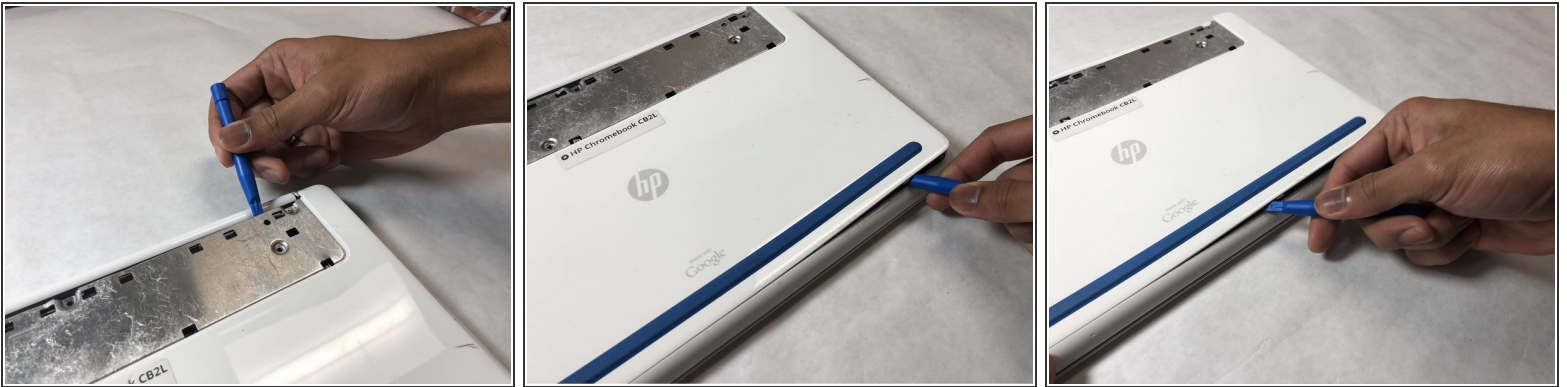

- Starting at either the top left or right hand corner of the exposed metal piece, use the blue plastic opening tool to remove the back panel.




## Step 3

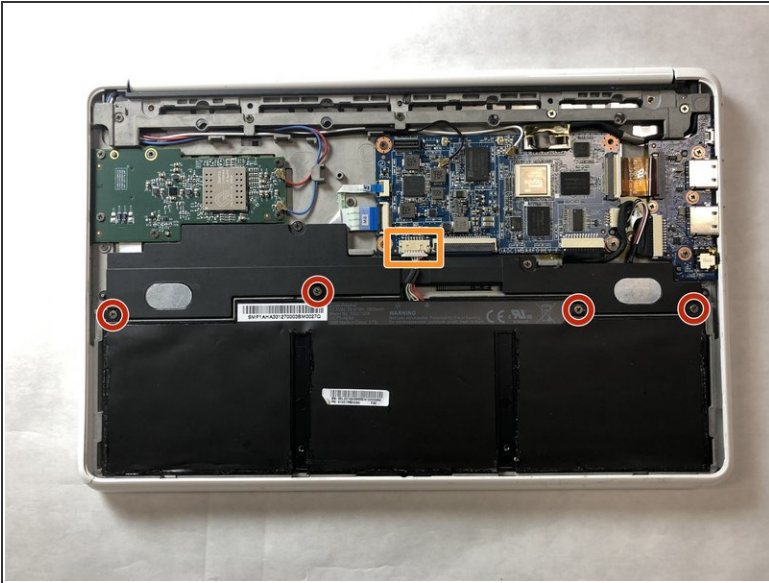


- Remove four 3.42mm screws using the Phillips #1 screwdriver.
- Disconnect the battery from the motherboard.
- Remove the battery.

## Step 4

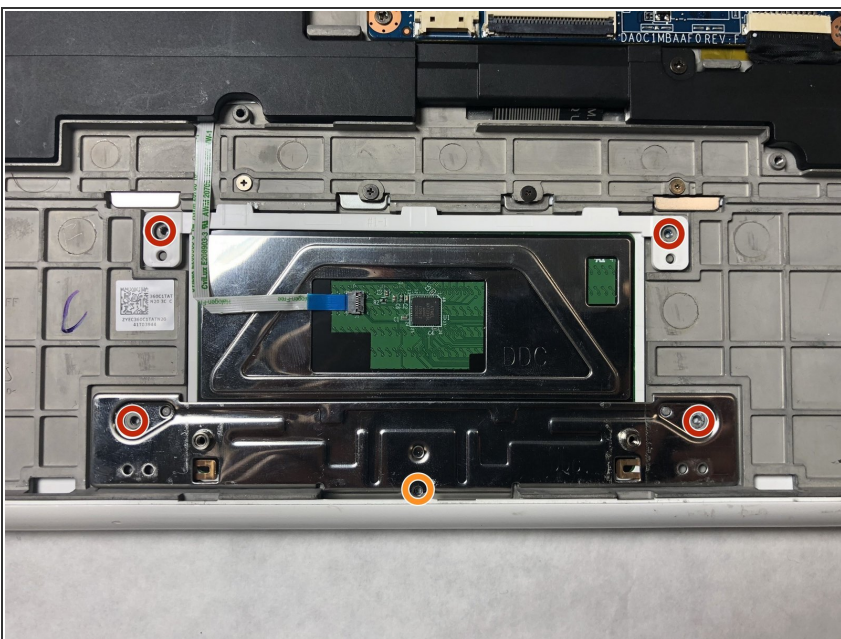

- Remove four 2.57mm screws using the Phillips #1 screwdriver.
- Remove single 2.43mm screw using the Phillips #1 screwdriver.

## Step 5

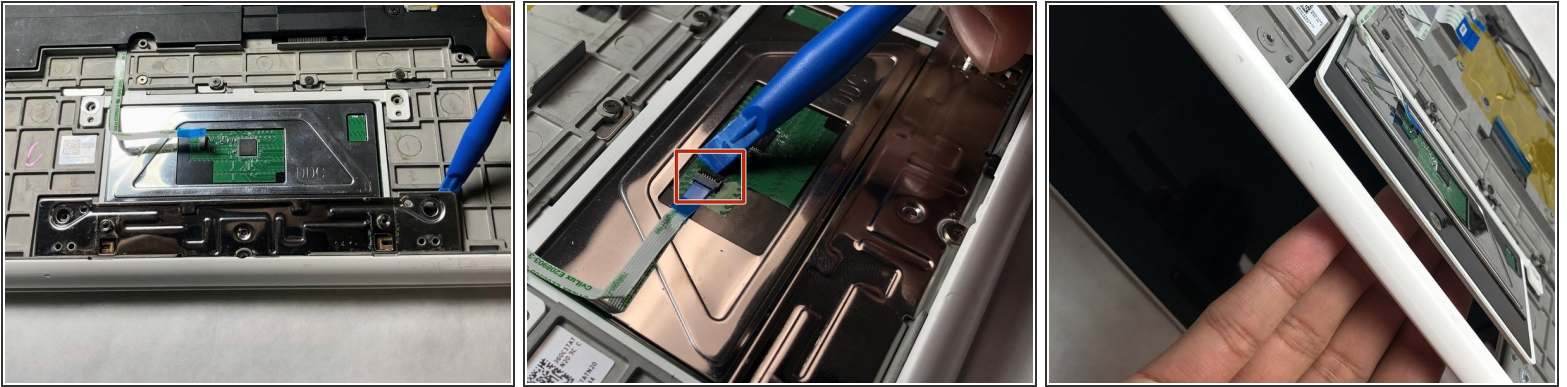

- Remove the metal piece along the bottom of the trackpad.
- Use the plastic opening tool to carefully flip the black piece on the ribbon cable holder then remove the ribbon cable.
- Push the trackpad out from the keyboard side.

To reassemble your device, follow these instructions in reverse order.