



Chefman RJ38-V2-35 Timer Replacement

Timer on air fryer is not working. No ding, not ticking, nothing is happening.

Written By: Robert Gates



INTRODUCTION

If the air fryer is not stopping at an allotted time for cooking, this guide is for you. This guide will work you through how to replace the timing system in the air fryer. It's a semi long process, but not too challenging.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Timer





- Using the plastic opening tool, pop off each of the four corners on the top silver plate.

Step 2



- Twist off the temperature knob.

Step 3

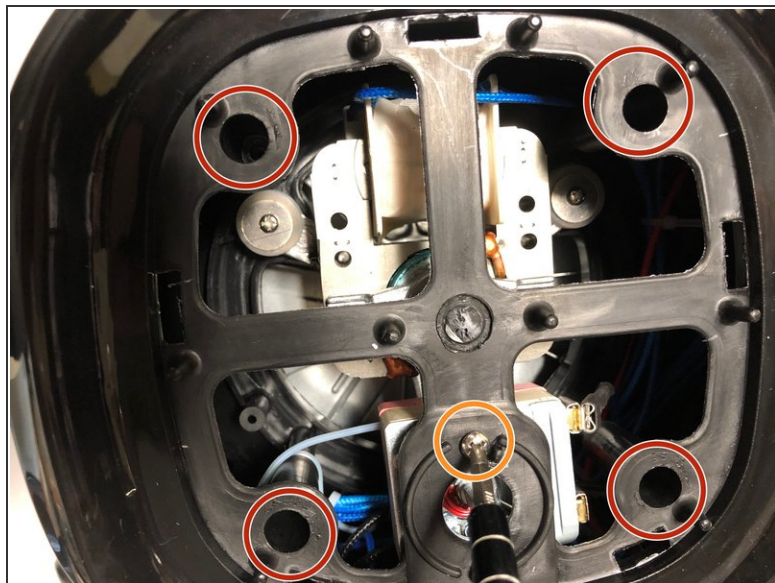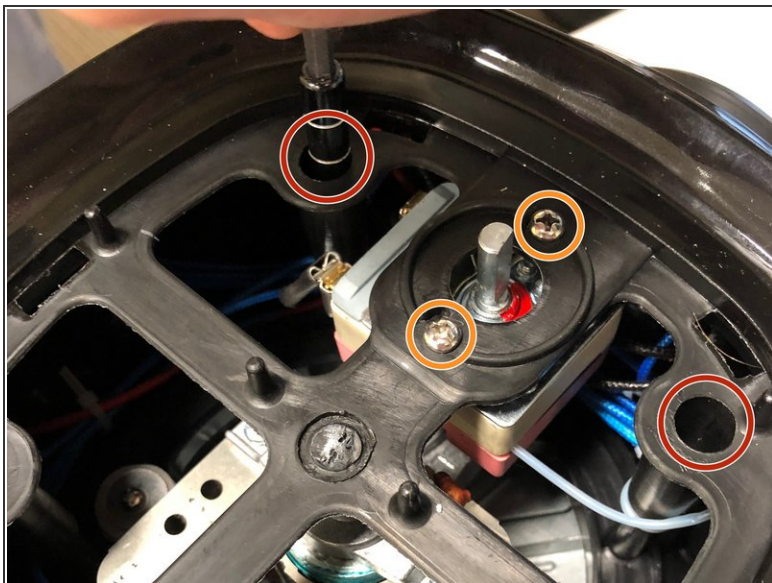

- Using a Phillips #1 screwdriver, remove the four 4mm screws, one in each corner.
- Also unscrew two 4mm screws.

Step 4




- Pull off top black cover.

Step 5



- Squeeze on plastic pieces holding timer down and push out.

Step 6

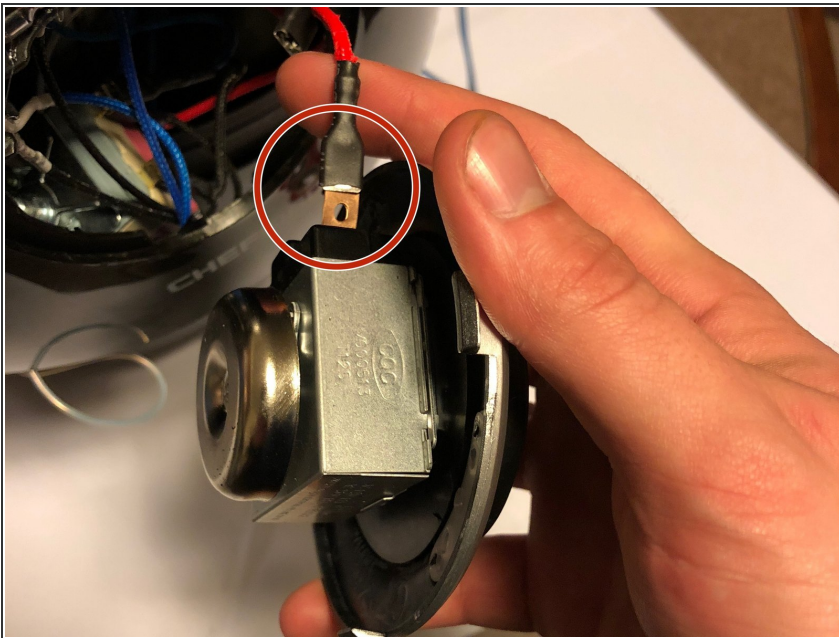

- Pull cable from timer using either hands or tweezers.

To reassemble your device, follow these instructions in reverse order.