



# Asus F554LA-WS52 Disc Drive

How to replace a Asus F554LA-WS52 disc drive.

Written By: Aaron Ratliff



---

## INTRODUCTION

Many of the Asus F554LA-WS52 notebook's components take several steps to remove and replace. This sequential guide shows the necessary steps. For this guide, you will need a plastic opening tool and a Phillips #00 screwdriver head.



### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-




## Step 1 — Disc Drive



**!** Make sure the notebook is off and has been unplugged from any power source.


- Flip the notebook over and remove the 10 screws from the back plate with a #0 Phillips head screwdriver.
- i** Six (6) will be 9.6mm and four (4) will be 12.7mm.

## Step 2

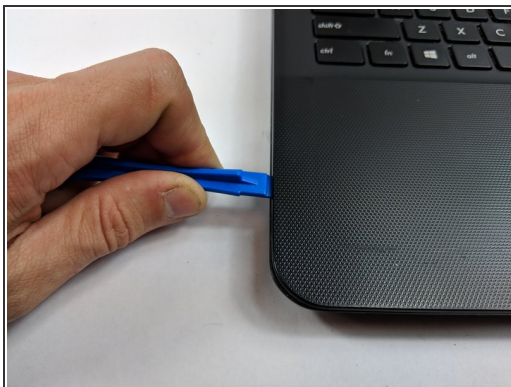

- With a plastic opening tool, gently lift and remove the back cover to expose the internal components.
- i** (Not pictured) Remove the three cables attached to the keyboard and one touch-pad.



## Step 3

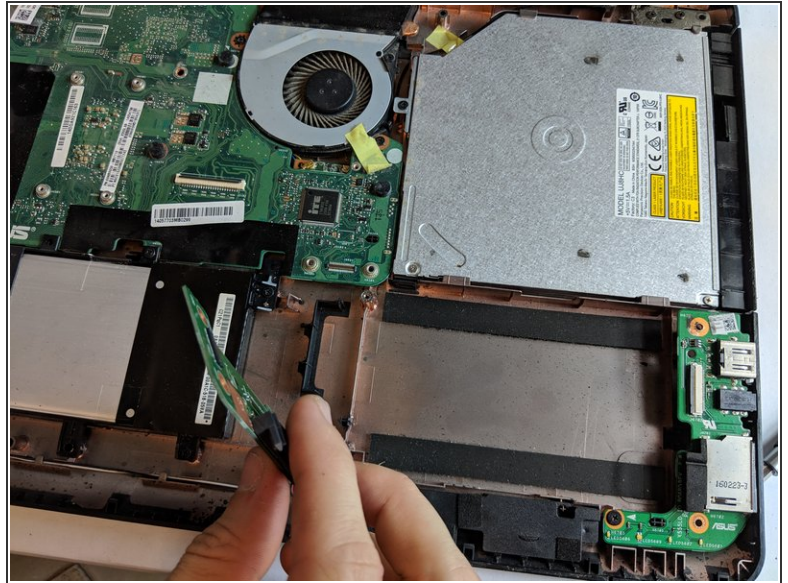

- Unscrew the three 5.7 mm hard drive-motherboard connection screws with a #0 Phillips head screwdriver.
- Remove the small rectangular hard drive-motherboard connection board.
- ⓘ (Not pictured) Remove the hard drive.





## Step 4

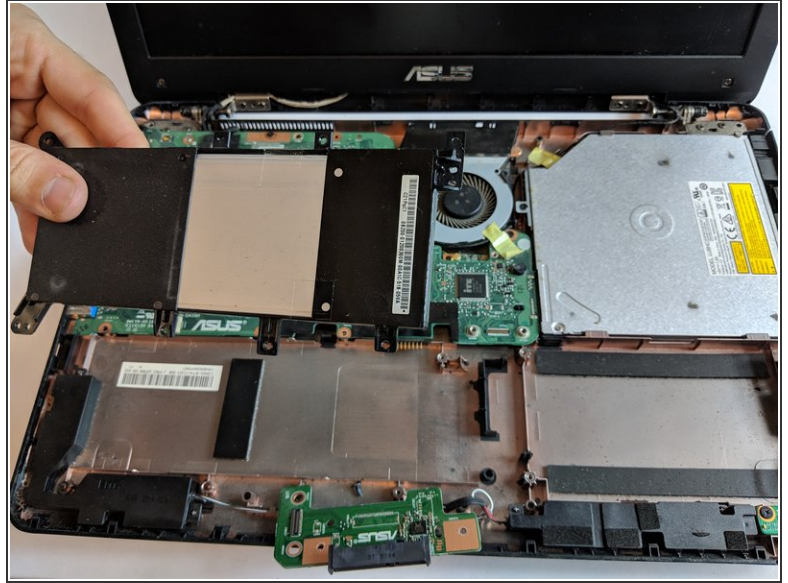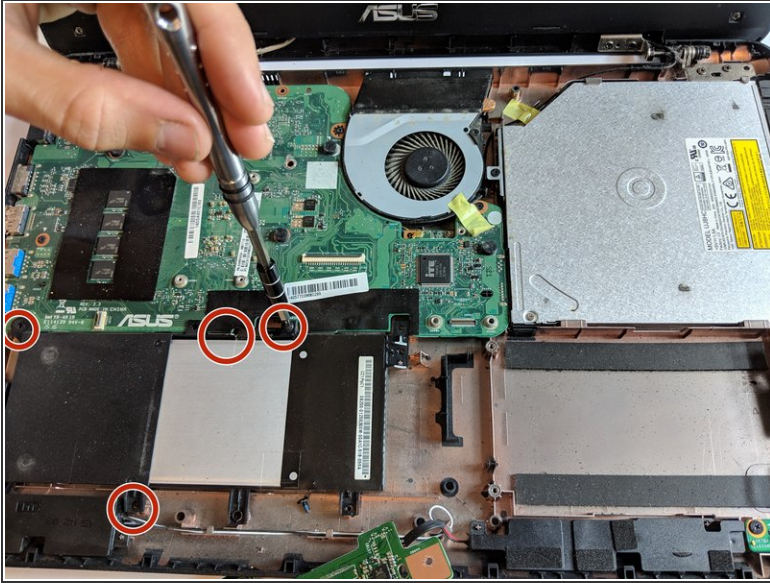

- Unscrew the four 5.7 mm battery screws with a #0 Phillips head screwdriver.
- Remove the battery.

## Step 5

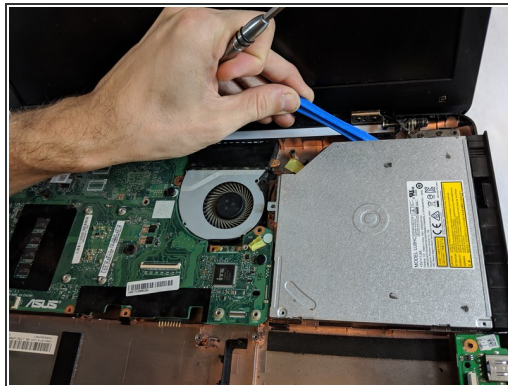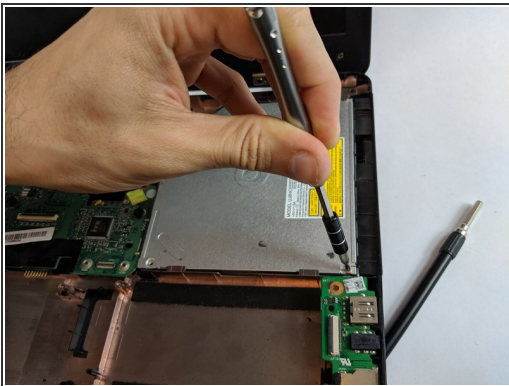

- Unscrew the two 2.7 mm and one 5.7 mm CD drive screws with the Phillips #00 screwdriver.
- With the plastic opening tool, gently pry the drive out from the metal brackets that hold it in place.

To reassemble your device, follow these instructions in reverse order.