




Nikon Coolpix 775 Screen Replacement

Did your cameras screen go black? This guide...

Written By: Nick Meador

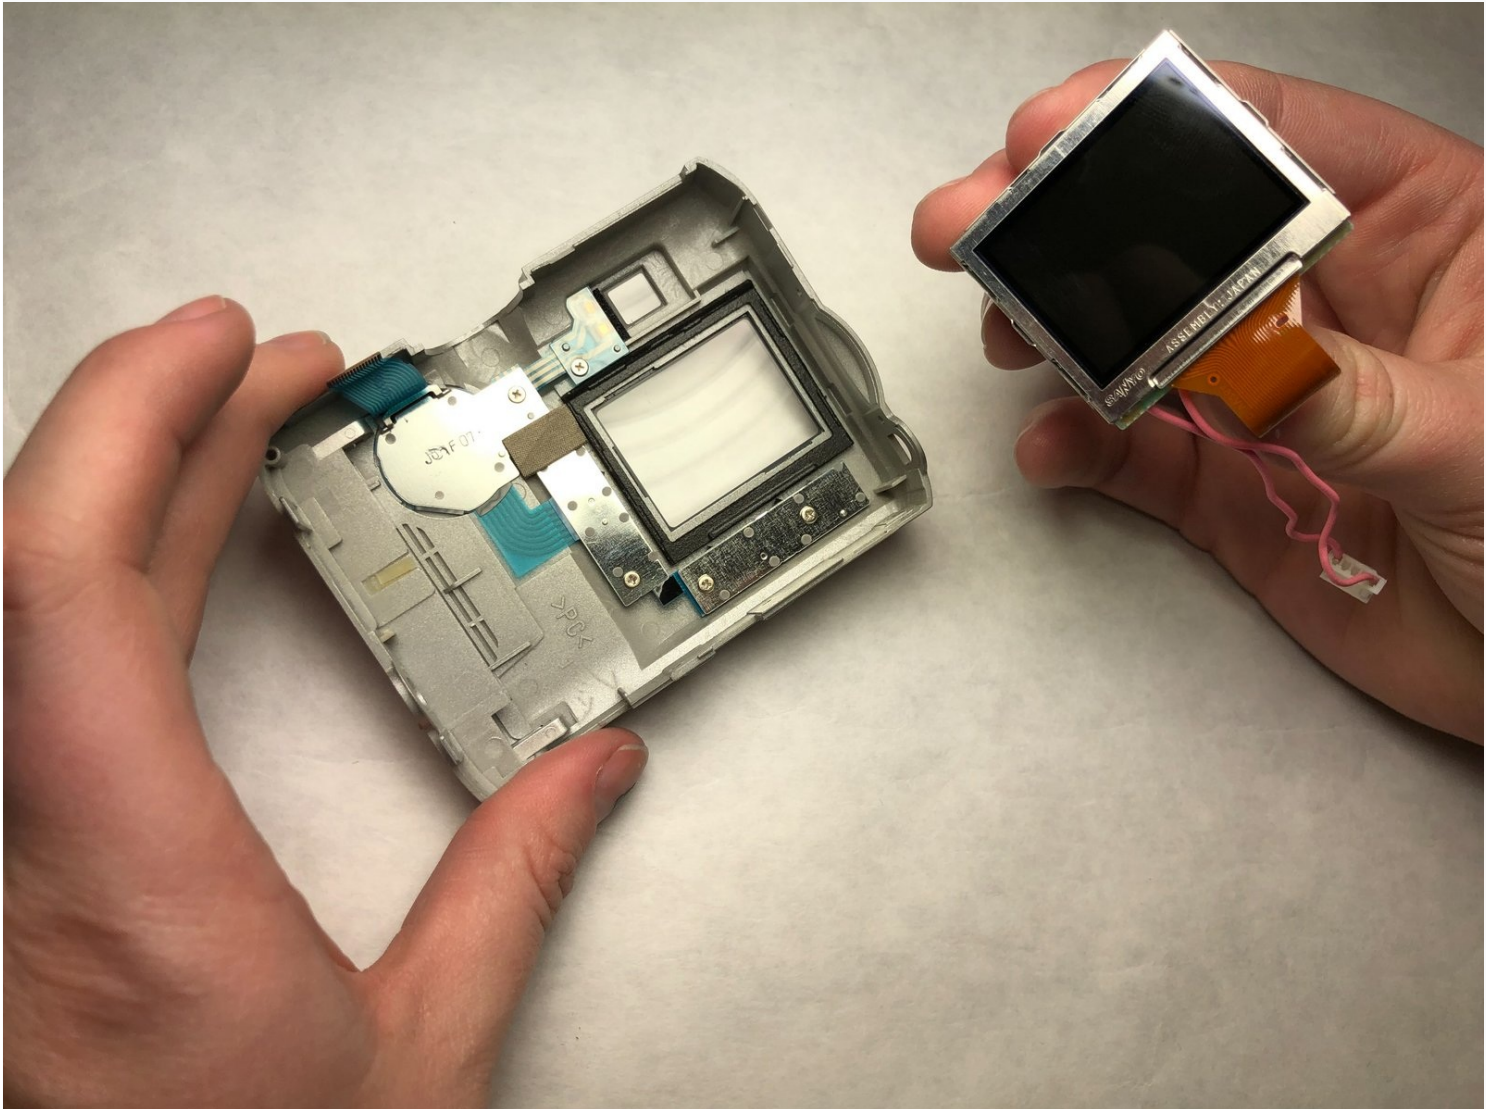

INTRODUCTION

Did your camera's screen go black? This guide can help you walk through the removal of this LCD screen for the Nikon Coolpix 775.


TOOLS:

Phillips #00 Screwdriver (1)

Tweezers (1)

J00 JIS Screwdriver (1)

Step 1 — Battery

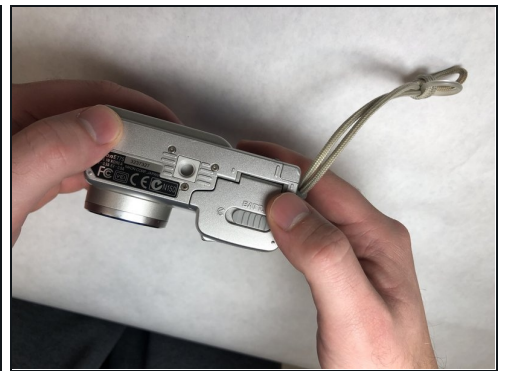


- Flip the camera, so the bottom is facing up.

Step 2



- Slide the gray latch to the open "pac-man" symbol.

Step 3

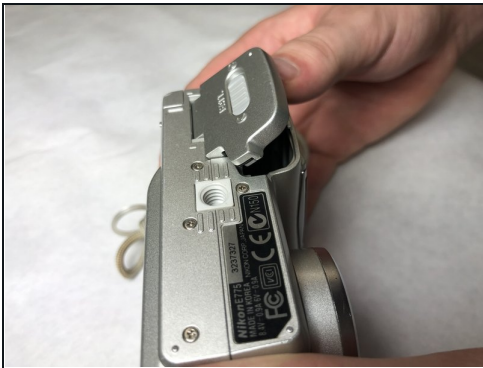



- Flip up the cover and remove the battery inside the slot.

Step 4 — Motherboard



- Unscrew the eight 4mm long JIS #00 screws from the bottom, right side, and the left side.

Step 5

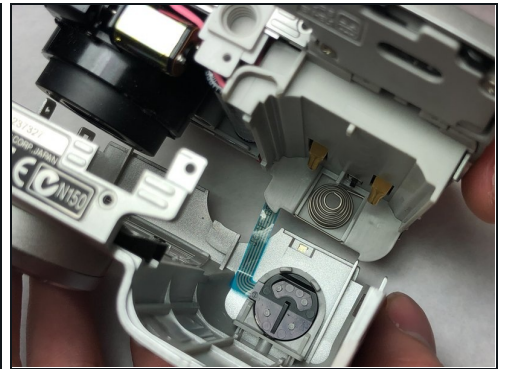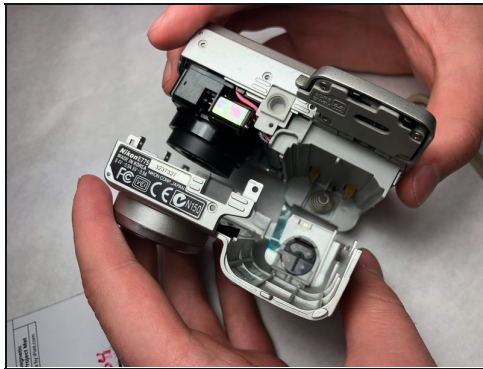

- Grab the camera with both your hand from the front and the back.
 - Pull the two parts apart.
- ⓘ You may have to pull at different angles to get the two parts to separate, but make sure you don't pull too hard because there is a wire connection on the inside.

Step 6



- Flip the camera back so you can see the top.
- Pull the ribbon cable out of the socket connecting to the motherboard by using your hands or [tweezers](#).

⚠ Be careful not to puncture or rip the ribbon cable.




Step 7



- Look back to the top of the camera.
- Flip up the tab that is exposed right by the dial using tweezers.
- Release the ribbon to be able to separate the top part of the back of the camera.




⚠ Be careful not to rip the ribbon cable.

Step 8

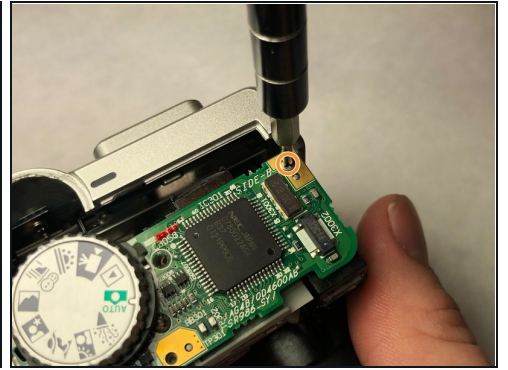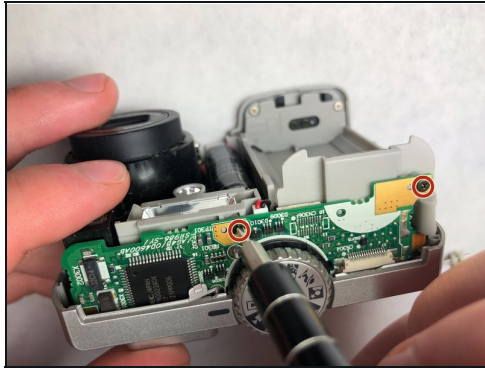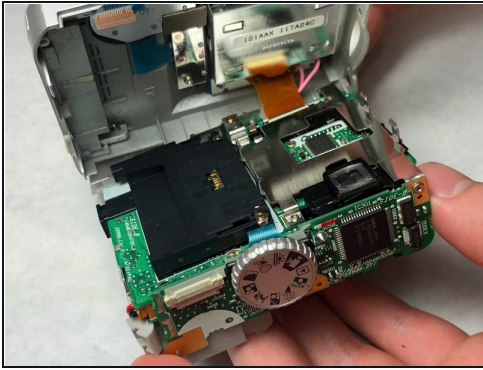



- Look at the top side of the camera.
- Unscrew the two 4mm Phillips #00 screws.
- Unscrew the 2mm JIS #00 screw as well.

Step 9

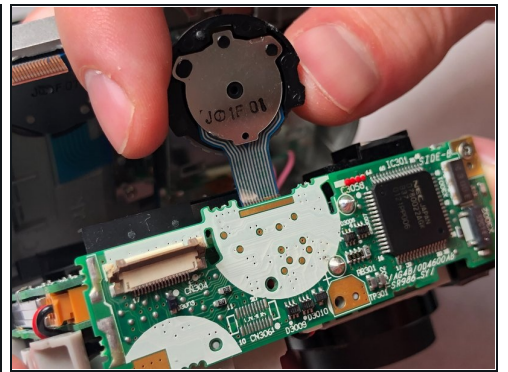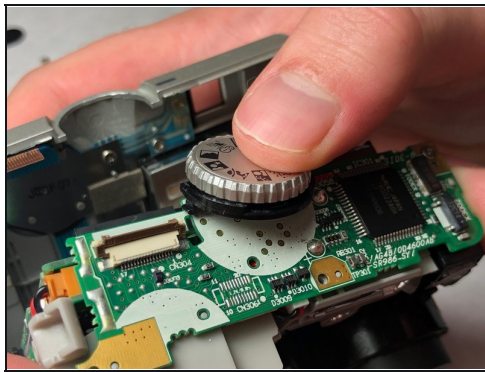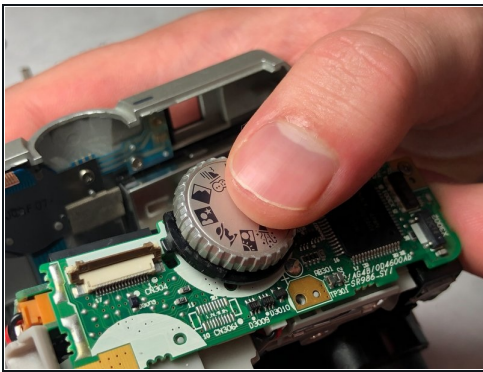




- Push or slide the the top dial toward the backside of the camera to unclip from the motherboard.

Step 10

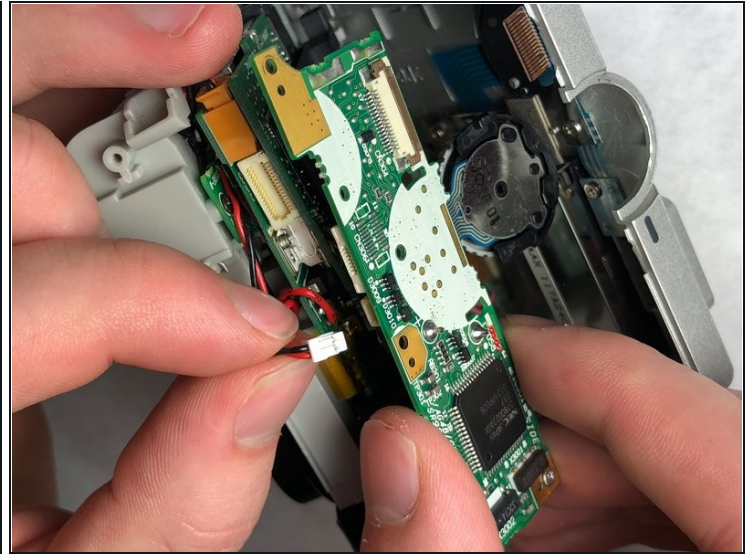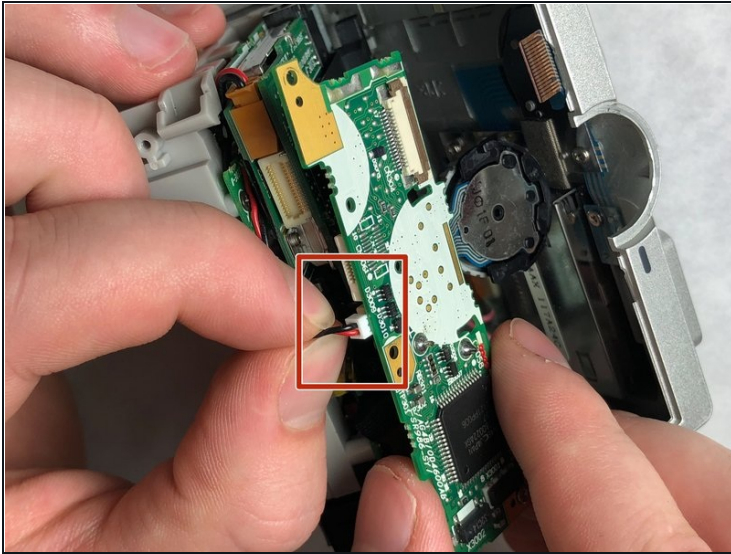

- Pull the red and black wire out of the socket on the motherboard.
- Pull motherboard up out of camera.



Step 11

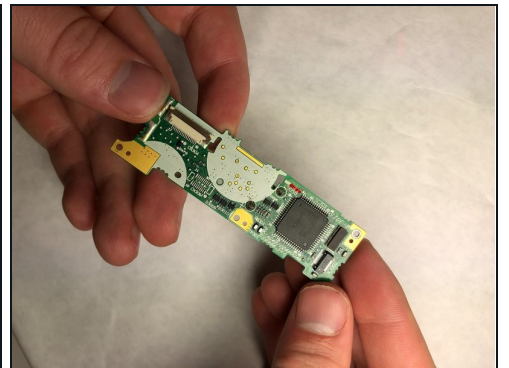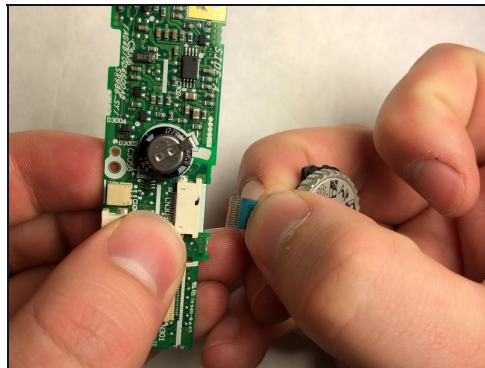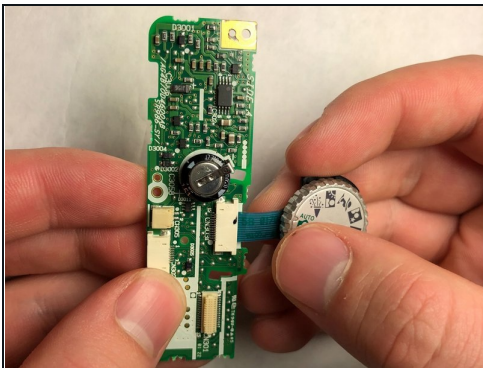

- Pull the ribbon connected to the dial off the motherboard.



⚠ Be careful not to rip the ribbon cable.

Step 12 — Screen

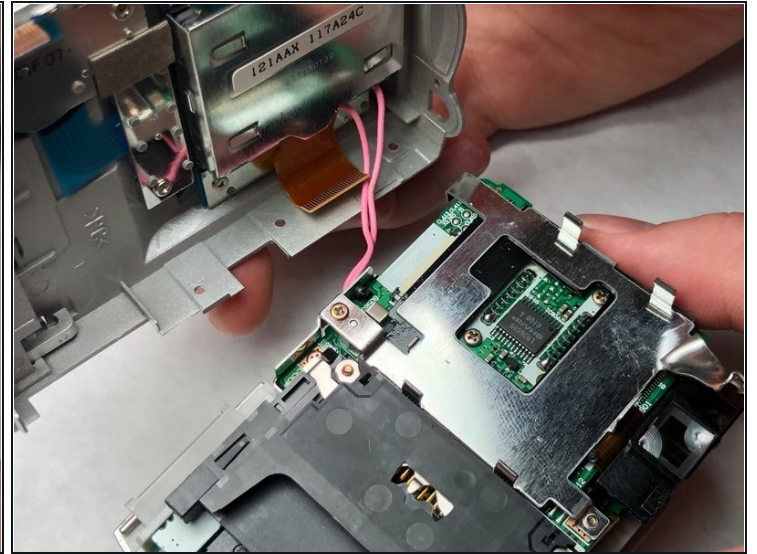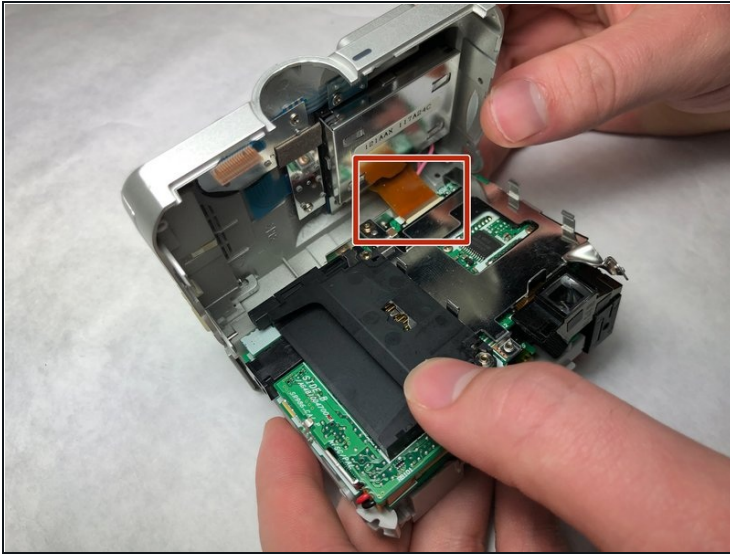




- Remove the orange ribbon cable from its connector by firmly but gently pulling it.

Step 13

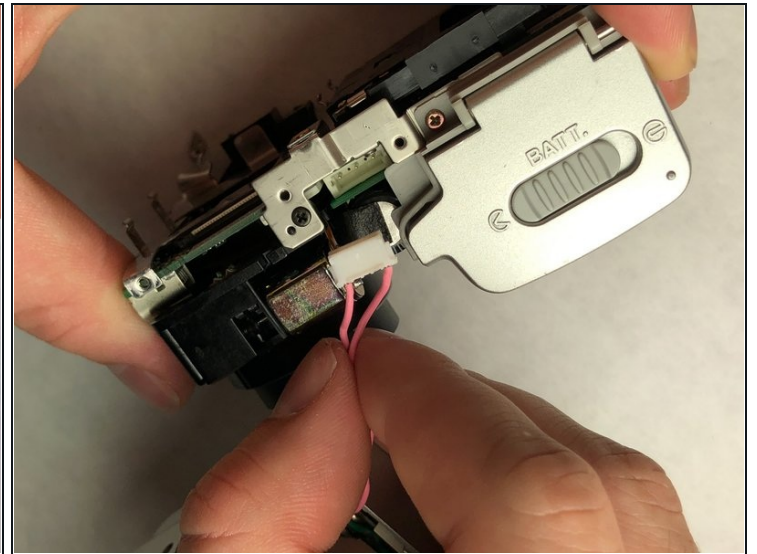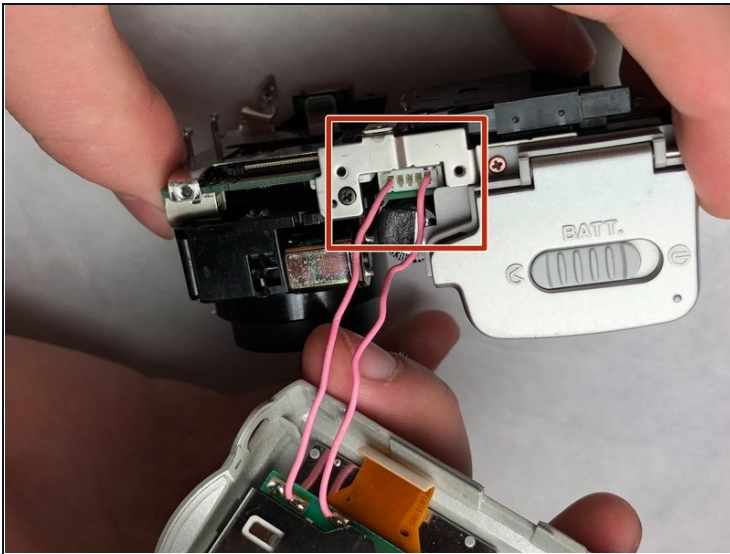

- Pull out the pink cable connector.
- ⓘ If it's not coming loose, use a pair of needle nose pliers to get a good grip on the connector.

Step 14

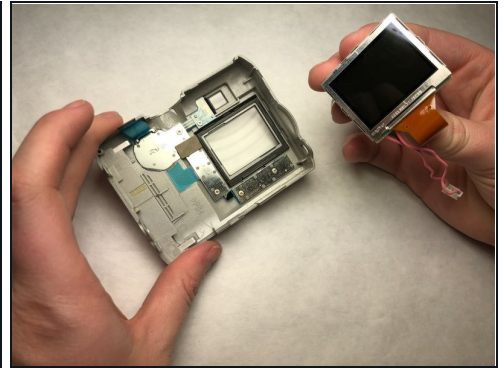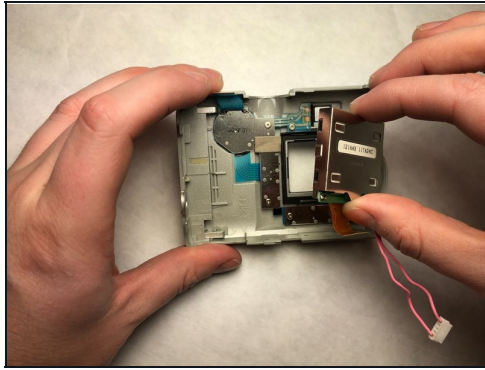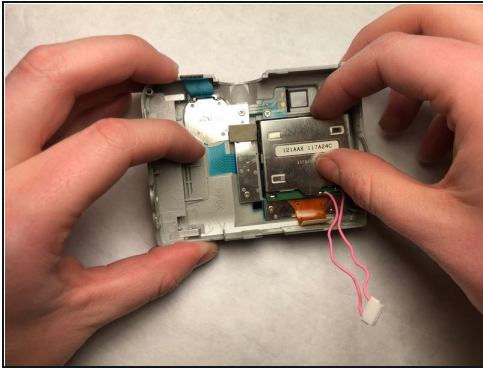

- Grab the back of the screen and gently lift up.
- ① It is only held on by adhesive so it should come out relatively easy.

To reassemble your device, follow these instructions in reverse order.