



Dell Latitude E6500 Fan Replacement

This guide will show the user how to replacement the fan.

Written By: Joshua Valencia





TOOLS:

- [JIS #0 Screwdriver](#) (1)
-

Step 1 — Fan





- Place laptop on a flat surface.
- Face the hinges outward.

Step 2





- Use a J0 screwdriver to remove the single screw on the back of the device.
- Remove the backing of the computer by sliding it towards you.

Step 3

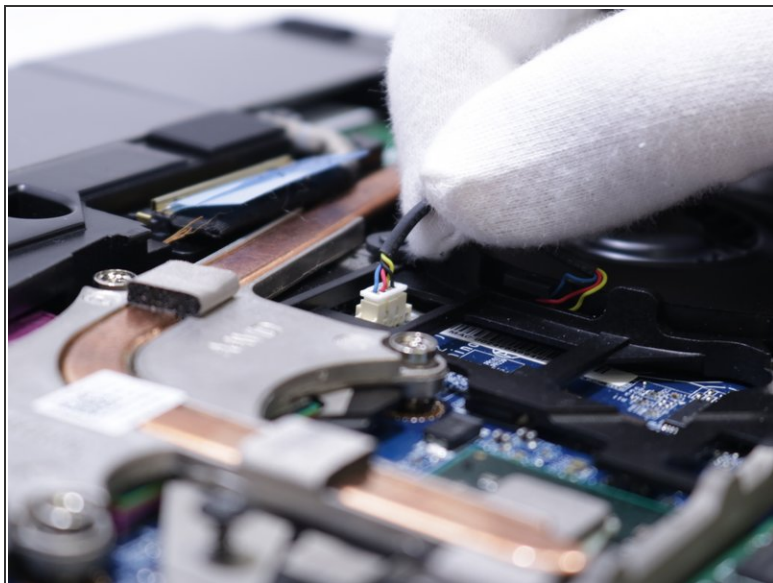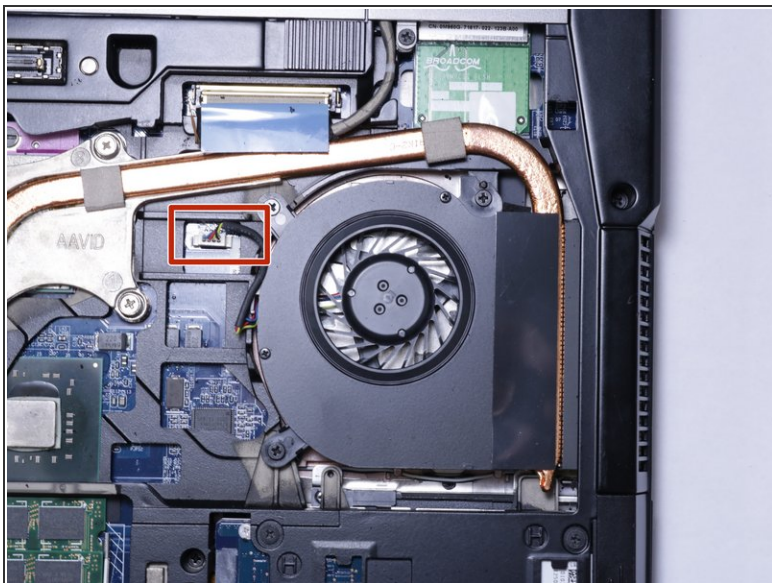

- Locate the fan.
- Remove wire from the computer adjacent to the fan.

Step 4

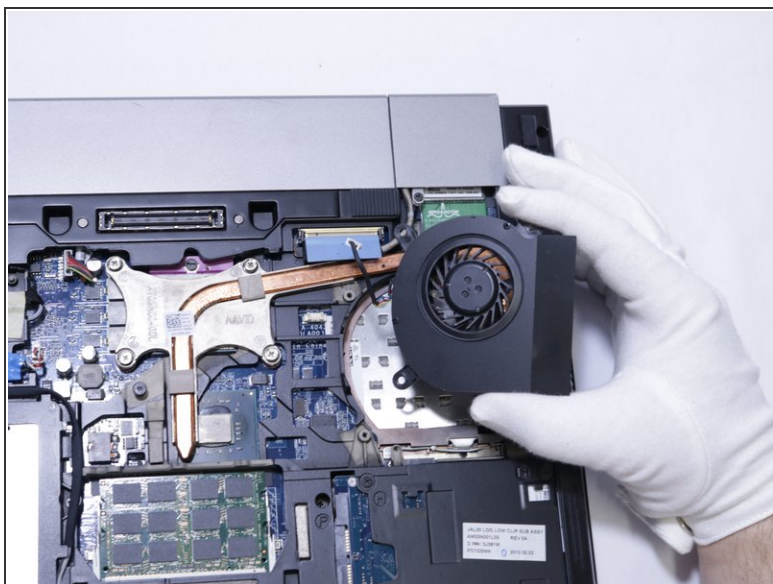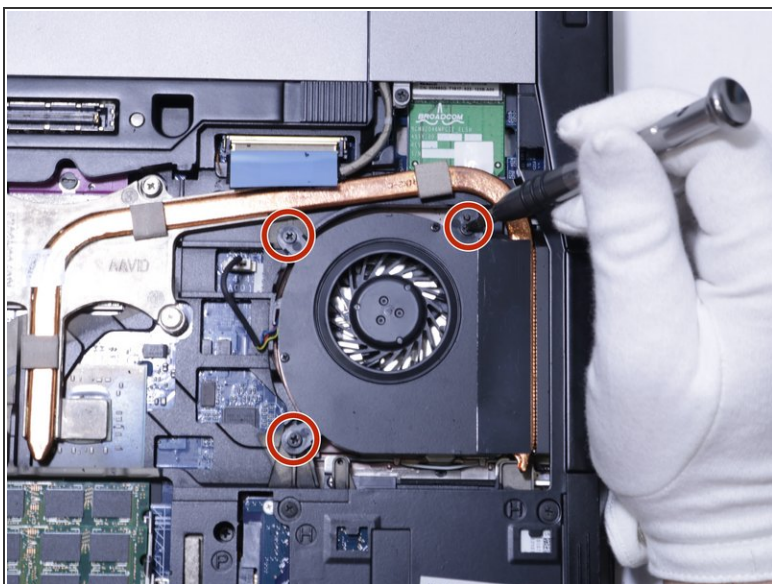

- Remove the screws using a J0 screwdriver.
- Remove the fan from the device.

To reassemble your device, follow these instructions in reverse order.