

Asus Eee PC 1215N Hard Drive Replacement

Hard drive Removal / installation.

Written By: Gaetan




TOOLS:	PARTS:
 Anti-Static Wrist Strap (1) 	 1 TB SSD / Upgrade Bundle (1)
 Phillips #00 Screwdriver (1) 	 250 GB SSD / Upgrade Bundle (1)
 iFixit Opening Tools (1) 	 500 GB SSD / Upgrade Bundle (1)
 Spudger (1) 	• 2 TB SSD (1)

Step 1 — Battery




- Turn the power off and turn the netbook upside down.
- Slide both battery catches together to release the battery.
- Slide the battery out.

Step 2 — RAM

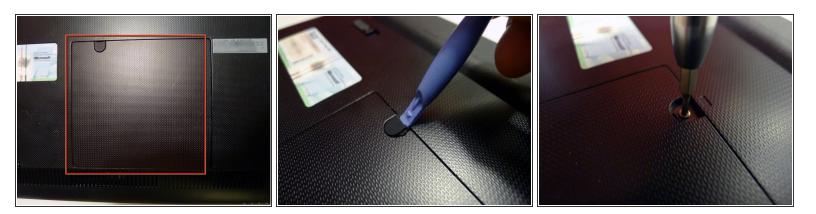

- Locate the memory compartment.
 - Using a Plastic Opening Tools, remove the screw rubber cover.
 - Remove the screw.

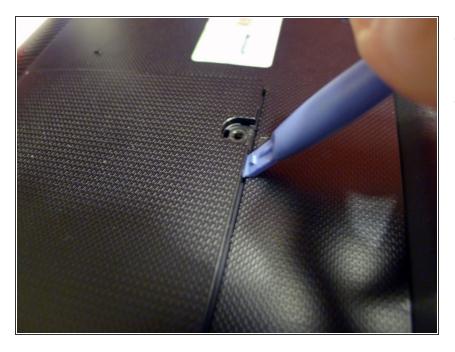


- Use a Plastic Opening Tools near the screw hole to release the cover.
- Remove the cover

Step 4



- Using a <u>Spudger</u>, push both right and left metal clip to release one of the RAM module.
- Slide out the RAM module.
- Do the same with the second RAM module if necessary.

Step 5 — Top Cover (Touchpad)

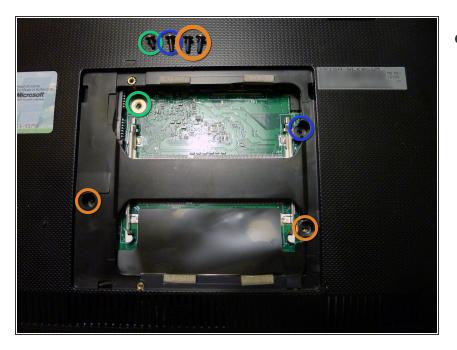


- Remove the screws as necessary.
 - For top cover removing, only remove the 2 bottom screws.
 - *i* For Keyboard removing, remove all 4 screws.
 - The one short screw paterns to uper left screw hole directly on the PCB.

Step 6



- Use a Plastic Opening Tools to release the top cover.
 - Start from the left side.
 - Go around on the bottom
 - Finish with the right side.

The top cover is still connected to the PCB with the touchpad ribbon. Handle it carefully.

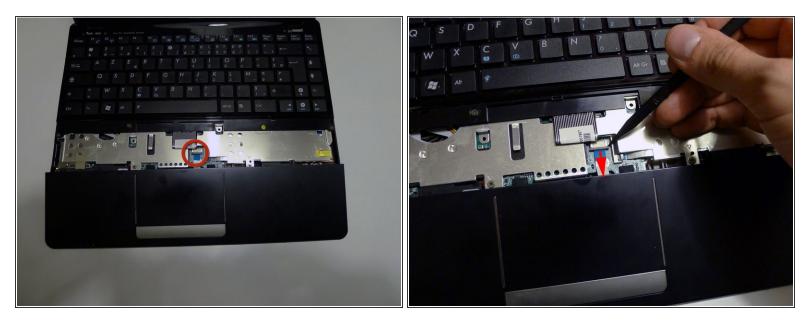


- Carefully slide the top cover to the bottom in order to see the touchpad connector on the PCB.
- Use a <u>Spudger</u> to slide the conector attachment black part and release the ribbon from the PCB.
- Now you can remove the top cover

Step 8 — Keyboard




Make sure that the two upper screws inside the RAM compartment are removed before to continue. (Refer to Step 5).

- Remove the keyboard 4 screws on the bottom.
- Use a Plastic Opening Tools to release the keyboard clips on the left and right side.

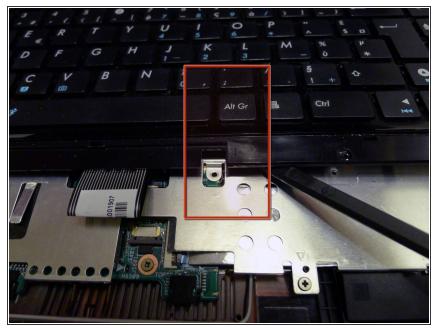

- At this step, the keyboard is still maintained with double-sided tape between the keyboard underside and the metallic PCB protector.
 - Carefully slide a <u>Spudger</u> between the keyboard underside and the metallic PCB protector near the center/right at the bottom. Use the spudger as a lever to release the keyboard from the metallic PCB protector.
- The keyboard is still connected to the PCB with a ribbon. Handle it carefully.

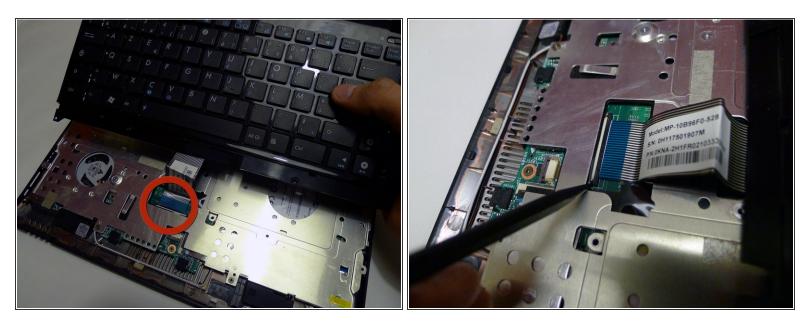


- Carefully slide the keyboard to the top in order to see the ribbon connector on the PCB.
- Use a <u>Spudger</u> to slide the connector attachment black part and release the ribbon from the PCB.
- Now you can remove the keyboard.

Step 11 — Metallic PCB protector plate



- Peel off the protective tape at the bottom left corner.
- Peel off the warranty void at the bottom right corner and remove the screw below.
- Remove the 6 other screws.

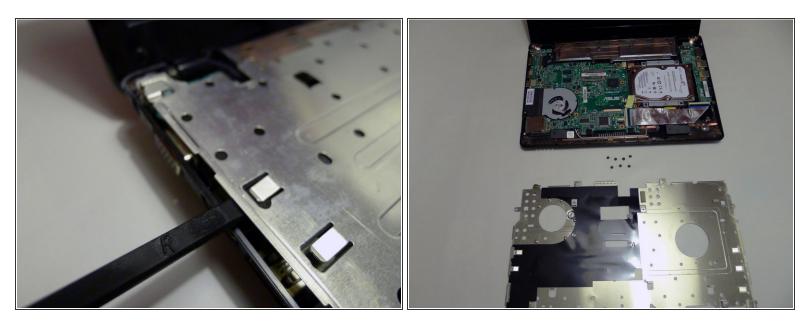

• Remove the protector plate.

Step 13 — Hard Drive



- Remove the four Phillips #00 screws from the hard drive caddy.
- Peel off any tape covering the hard drive, there is no need to remove it entirely.



- Unplug the hard drive by sliding it to the right, toward the USB ports.
- Remove the hard drive.

To reassemble your device, follow these instructions in reverse order.