



# Nintendo Game Boy Advance SP Battery Replacement

This guide contains step by step instructions on how to replace a battery in your Nintendo Game Boy Advance SP.

Written By: Rocco Lattanzio



## INTRODUCTION

If the battery within your Game Boy Advanced SP doesn't last long, or if the console does not turn on at all, you might need to replace it. The following process applies to both the AGS - 100 and the AGS - 101 models of the console. If the battery has never been replaced, be careful when disassembling the unit, because the battery may have swelled over time which can be a potential hazard. Additionally, make sure that the console is not connected to a power source while performing the battery replacement process.

For a replacement battery, visit [Amazon](#).



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tool](#) (1)



### PARTS:

- [Li-ion Nintendo Game Boy Advance SP 3.7V 600mAh Battery](#) (1)

## Step 1 — Battery



- Use a standard Phillips #00 screwdriver to loosen the 4 mm screw that keeps the battery cover attached to the device.

## Step 2



- Lift the battery cover up and remove it from the device.
- ⓘ The screw will remain attached to the battery cover because of Nintendo's design.

## Step 3



- Use your fingers or a plastic opening tool to remove the battery from the device.

**⚠ Caution:** Please exercise caution when handling the battery. If it appears to be swelling or damaged at all it is considered a fire hazard.

For reassembly, follow the instructions in reverse order.