



DJI Spark Lid Replacement

Replace the cover of the DJI Spark which protects all the parts in the drone.

Written By: Uzochi Anyanwu



INTRODUCTION

Follow this guide to remove the lid on your DJI Spark. The lid needs to be removed to get access to the internals. The propellers and battery need to be taken out first before proceeding with detaching the lid. It is an easy 5-step process that can be done in less than 30 seconds.



TOOLS:


- [iFixit Opening Tools](#) (1)
 - [1.5mm Hex Screwdriver](#) (1)
-

Step 1 — Propellers






- Push down on the propeller that is being replaced.

Step 2

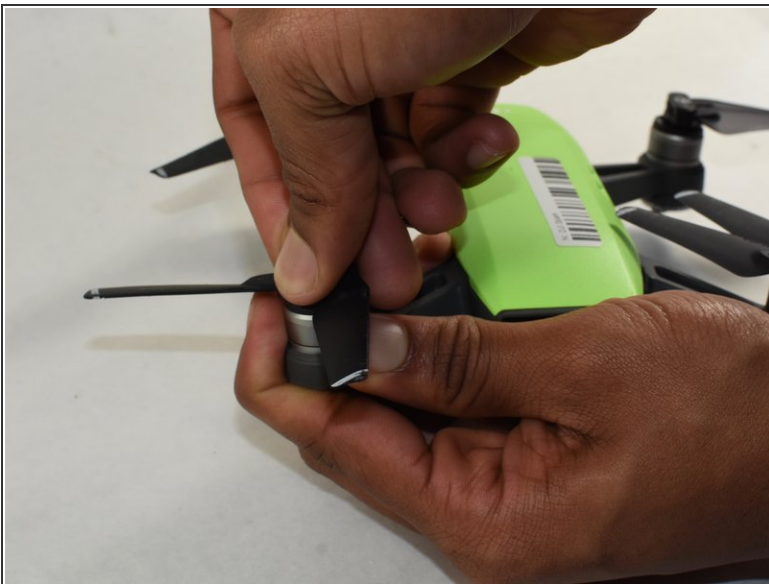

- Twist the propeller until it feels loose.
- Pull on it until it comes off.


Step 3 — Battery

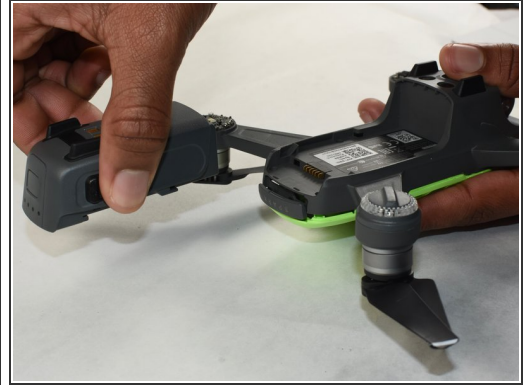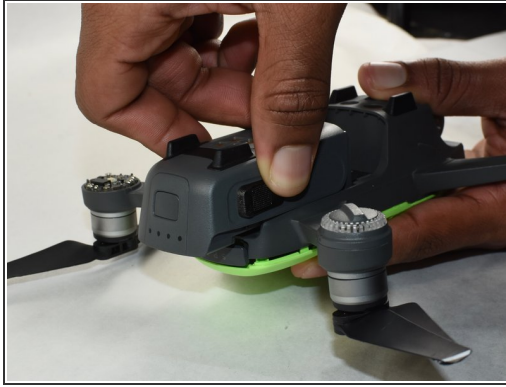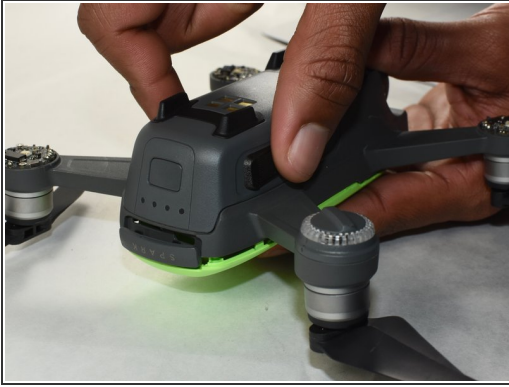


- Flip the drone over.
- Grip the left and right sides of the battery.
- Slide firmly forward until it pops out.

Step 4 — Lid



- Flip the drone over.
 - Remove the four 1.5mm Hex screws.
 - Remove the two 1.5mm Hex screws near the camera head.
-  You may need to remove plastic nubs from the hex screws using a spudger first.

Step 5

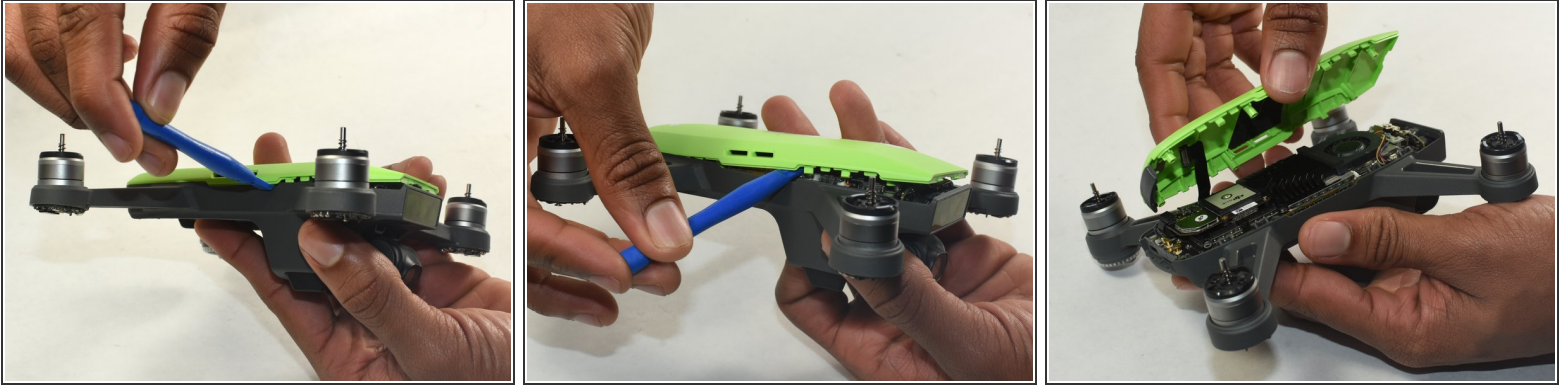

- Hold the drone so the lid is facing up.
- Insert the plastic opening tool into the side of the drone.
- Slide the tool around the perimeter until you can lift the top off.

To reassemble your device, follow these instructions in reverse order.