



# Nokia 6061 Button Pad Replacement

This guide will demonstrate how to repair or...

Written By: rosin7



## INTRODUCTION

This guide will demonstrate how to repair or replace the keypad on your Nokia 6061.

The button pad for the Nokia 6061 may break, making it difficult to use the pad, or the numbers may fade away as a result of using the pad for an extended period of time. The most common issue that this repair may resolve is a broken button in the Nokia 6061 keypad, which makes it difficult to press the button. Another issue is a malfunctioning button. This can happen if the phone is accidentally dropped to the ground.

There are specific tools to assist you in completing the repair that do not require any special skills. Keep in mind that following this manual necessitates paying close attention to detail and exercising caution when performing duties in order to avoid minor injuries. Make sure to power off your phone completely and disconnect from any external power source prior to beginning this guide.



### TOOLS:

 
 
- [T6 Torx Screwdriver](#) (1)
  - [iFixit Opening Tool](#) (1)
-

## Step 1 — Button Pad



- Open the phone to expose the keyboard.
- Use the opening tool to remove the call, send, end buttons, and the plastic keypad covering (use moderate force).

## Step 2

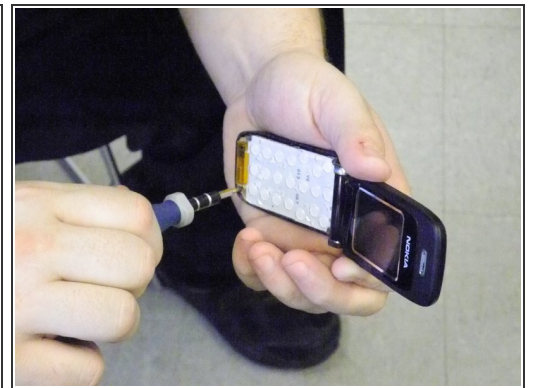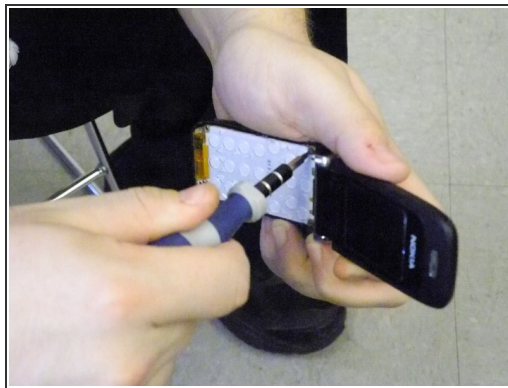

- Use a T6 screwdriver to remove the four screws (one from each corner of the keypad).



### Step 3



- Carefully lift and remove the keypad.

To reassemble your device, follow these instructions in reverse order.