

Lenovo Flex 6-11IGM Back Panel Replacement

How to replace the back of my Lenovo Flex 6-11IGM (model #: 81A70005US). How to replace the cracked back side of my Lenovo Flex 6-11IGM.

Written By: Juan Palominos JR



INTRODUCTION

If your Lenovo Flex 6-11IGM (model #: 81A70005US) has a back panel that is cracked or dented, use this guide to replace the back panel (bottom panel).

The back panel keeps the inner components of the laptop from foreign liquids and hard surfaces the laptop may encounter that could cause damage to the device. A damaged back panel could compromise the protection and safety of the inner components, therefore making it easier for the device to break.

Before beginning, make sure you power off the device, and make sure the laptop is closed for an easier and safer replacement.

TOOLS:

- iFixit Opening Tools (1)
- Phillips #00 Screwdriver (1)

Step 1 — Back Panel



• Flip the device over and lay it down with the underside facing upwards.

Step 2




Remove the ten screws with a Phillips #00 screwdriver.

Step 3



 Using a plastic opening tool, make your way around the edge of the laptop.

Step 4

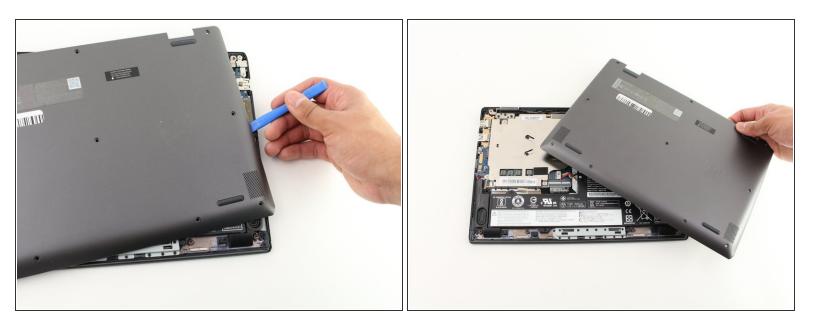

• After making sure the back panel is completely free from the body, remove the back panel.

To reassemble your device, follow these instructions in reverse order.