



Acer Chromebook CB5-132T-C8ZW Battery Replacement

A step by step guide to removing the battery in the Acer Chromebook CB5-132T-C8ZW.

Written By: Lauren Reichenbach



INTRODUCTION

If your Acer Chromebook CB5-132T-C8ZW [will not turn on even if the device is charged](#), use this guide to replace the battery.

The battery powers the Chromebook. A non-functioning battery will not hold power, no matter how long the device has been charged.

Before beginning, make sure the Chromebook is disconnected from any external power source; then press and hold the power button for at least five seconds prior to dismantling in order to release any stored energy that could potentially be harmful.

In some extreme cases, the battery may swell if damaged. Do not touch swollen or punctured batteries. Place the battery or device in a non-flammable material like kitty litter or sand as soon as possible. You can also place the battery or device in a clear plastic bag and take it to a local municipal household hazardous waste recycling center.



TOOLS:


- [iFixit Opening Tools](#) (1)
 - [JIS #1](#) (1)
-

Step 1 — Battery



- Remove eleven 7.2 mm screws from the bottom of the Chromebook using a JIS #1 screwdriver.



Step 2

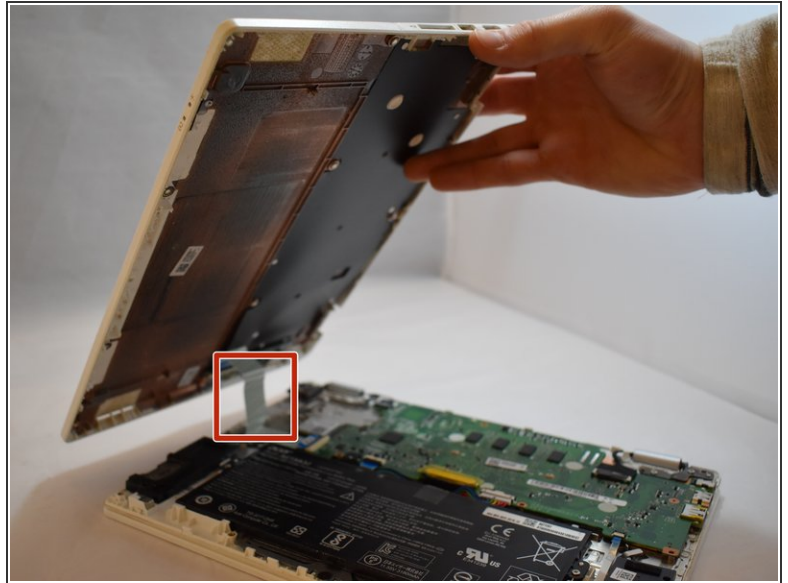

- Insert and slightly twist a plastic opening tool to separate and remove the backing of the Chromebook from the body.


⚠ Do not immediately remove the back from the laptop. The power strip keeps the backing attached to the rest of the laptop. Gently lift backing from the power button side and set next to the body of the laptop.

Step 3

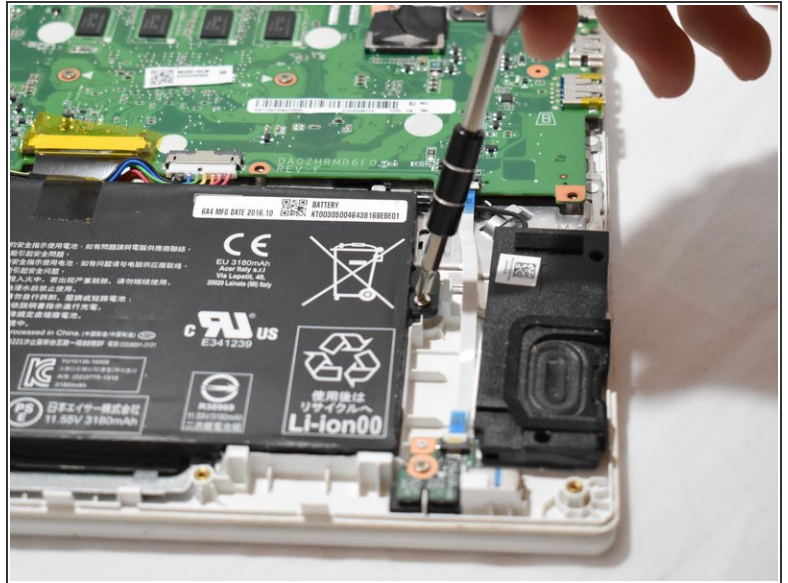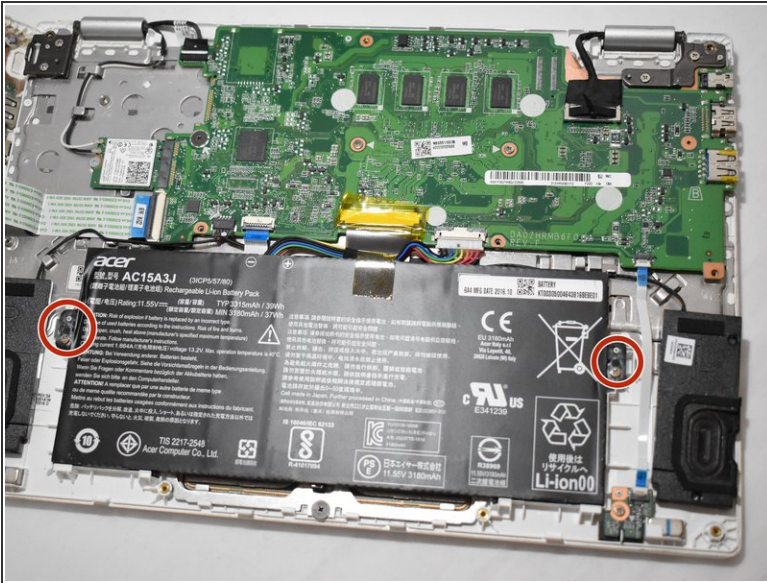

- Remove two 4.6 mm JIS # screws at each end of the battery.

Step 4

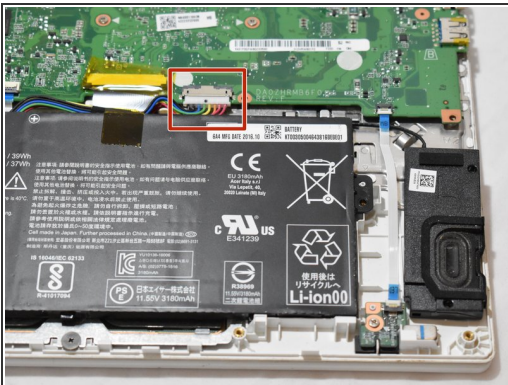

- Carefully pull out the ribbon cable attached to the motherboard that runs wires to the battery.
- Remove the battery.

To reassemble your device, follow these instructions in reverse order.