


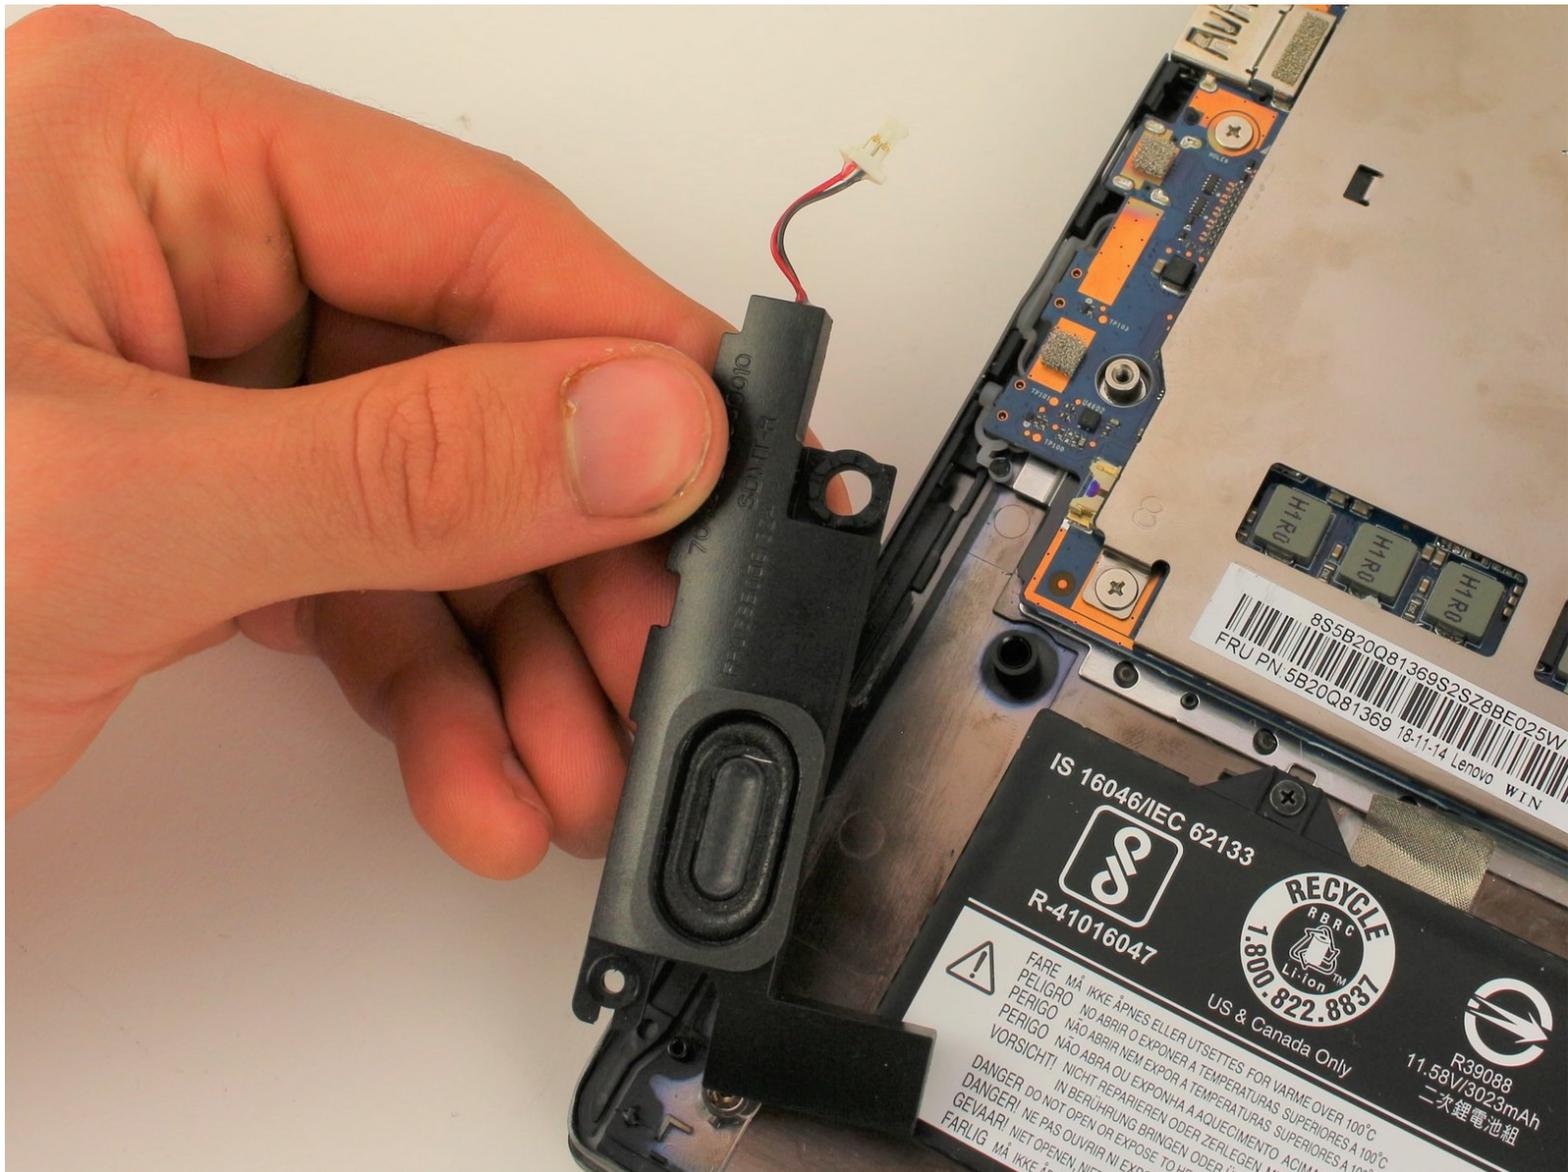

# Lenovo Flex 6-11IGM Speaker Unit Replacement

This guide will help you replace the speakers in the Lenovo Flex 6-11IGM (model #: 81A70005US) if they are faulty.

Written By: Juan Palominos JR



This document was generated on 2020-11-28 07:55:48 AM (MST).

## INTRODUCTION

If your Lenovo Flex 6-11IGM (model #: 81A70005US) has faulty speakers, use this guide to replace the entire speaker unit.

The speakers in your laptop take in electrical inputs and translate them into vibrations which emulate sounds from your device. The connecting wires which transmit to the speakers can sometimes fail, leading to malformed signals or in worst case scenarios, no signal at all. In this case, you will need to solder new wires to the speaker, or replace the entire part.

Before beginning, make sure you power off the device and make sure the laptop is closed for an easier and safer replacement.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Back Panel



- Flip the device over and lay it down with the underside facing upwards.

## Step 2



- Remove the ten screws with a Phillips #00 screwdriver.

### Step 3



- Using a plastic opening tool, make your way around the edge of the laptop.

### Step 4




- After making sure the back panel is completely free from the body, remove the back panel.

## Step 5 — Speaker Unit



- For the right speaker, disconnect the wire using the iFixit opening tool.
- Pull the speaker out.

## Step 6

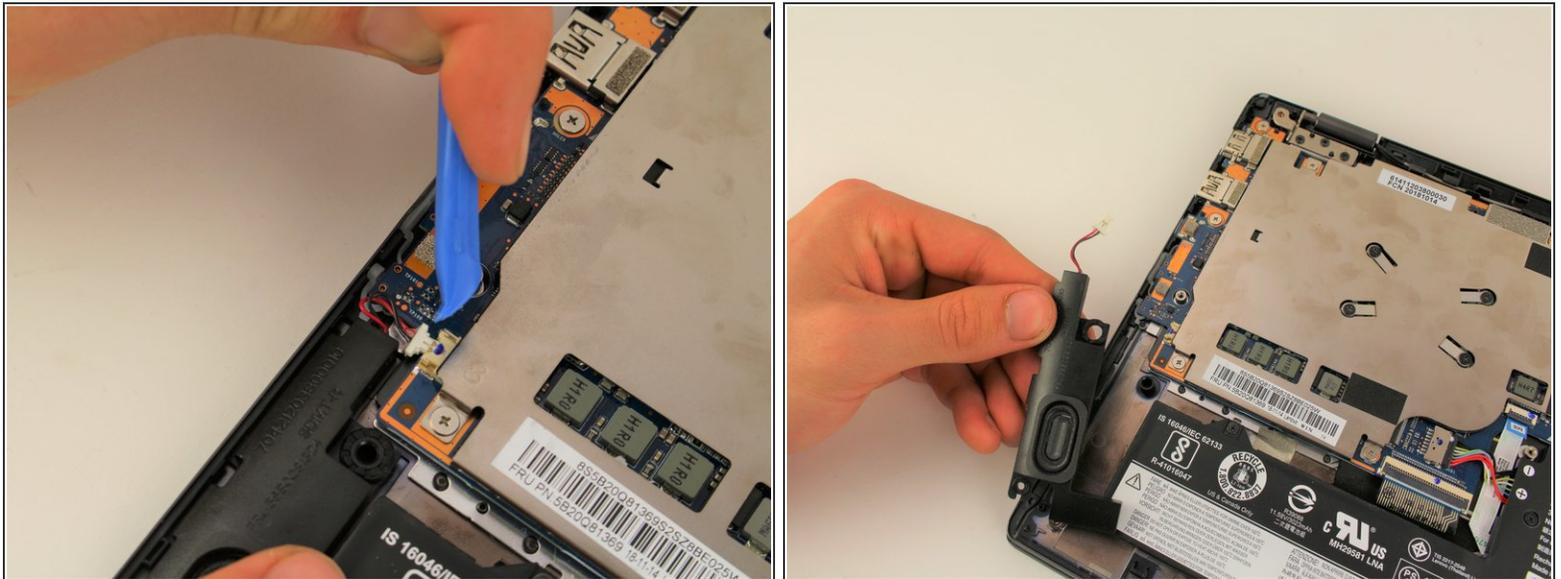

- For the speaker on the left, disconnect the wire using the iFixit opening tool.
- Pull the speaker out.

To reassemble your device, follow these instructions in reverse order.