



Dell Latitude E7270 Battery Replacement

This guide will give you the necessary information to remove the battery for the Dell Latitude E7270.

Written By: Jacob Clement



INTRODUCTION

Use this guide to replace a broken battery on your Dell Latitude E7270 or to safely remove and replace other components without causing further damage.

The battery is the power bank that gives power to each component in the computer. After time they become inefficient or incapable of holding a charge at all. A bad battery can also get extremely hot under normal use. This can cause your computer to shut off without warning.

Before using this guide, check out the [troubleshooting page](#) to see if your symptoms match any that represent a bad battery.

You can also use this guide to upgrade the battery instead of using the original battery.

This replacement requires a #00 Phillips head screwdriver.

NOTE: This guide requires removal of the back panel and includes the extra prerequisite guide steps.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

 
Step 1 — Back Panel



- Place the device top down in front of you so that the vents are visible and are furthest from the user.

⚠ Please be sure that the device is powered off and unplugged before removing parts or deconstructing anything.

Step 2

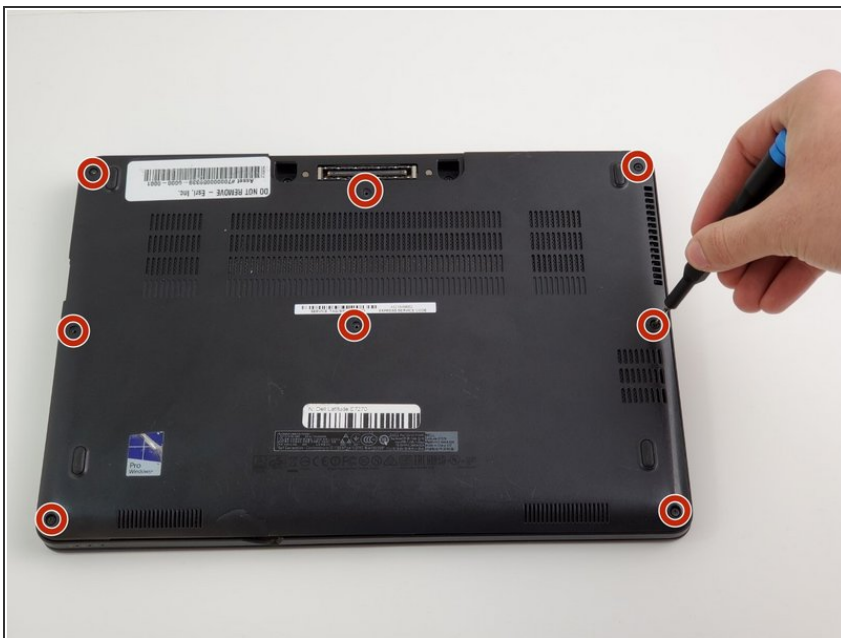


- Remove all eight M2.5 X 8MM screws with a Phillips #00 screwdriver.

Step 3



- Lift and remove the panel.

Step 4 — Battery

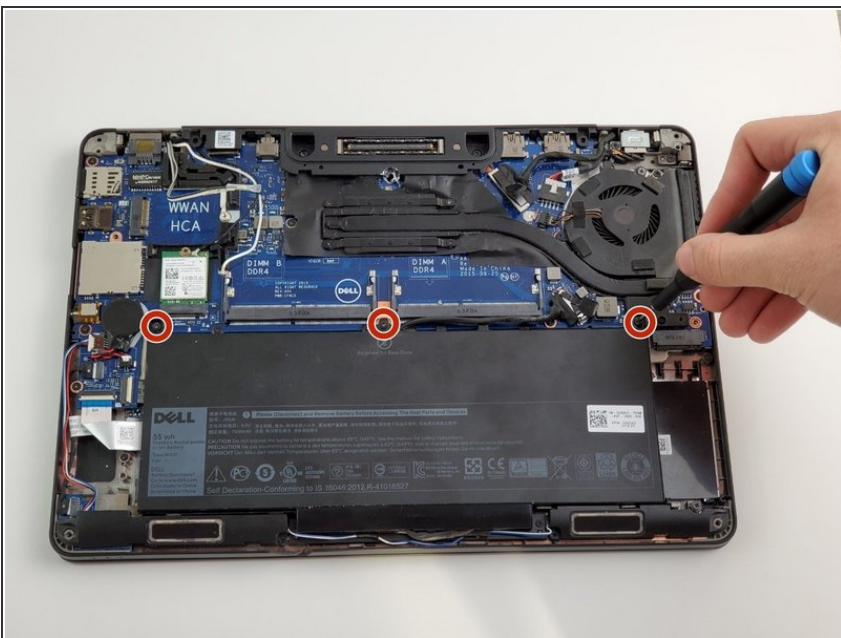


- Remove the three M2.5 X 5MM screws, located above the battery, with a Phillips #00 screwdriver.

Step 5



- Disconnect the battery wire by using your fingers to pull diagonally left on the tab.

 Step 6

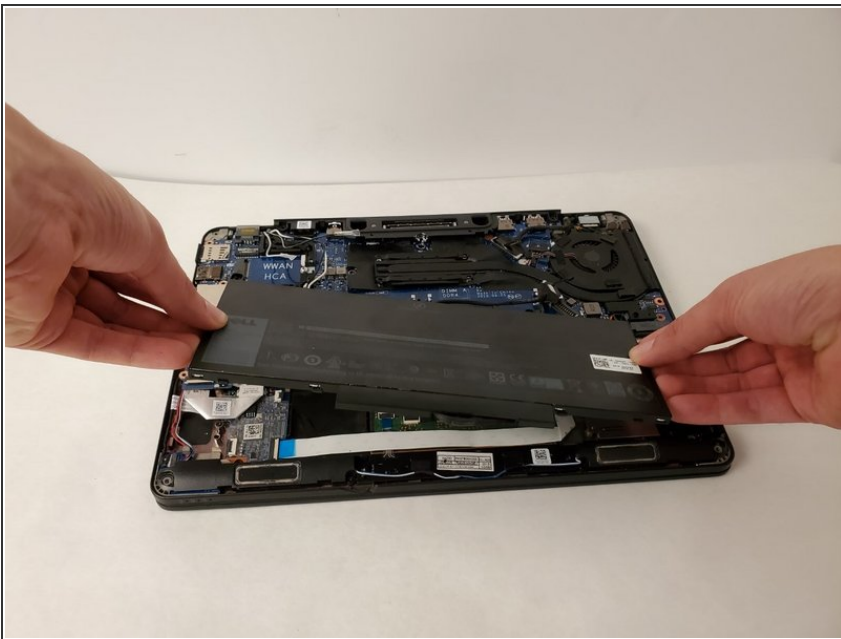

- Remove the battery completely by grabbing an edge and pulling up on the battery.

To reassemble your device, follow these instructions in reverse order.