



# Acer TravelMate P653-V-6882 Keyboard Replacement

Keyboard replacement guide for the Acer TravelMate P653-V-6882.

Written By: Daniel Popovic



---

## INTRODUCTION

If your Acer TravelMate P653-V-6882's keyboard is still not responding after restarting the device and/or updating the keyboard drivers, then your keyboard may need to be replaced or reconnected.

Here is the guide on how to replace the TravelMate's keyboard.



### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Battery Pack



- Turn the computer over so the base is facing up.
- Slide the battery lock to unlock position.

## Step 2




- Slide the battery release latch to the right.
- ⓘ The battery pack will pop out.

### Step 3



- Lift the battery up.
- Pull out the battery.

### Step 4 — Base Door

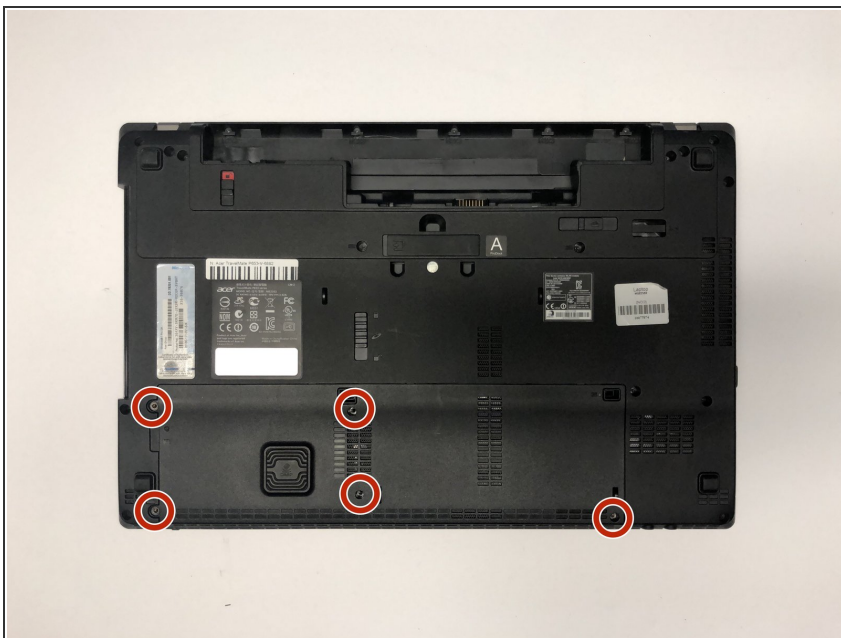

- Remove the five 7mm Phillips #1 screws.




## Step 5



- Use the opening tool to separate base door from the bottom of the laptop.

⚠ Be careful not to bend or crack the plastic back cover.

## Step 6

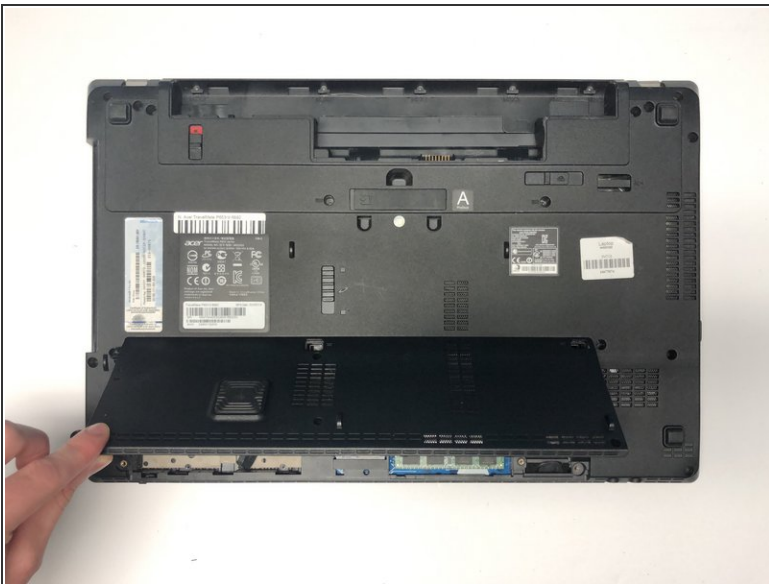

- Gently pry open the base door by pushing up.
- Pull out the base door.

⚠ Be careful not to bend or crack the plastic back cover.

## Step 7 — Keyboard



- Remove the two 7mm Phillips #1 screws.

## Step 8



- Flip the laptop so that the underside is now facing the bottom.
- Open the LCD panel.
- Use the flat end of a spudger to push in the six latches.
- ⚠ Be careful not to bend or crack the keyboard.

## Step 9



- When the latches are pushed in, the keyboard will pop out.
- Gently pry up the keyboard.
- ⚠ Be careful not to bend or crack the keyboard.

## Step 10



- Slide the keyboard forward to access the keyboard cable.
- Flip the connector latch up to open it.
- Pull out the keyboard cable gently.
- ⚠ Be careful not to damage the connector.

To reassemble your device, follow these instructions in reverse order.