




Maylong MN-1000P Screen Replacement

How to replace a Maylong MN-1000P screen.

Written By: katelyn buckman

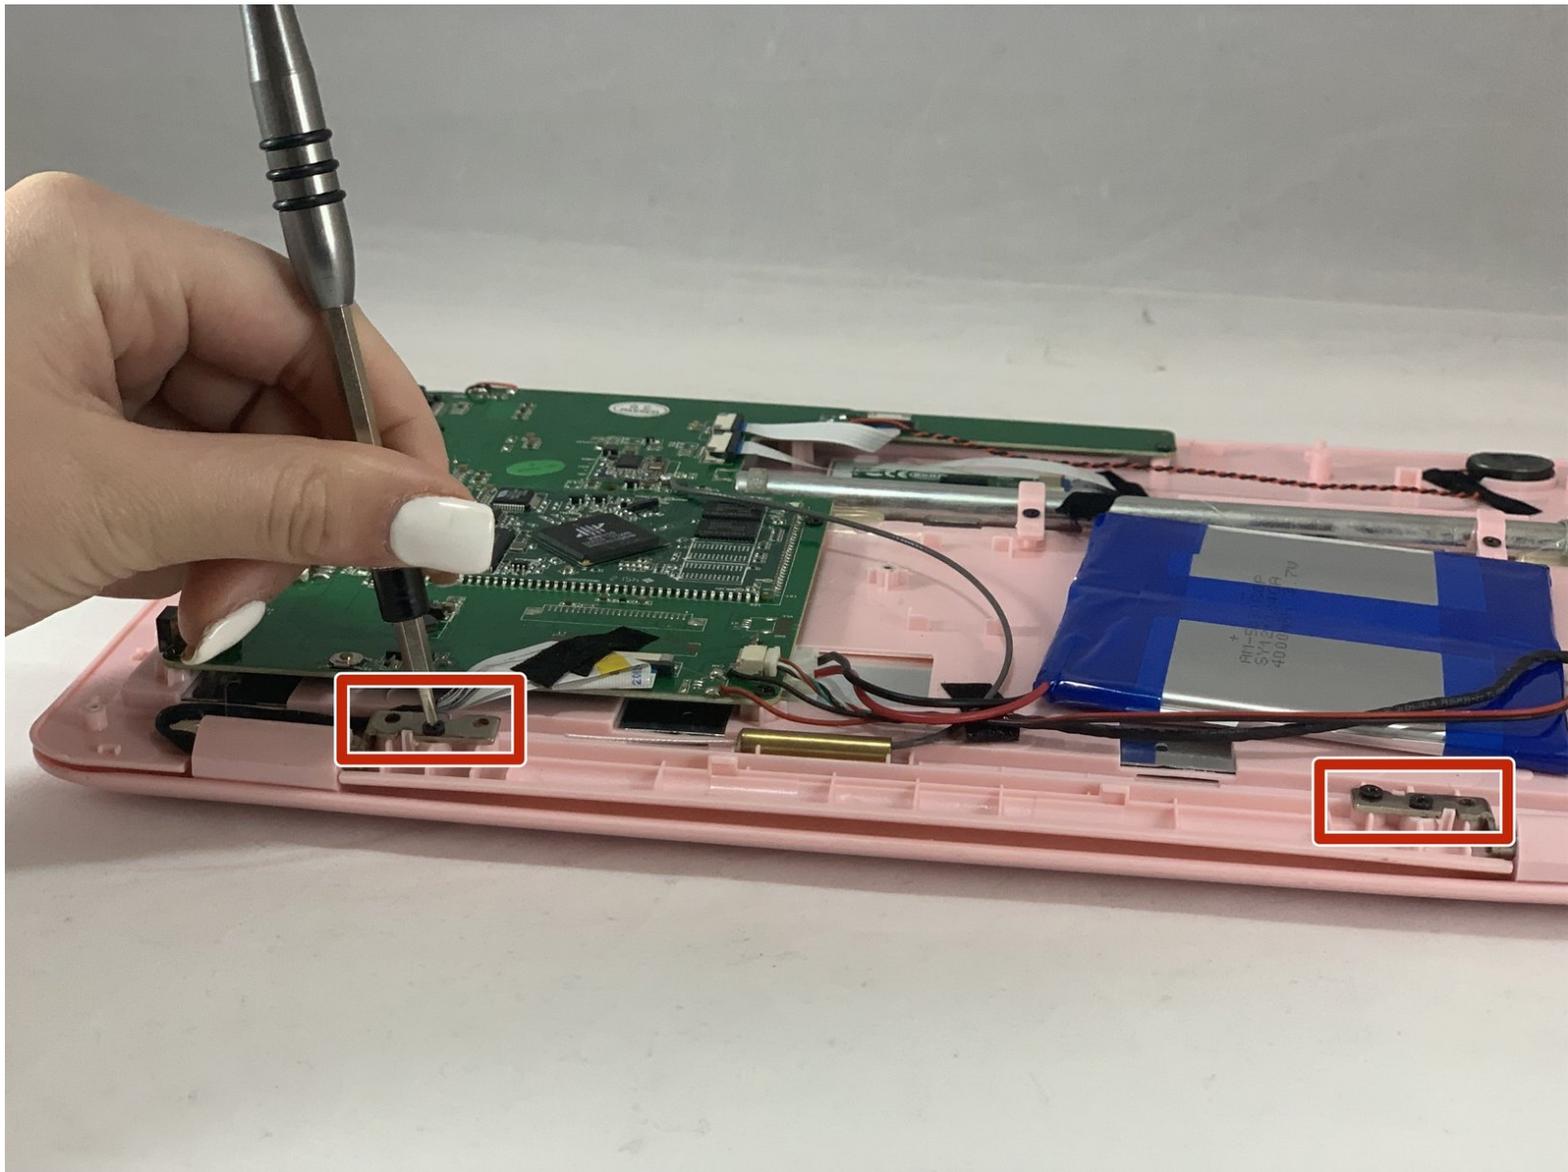

INTRODUCTION

The screen can become cracked or broken if the Maylong MN-1000P has been dropped, or in some cases, a screen may have dead areas making it difficult to use. A screen is relatively easy to replace.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Bottom Cover



- Place the netbook top down, with the opening of the netbook facing you.

Step 2



- Remove the six 6mm Phillips #00 screws from the netbook.

Step 3



- Remove the sticker in the middle of the netbook.
- Remove the middle 6mm Phillips #00 screw.

Step 4





- Using two plastic opening tools, pry off the bottom of the netbook by going around the edges.

Step 5




- Remove the bottom of the netbook by lifting the corners.

Step 6 — Battery

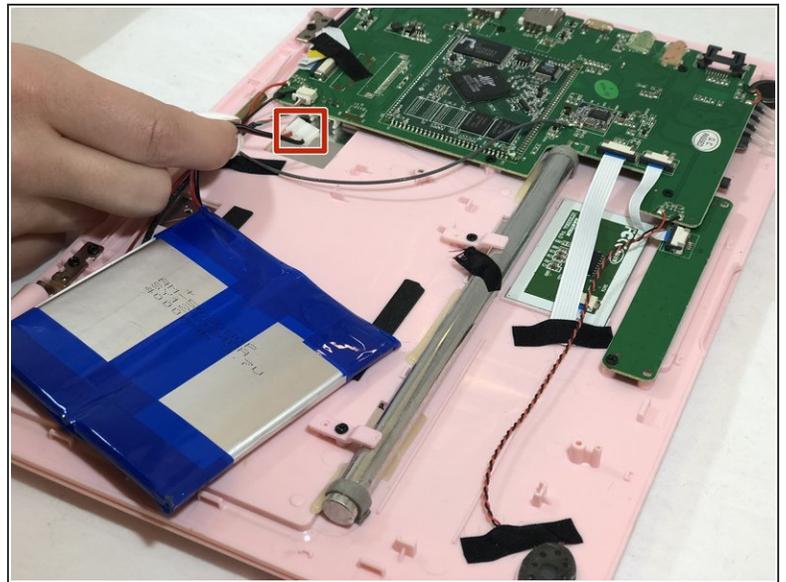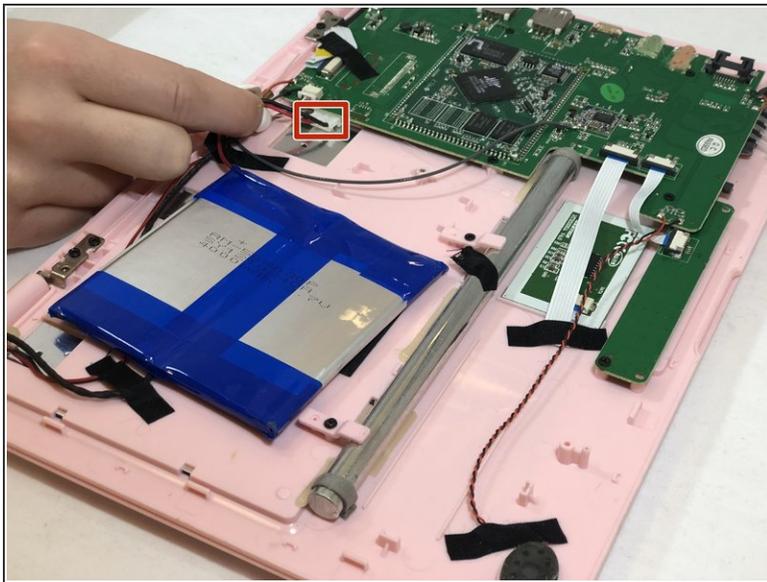


- Pinch the red and black wires connected to the section closest to the small white connector, and pull to remove them from the motherboard.

Step 7 — Screen

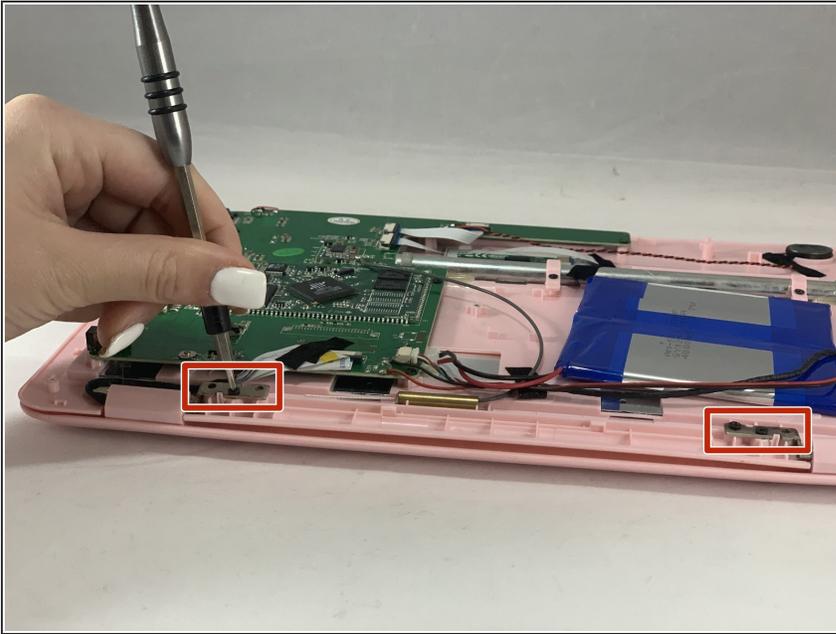

- Remove the six 6mm Phillips #00 screws from both sides of the netbook.

Step 8

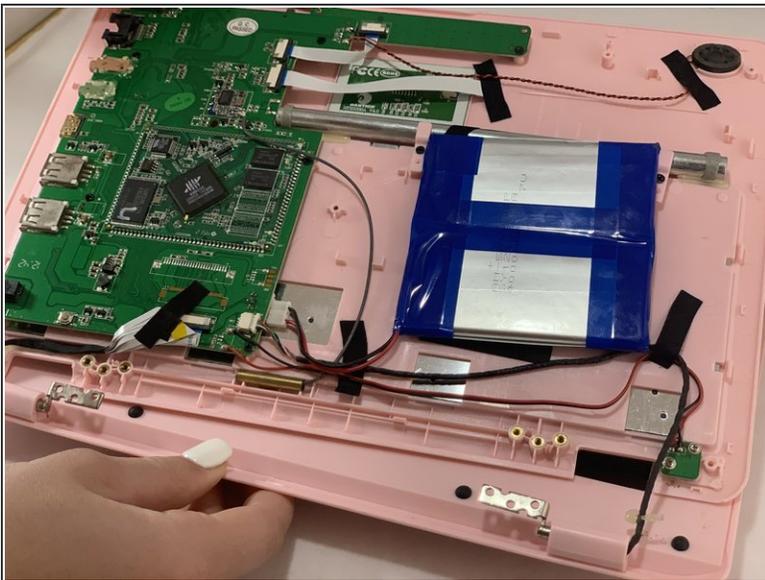

- Pull the top of the computer and the back side of the computer away from each other until they are detached.
- Flip the entire computer over so you can see both the screen and keyboard.

Step 9



- Remove all the black circular pads from around the screen.
- Remove all 6mm Phillips #00 screws from around the screen bezel.

Step 10



- Using a plastic opening tool, pry off the screen bezel.
- After detaching the screen bezel, pull up on the bezel near the hinge area.

Step 11




- Use tweezers to gently pull on the black and white wires at the top of the netbook until the white connector detaches.

Step 12




- Use your fingers to pull on the green, red, black, and white intertwined wires at the bottom of the netbook until the white connector detaches.

Step 13

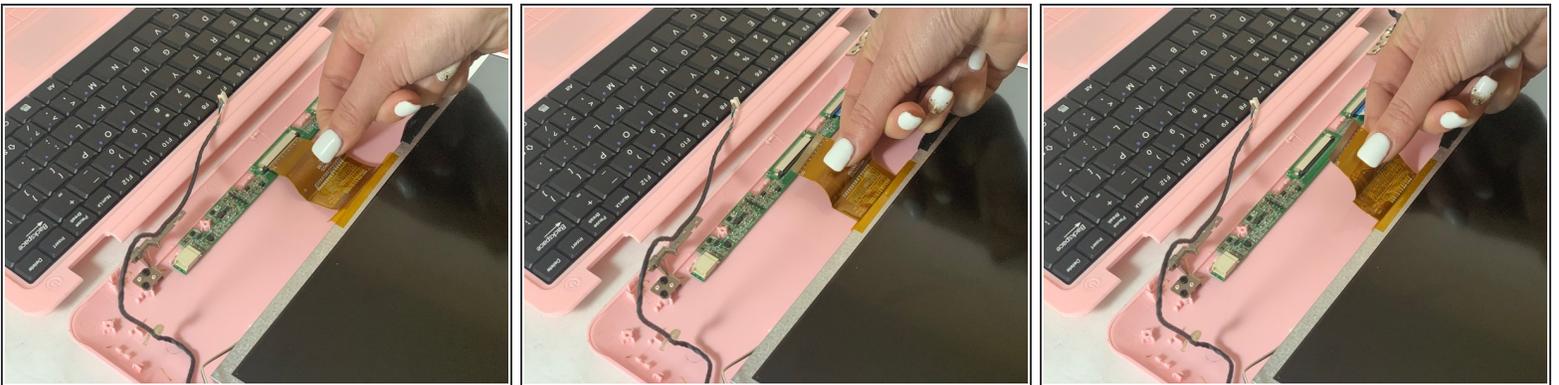

- Detach the wide yellow ribbon cable connected to the screen from the computer.

Step 14

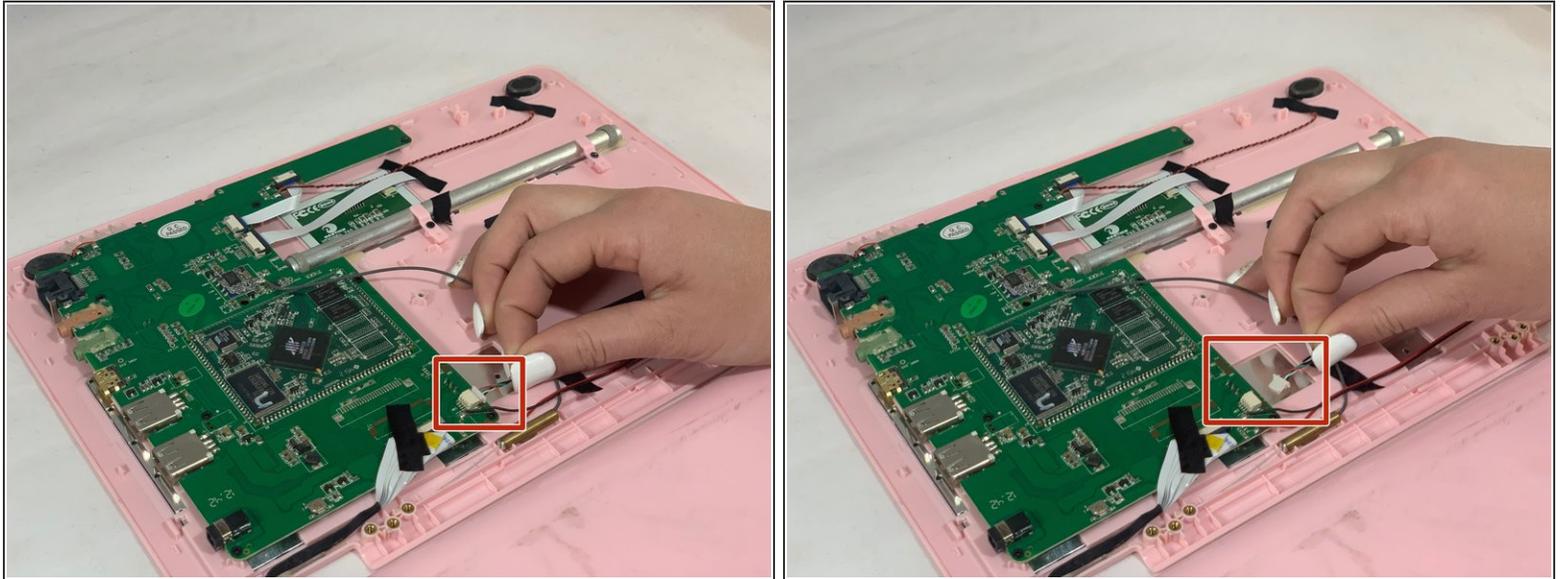

- Flip the computer over.
- Disconnect the red, green, black, and white intertwined wires from the connector to the motherboard.

Step 15



- Remove the black tape holding down the red, green, black, and white intertwined wires.
- Remove the screen.

To reassemble your device, follow these instructions in reverse order.