



Hover-1 Rally Headlight Replacement

How to replace the headlight on a Hover-1 Rally electric scooter.

Written By: Cami Lowrey



INTRODUCTION

If the headlights of your Hover-1 Rally (model H1-RALY) scooter do not turn on or are dim, use this guide to replace them. Damaged wires or a burnt out bulb may be the cause of the faulty headlights. These components are easy to fix.

Step 3 requires you to remove two wires from the headlight. This will require you to [desolder the wires](#) in order to detach them.

Make sure to power off the scooter before beginning this guide.



TOOLS:

- [5 mm Hex Key](#) (1)
 - [Soldering Iron](#) (1)
 - [Desoldering Braid](#) (1)
 - [Solder](#) (1)
-

Step 1 — Headlight



- Remove four 5 mm screws with a 5 mm hex key.

✦ When reinstalling, gently tighten each screw simultaneously to apply equal pressure on both sides of the casing.

Step 2



- Apply pressure to both ends of the headlight to remove it from the scooter.

⚠ Be gentle. You will feel some resistance due to the glue that is used.

Step 3



- Once the headlight is loose from the scooter, disconnect the two wires using a soldering iron.
- ⓘ Use [this soldering guide](#) for tips on using a soldering iron.

To reassemble your device, follow these instructions in reverse order.