



HP Pavilion 14-bk061st Battery Replacement

This guide will teach you how to remove the battery from the HP Pavilion 14-bk061st.

Written By: Helen Yang



INTRODUCTION

This guide will teach you how to remove and attach the battery in the HP Pavilion 14-bk061st. The battery supplies the power to the device even when the charger is not attached. Batteries are usually rechargeable.

As a note before starting this guide: check the battery for any defects as it can overheat and start an explosion if it is damaged. Check the [troubleshooting page](#) to see if the issue can be solved without having to open up the computer.



Remember to power off the computer, as well as disconnect all external components that are plugged into it.



TOOLS:


- [JIS #1](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Back Panel

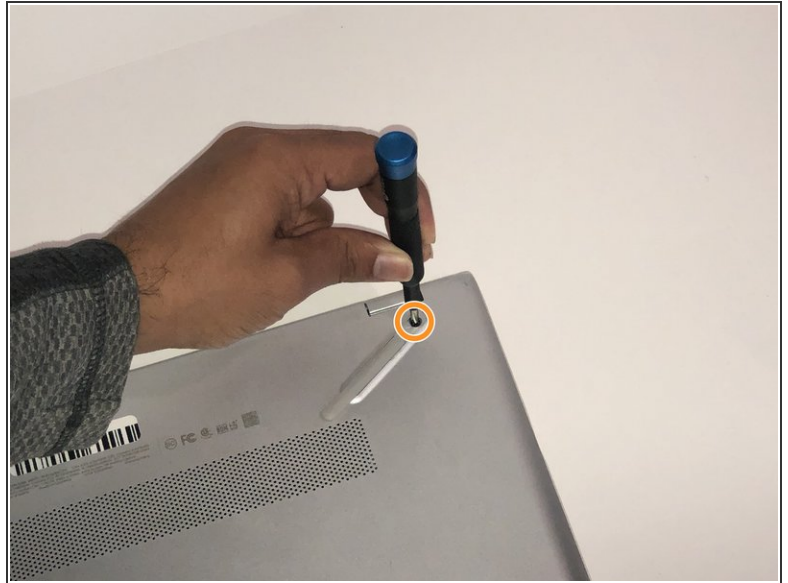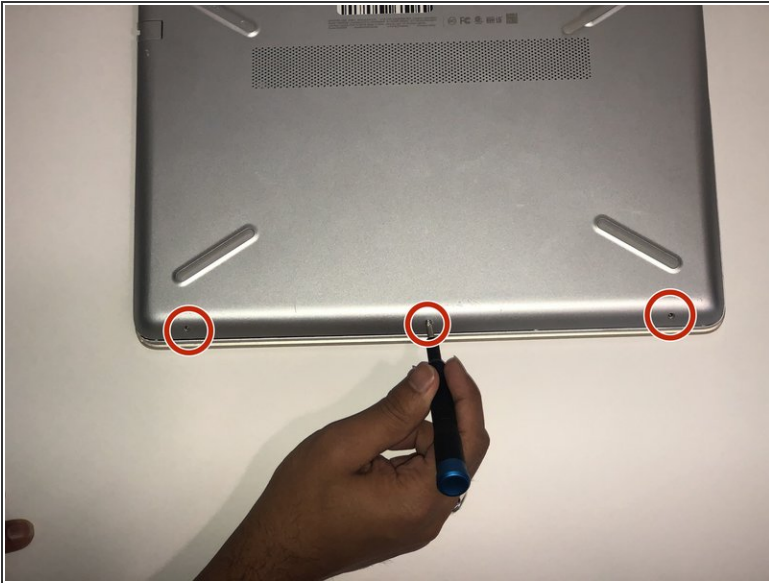

- Remove the three 5.7 JIS #1 screws from the bottom of the laptop.
- Remove the two 6.7mm JIS #1 screws from underneath the feet of the laptop close to the exhaust vent.

Step 2

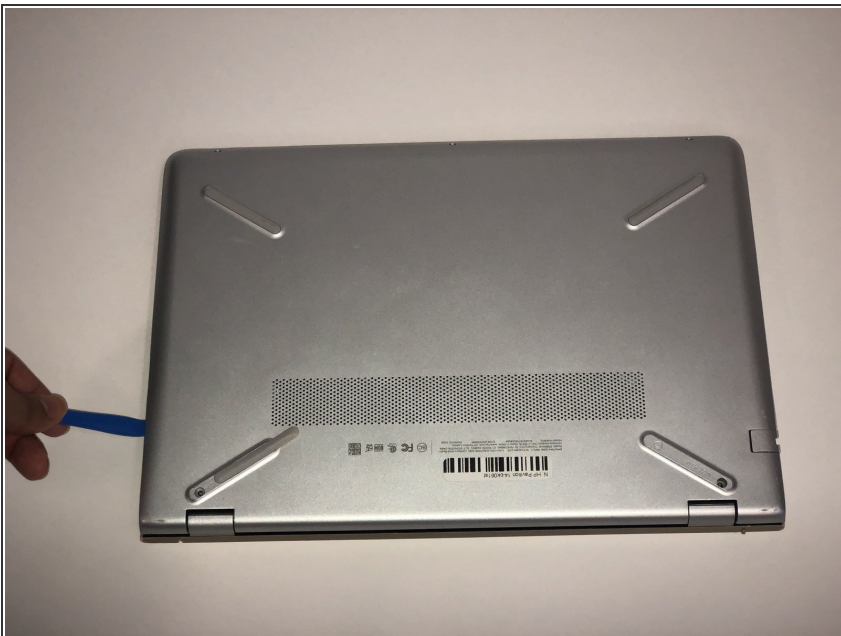


- Unclip the back plate using a plastic opening tool.

Step 3




- Carefully remove the back plate from the laptop.

Step 4 — Battery

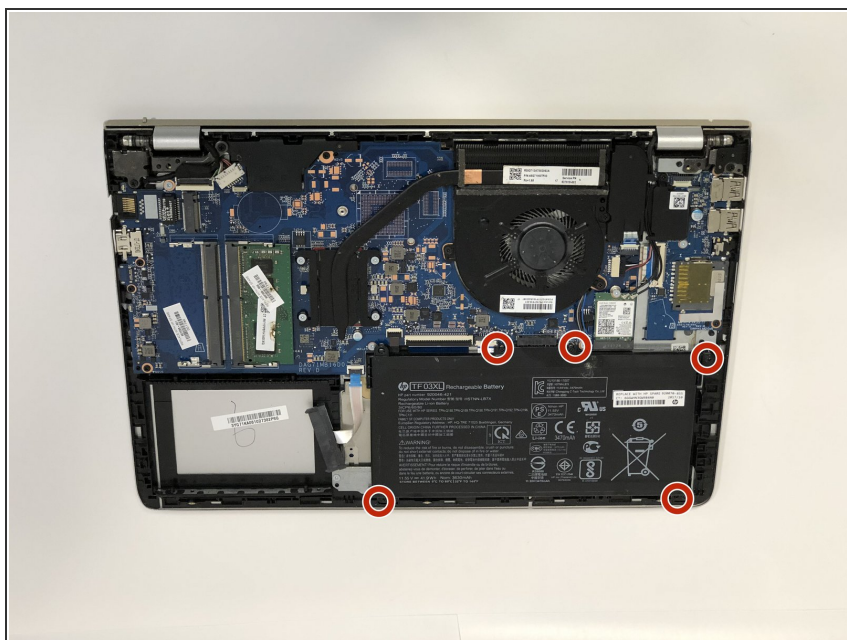

- Remove the five 5mm Phillips #1 screws surrounding the battery.

Step 5

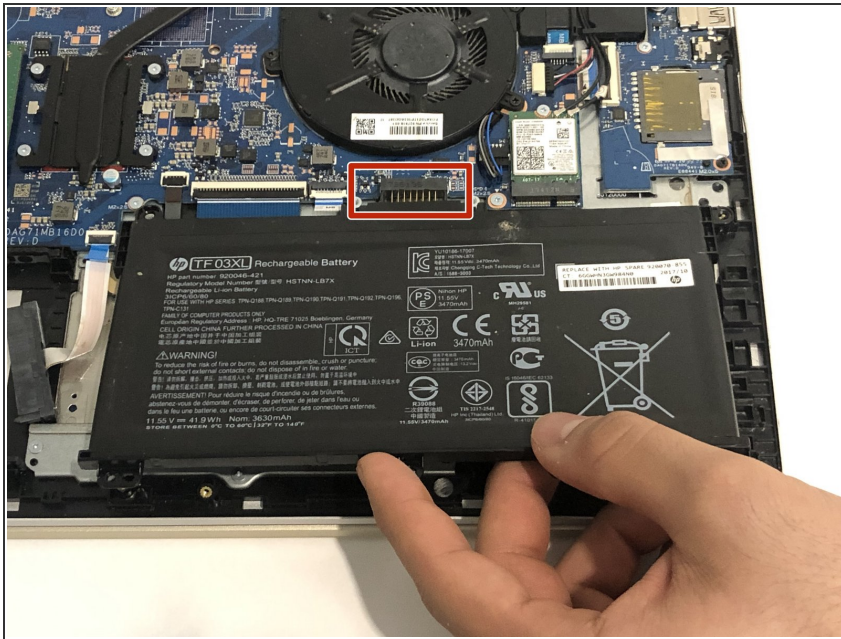

- Lift the battery up and away from the battery pins.

To reassemble your device, follow these instructions in reverse order.