



Panasonic SDR-H85 LCD Replacement

If your Panasonic SDR-H85 camcorder has...

Written By: Ying Liu



INTRODUCTION

If your Panasonic SDR-H85 camcorder has abnormal color on the display screen or cannot display pictures at all, you may have LCD damage.

Before using this guide, make sure to review the troubleshooting page. Determine if you need to replace the LCD and if your problem can be solved through the settings.

Make sure you remove the battery and disconnect the power before you start.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)

Step 1 — Battery



- Gently slide the battery eject button which is located underneath the battery and slide the battery out.

⚠ Once the battery is removed, you can safely dispose it and replace with a new one. Dispose battery at an authorized battery recycling center.

Step 2 — LCD Screen



- Use a Phillips #00 screwdriver to remove two screws from behind the corners of the display screen.

Step 3



- Open the case carefully. Make sure to disconnect the parts.

Step 4



- Use a Phillips #00 screwdriver to remove one screw on the green panel.

Step 5



- Disconnect the panel from the screen part.

To reassemble your device, follow these instructions in reverse order.