




Bear 1000 Fuse Replacement

Use this guide to replace the fuses in your Bear 1000 ventilator.

Written By: Eli Ferman

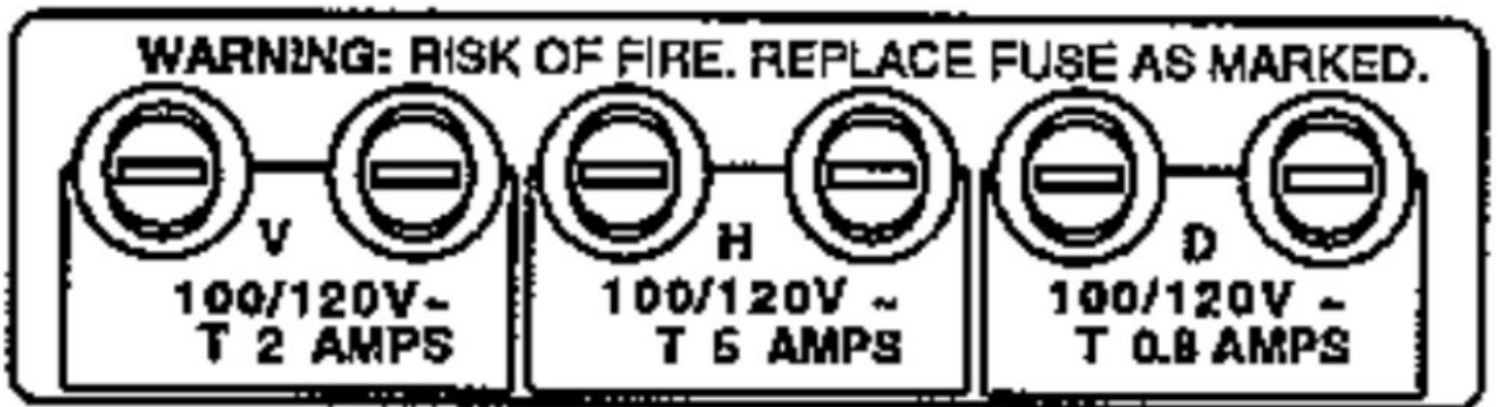

INTRODUCTION

This guide will walk you through the process of replacing a spent fuse in a Bear 1000 Ventilator. Found on page 89 in the full service manual.



TOOLS:

- [Flathead Screwdriver](#) (1)
-

Step 1 — Fuse



- Use a screwdriver to push in and turn the fuse holder counterclockwise until it disengages.

Step 2



- Retain the cap which holds the fuse, and replace the fuse in the cap with a new appropriately rated fuse.

Step 3



- Insert the cap back into the ventilator.

Step 4



- Using a screwdriver, press it in, and rotate it clockwise.

To reassemble your device, follow these instructions in reverse order.