


Nikon CoolPix S5 Back Cover Replacement

This guide is to be used to install the back...

Written By: Patty Richeson

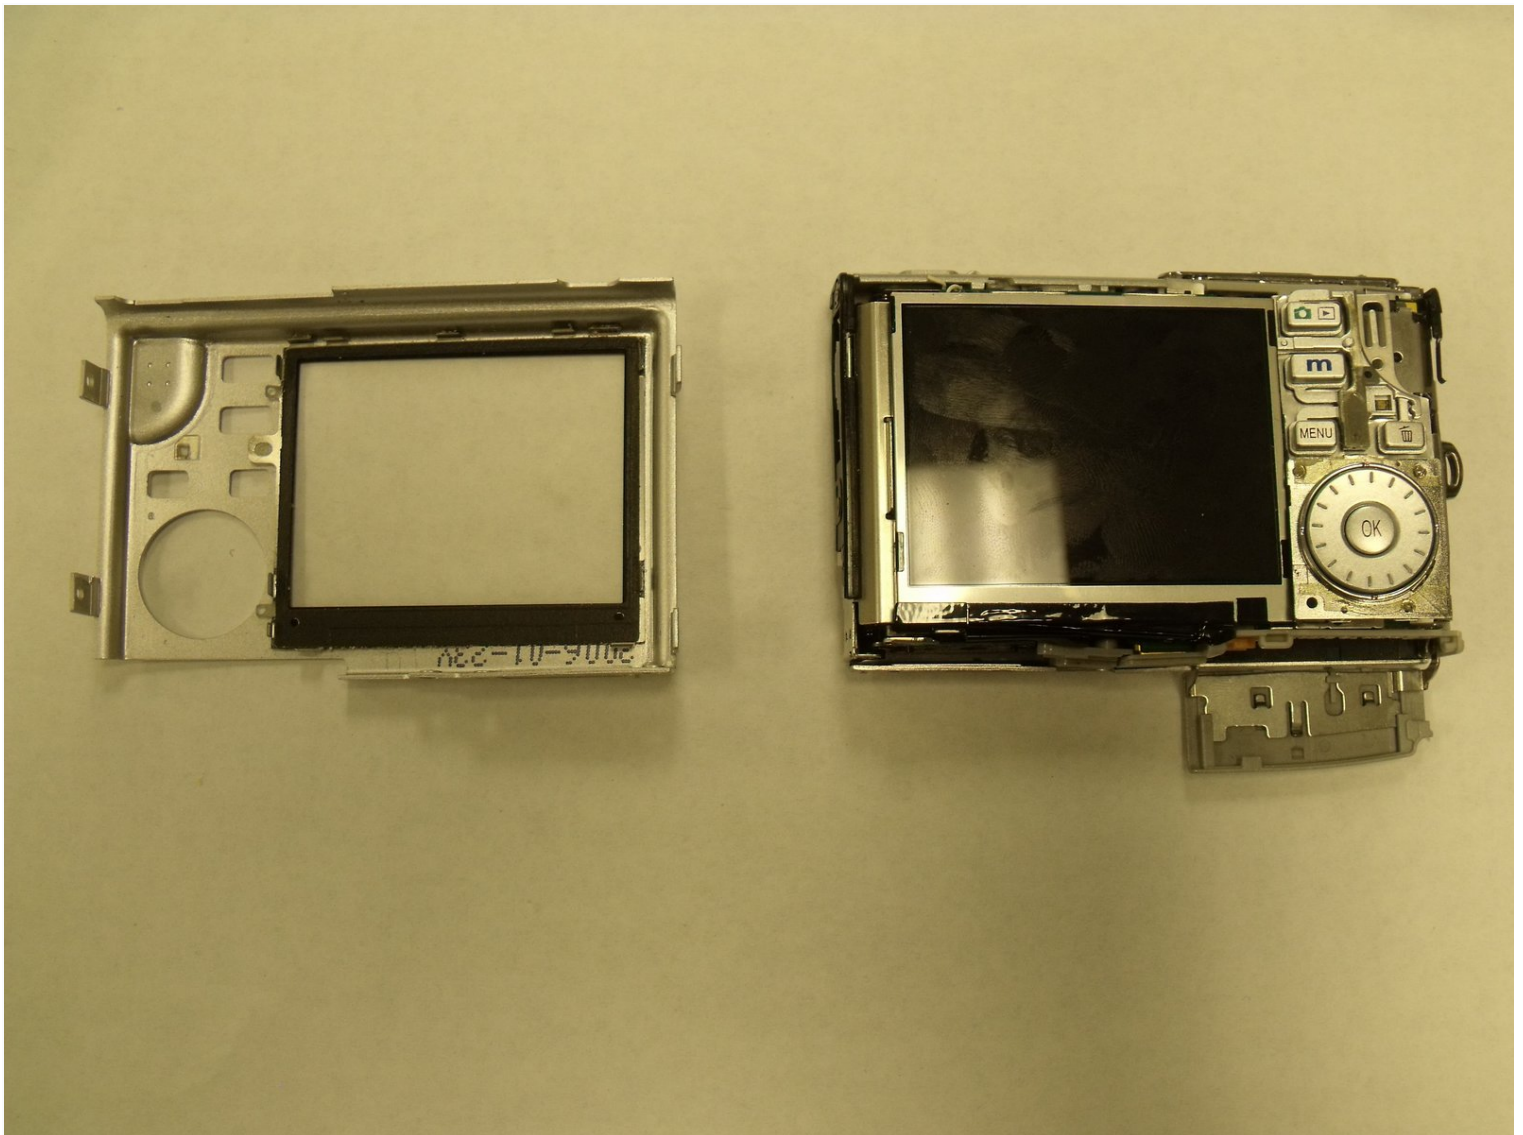


INTRODUCTION

This guide is to be used to install the back cover in the event that it becomes damaged. A Phillips screwdriver will be needed to complete this installation.

TOOLS:


Tournevis cruciforme #00 (1)

Step 1 — Back Cover

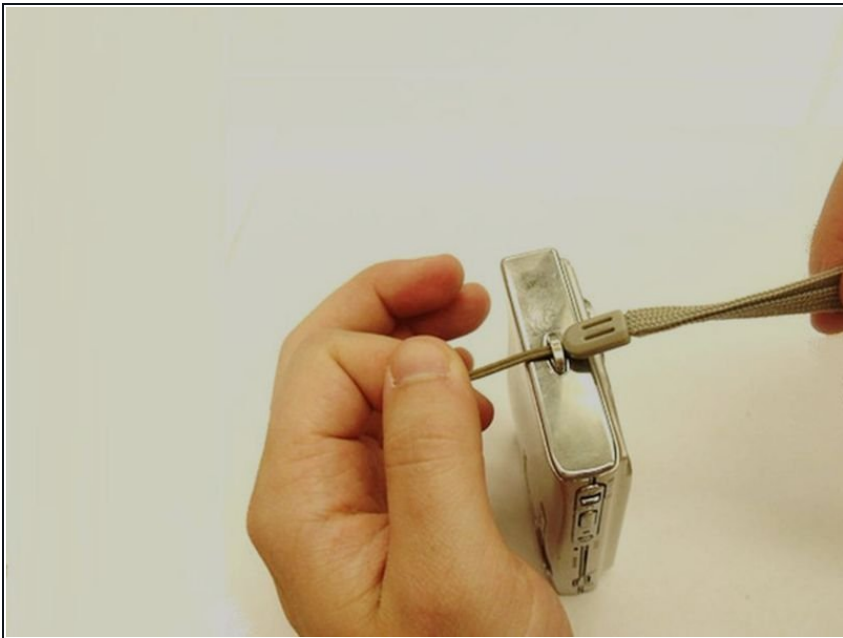


- Remove the wristlet by untying the strap.

Step 2

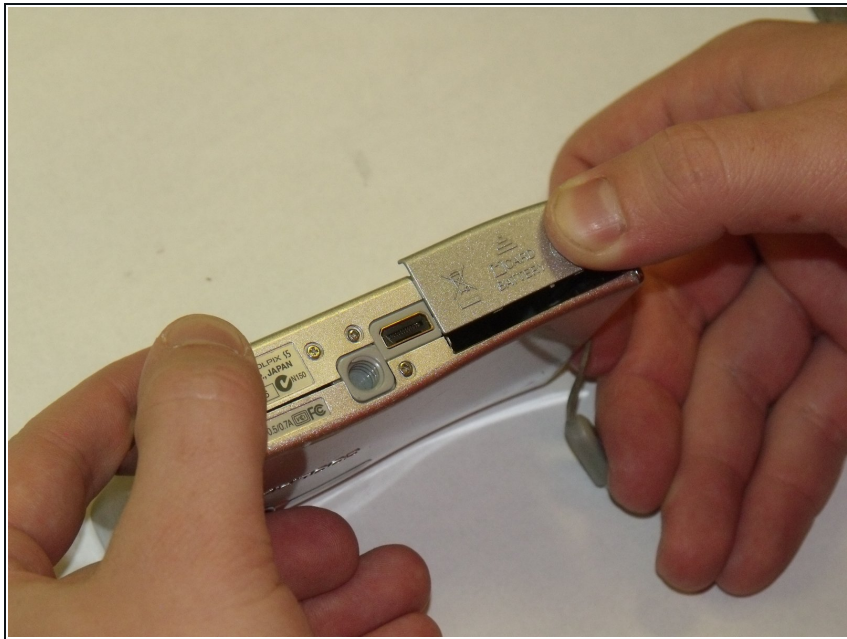


- Open the SD/Battery cover.

Step 3

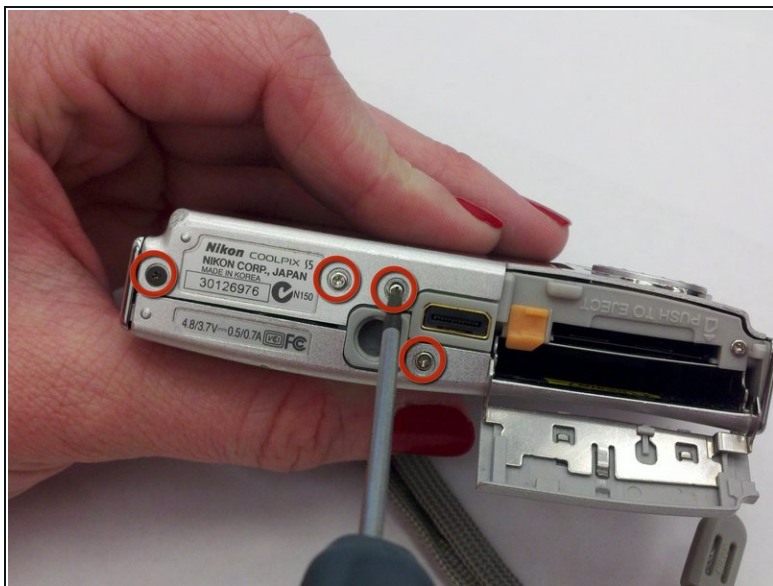

- Remove the four screws adjacent to the SD/battery opening using a Phillips #00 screwdriver.

Step 4

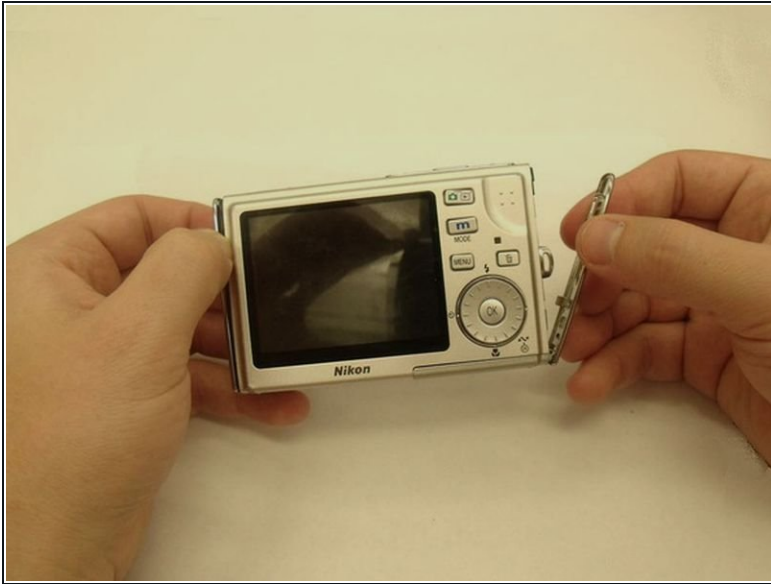


- Remove the side paneling of the camera by prying it off with your hands.

Step 5



- Start on the wristlet side of the camera and use the #00 Phillips screwdriver to remove the two screws that hold the backplate in place.
- Repeat the removal of the two screws on the other side of the camera.

Step 6

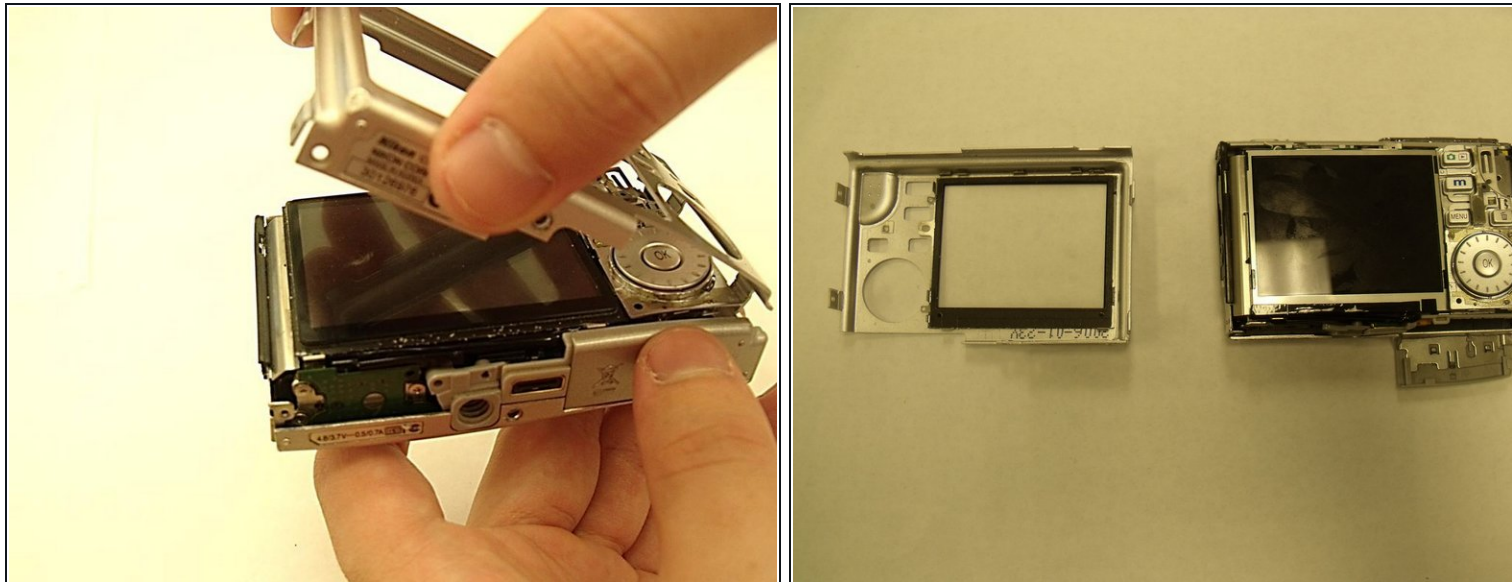

- Separate the back faceplate from the rest of the camera.

To reassemble your device, follow these instructions in reverse order.