




# Lenovo G575 Fan Replacement

A guide to replace the internal fan for a Lenovo G575 laptop in the case that it fails or is working poorly.

Written By: Samson Wong

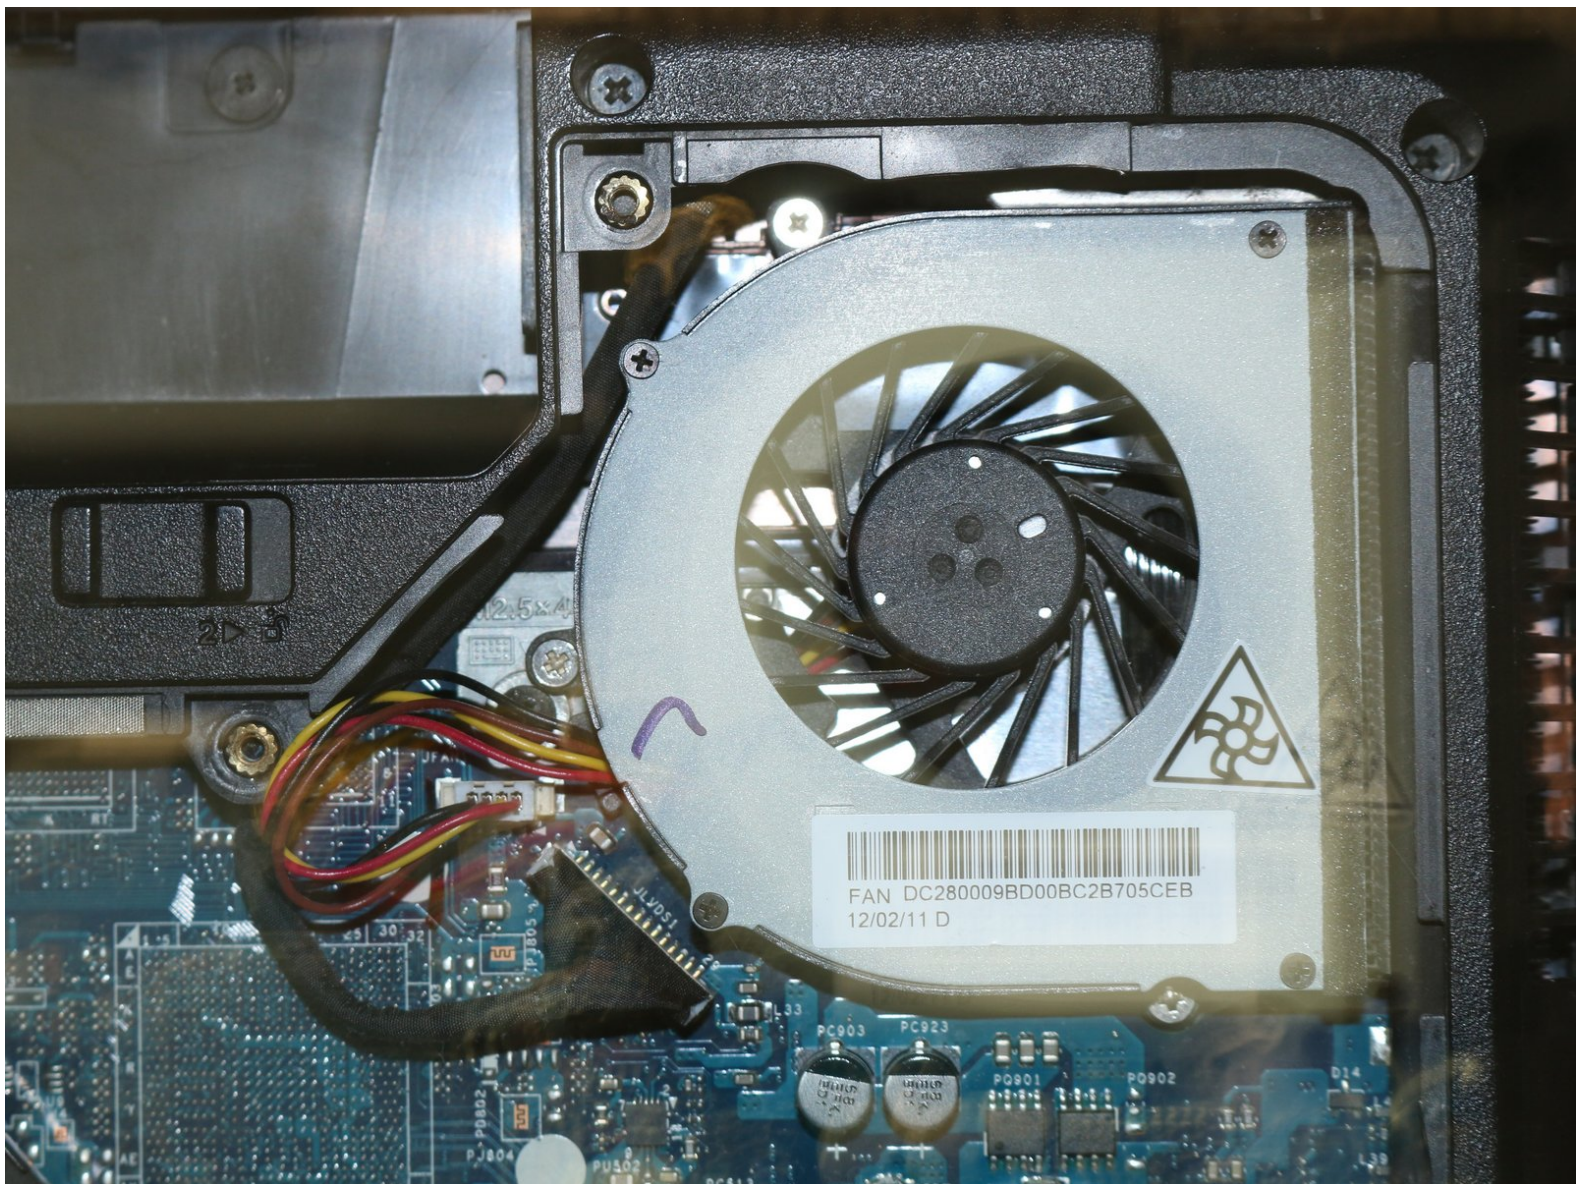




## TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-




## Step 1 — Fan

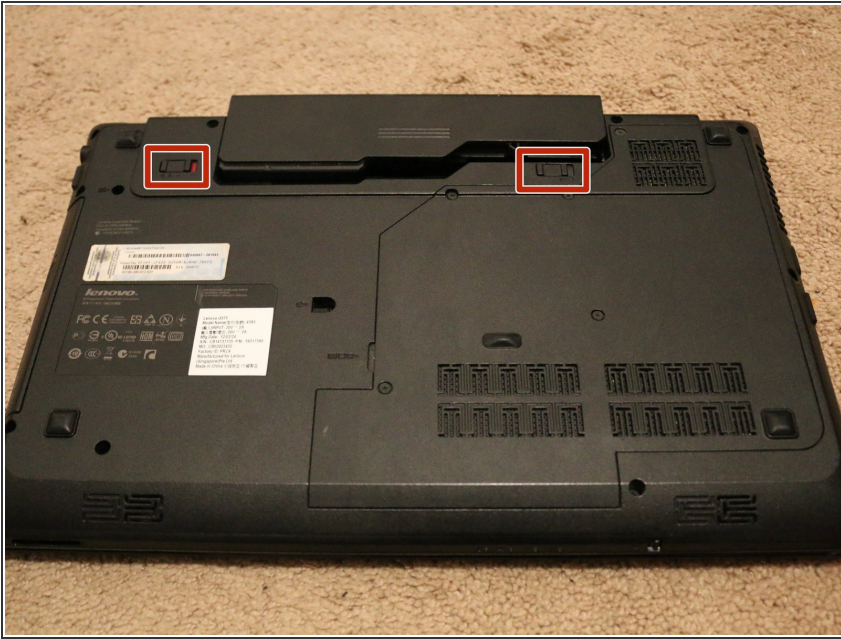


- Use the two switches to the left of and below the battery to unlock and release the battery.
- ⓘ The switch on the left should be moved to the left to unlock, then the switch on the right will release the battery.
- Remove the battery from the laptop by lifting it out from its bay.

## Step 2

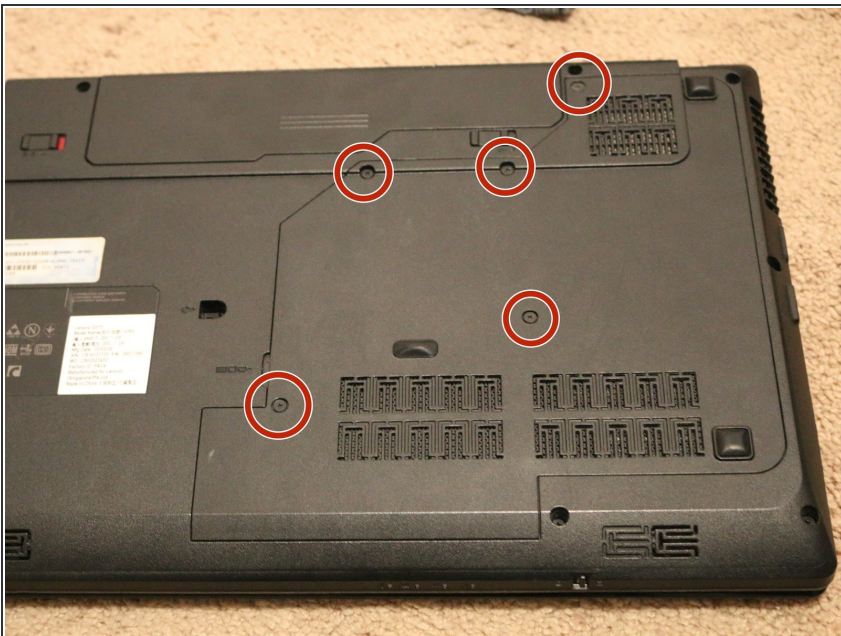

- Use a Phillips #0 screwdriver to remove the five screws from the service panel on the right side.
- Lift up the service panel.

## Step 3

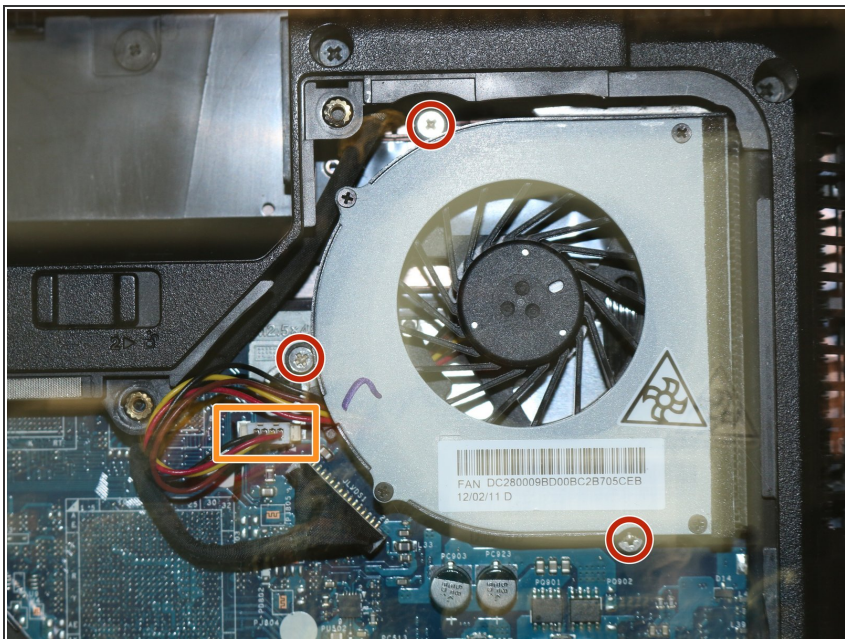

- Using a Phillips #0 screwdriver, remove the three silver screws holding the fan down.
- Pull out the fan cable from its connector on the motherboard.
- Lift the fan out of the case.

To reassemble your device, follow these instructions in reverse order.