



Logitech G700s Left and Right Mouse Button Disassembly

How to remove the top left and right mouse button clicker for modding

Written By: dennis97519



INTRODUCTION

How to remove the top left and right mouse button clicker for modding



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Top Case Replacement






- Remove the batteries from the mouse.
- Use a plastic opening tool to peel up the four mouse feet.

Step 2



- Remove the five 5.5mm Phillips #00 screws found underneath the mouse feet.

Step 3

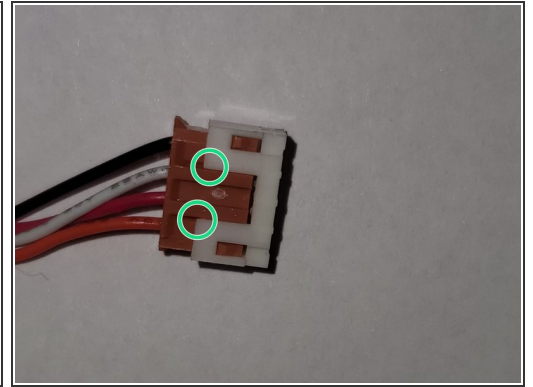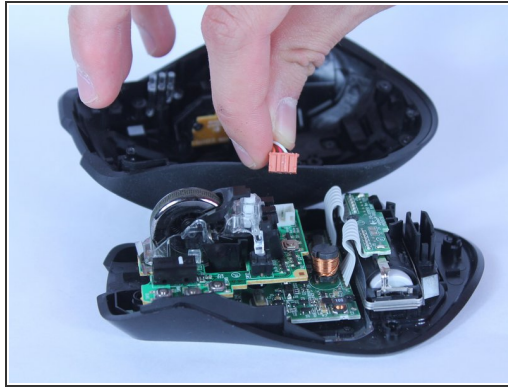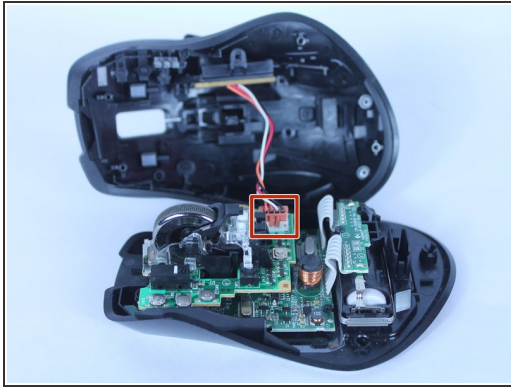


- Pull the top of the mouse off of the bottom half.
 - ⓘ There's a wire connecting the two halves.
- Unplug the programmable buttons from the motherboard.
 - ⓘ The white pin housing on the motherboard may come off while unplugging. In that case, use tool to pry between at location indicated to separate them and insert the housing back onto the motherboard.

Step 4 — Logitech G700s Left and Right Mouse Button Disassembly



- Pop the right button piston off the ledge thingy
 - Then pop the left button piston off
- i** It can take a bit of force to pop them off.

Step 5

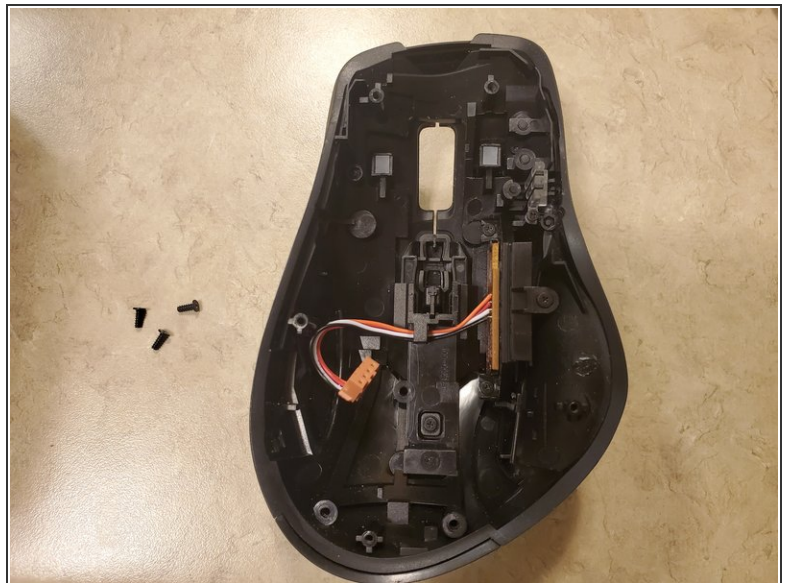

- Remove the three Philips head screws holding the left and right button clicker in place

Step 6



- Remove the left and right button & G13 & scroll wheel lock assembly from the top shell assembly.
- You can push on indicated locations to gain leverage

To reassemble your device, follow these instructions in reverse order.