


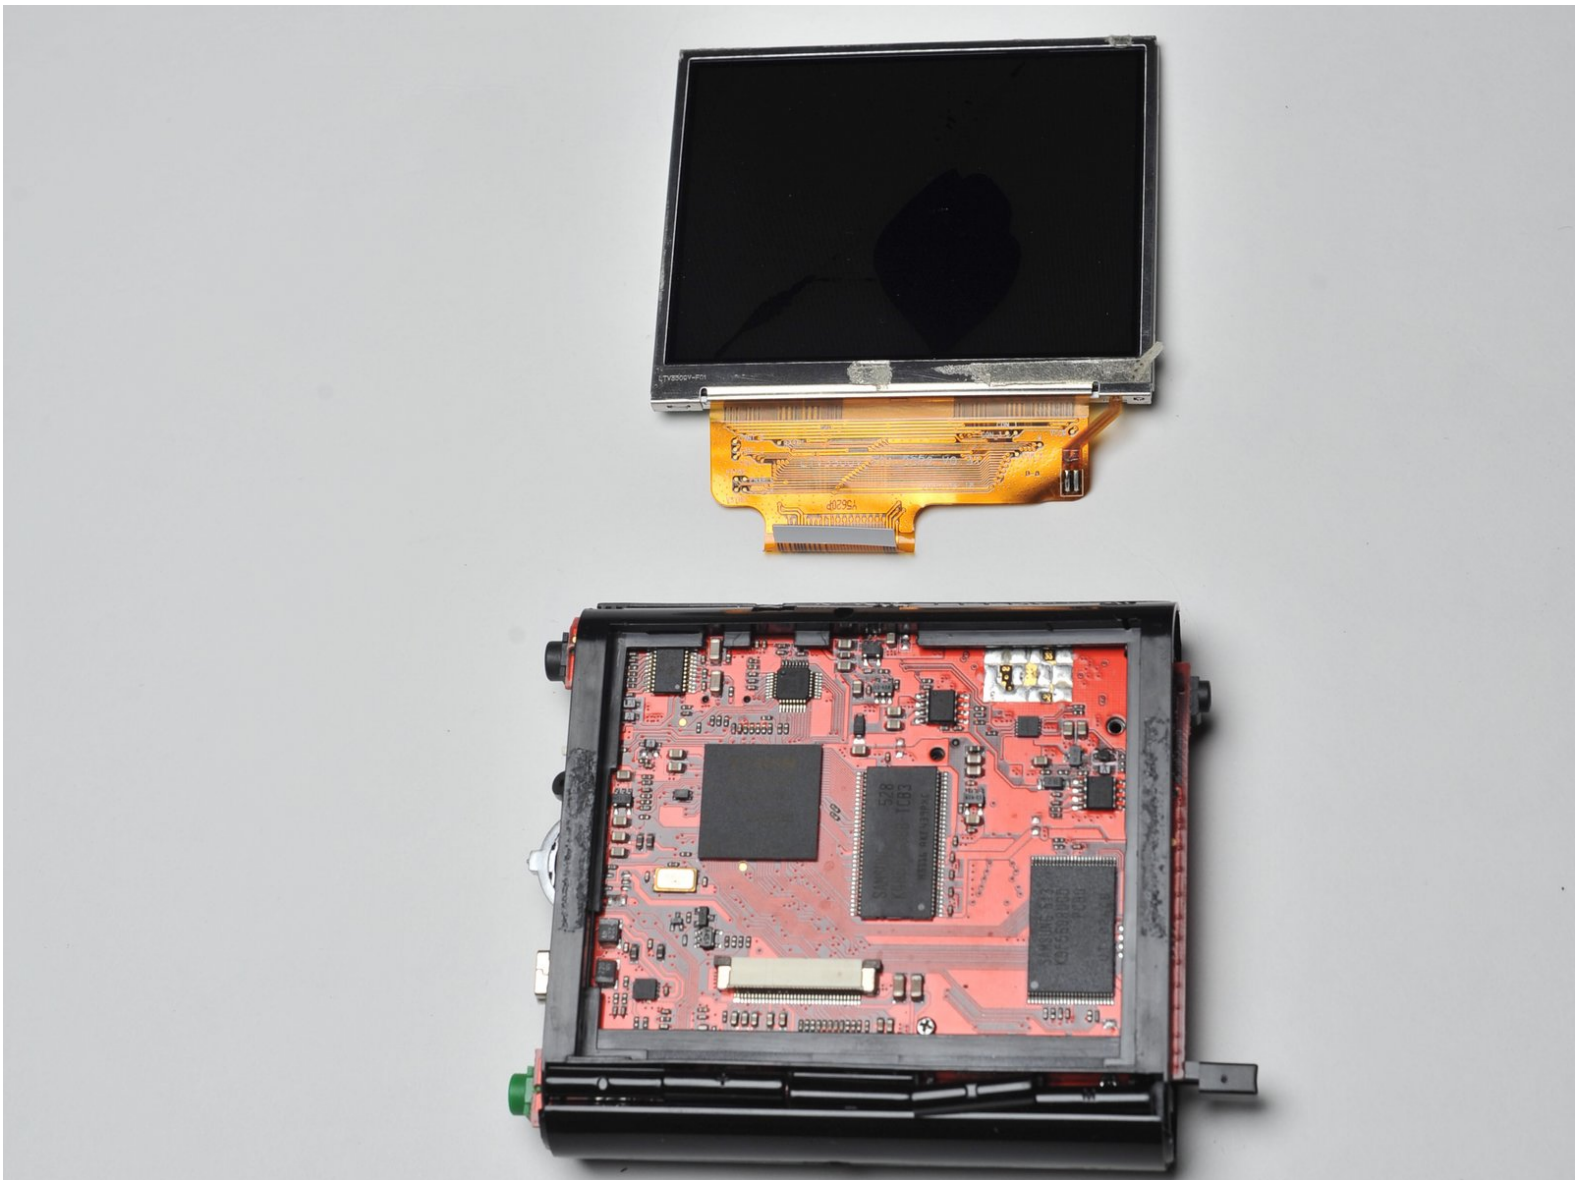

RCA Lyra x2400 Screen Replacement

Replace the screen of your RCA Lyra x2400.

Written By: Emmett



INTRODUCTION


This guide will show you how to take off and replace the screen of your Lyra.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery

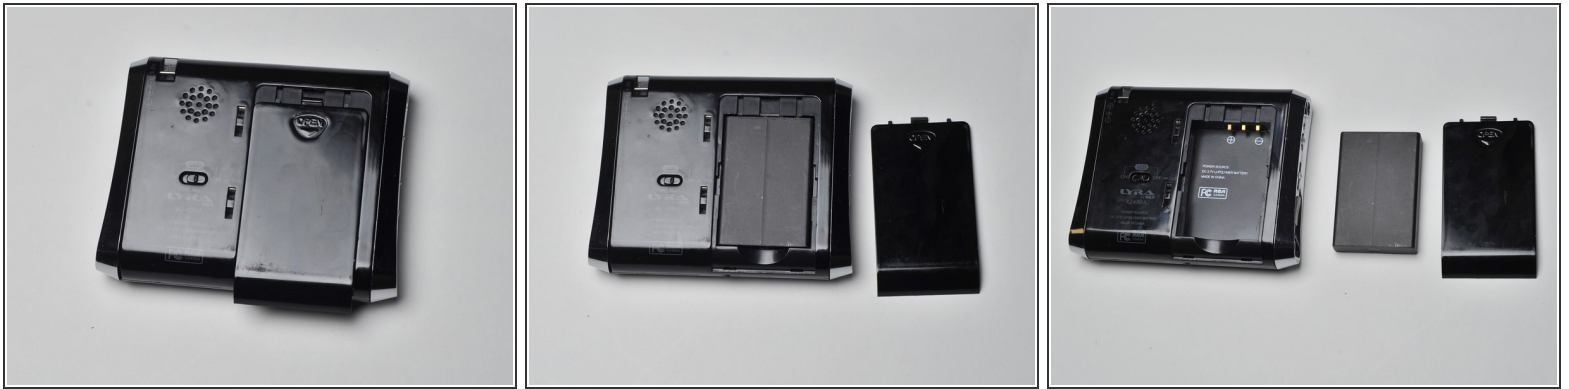

- Using slight pressure with your finger on the word "OPEN", slide the battery plate down.
- Remove the battery plate.
- Place your finger at the bottom of the battery.
- Lift up on the battery until it pops out from the LYRA X2400.

Step 2 — Screen




- Remove the two Phillips screws from the silver cover at the top of the Lyra.
- Slowly wiggle the silver cover while pulling it away from the device.

Step 3



- Remove the two Phillips screws from the bottom of the device, next to the charger port and Compact Flash release button.
- Pull the silver case from the bottom of the device.

Step 4

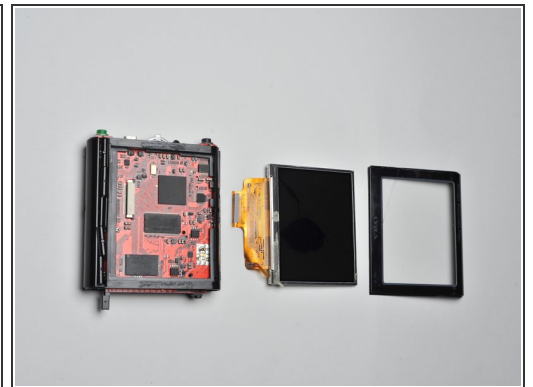

- Carefully pry up the screen with a plastic opening tool.
- Disconnect the screen's ribbon cable from the circuit board.
- Remove the screen.

To reassemble your device, follow these instructions in reverse order.