




Motorola Moto G7 Play Screen Replacement

This guide will show each detailed step to...

Written By: curt caudle

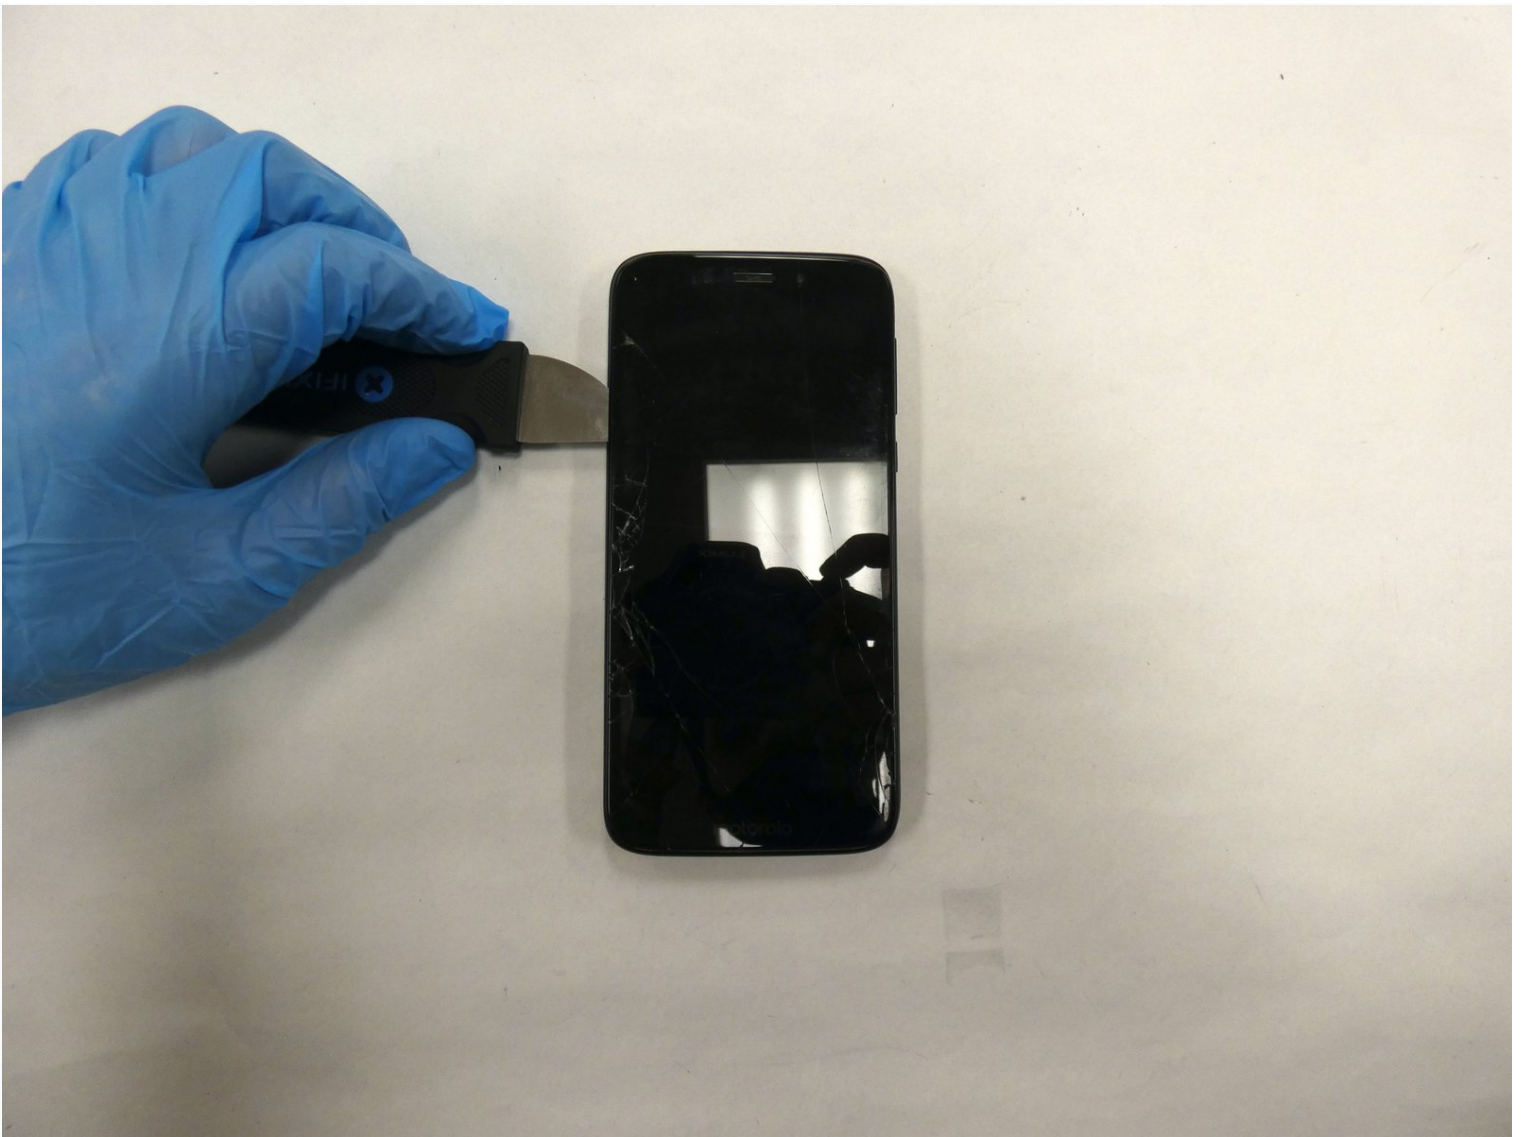

INTRODUCTION

This guide will show each detailed step to removing and replacing the front display screen in the Motorola G7 Play, model number XT1952-3 or XT1952-2. If the phones touch functionality is faulty, the screen is cracked, or not displaying correctly the screen can be replaced. This guide requires a heat gun or heating application on the screen.

Before you begin, download the [Rescue and Smart Assistant](#) app to backup your device and diagnose whether your problem is software or hardware related.



TOOLS:

[iFixit Opening Picks \(Set of 6\)](#) (1)


[Metal Spudger](#) (1)

[Suction Handle](#) (1)

[Heat Pad](#) (1)

[Heat Gun](#) (1)

Step 1 — Front Display Screen

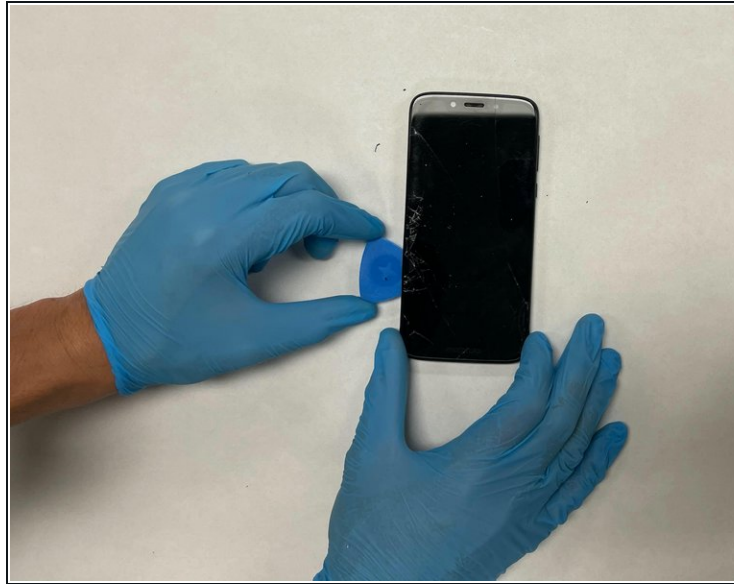


- ① Use a heat gun, hairdryer, or iOpener to weaken the adhesive around the front screen. If you're using the iOpener, please review the [instructions](#) for proper use.
- Use the plastic opening tools or picks to create an gap between the screen and the rest of the device.
- ⚠ Do not use the Jimmy or metal spudger on fragile components, as these tools may end up causing more damage than good.

Step 2



- Use the suction cup tool to lift the screen without damaging or scratching screen.

Step 3

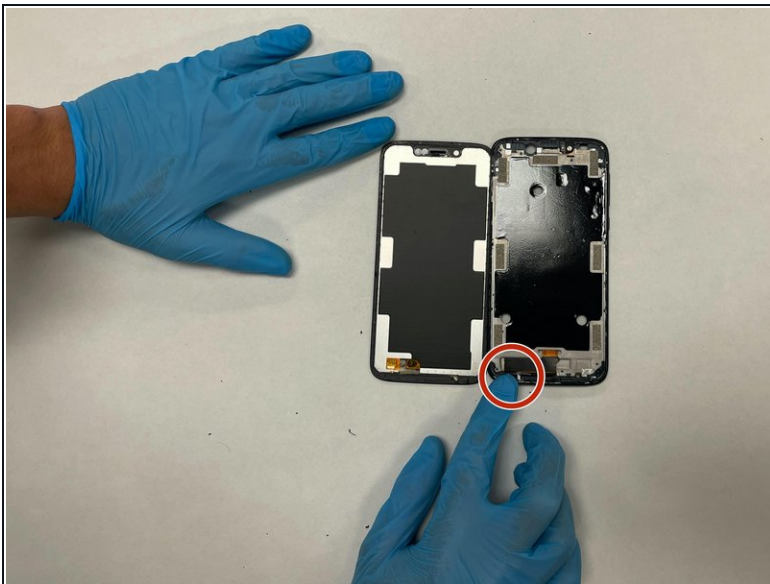

- Disconnect the ribbon cable to fully detach the screen from the device.
- Remove the display assembly from the device.

To reassemble your device, follow these instructions in reverse order.

