



2013-2018 Volvo V60 2.5 T5 Engine Air Filter Replacement

Use this guide to replace the engine air filter for the 2013-2018 Volvo V60 2.5

Written By: Noah Oikarinen



INTRODUCTION

After about every 12,000 to 15,000 miles the air filter should be replaced because there will be a buildup of things like leaves and dust. This build up blocks the air filter from functioning properly and needs to get replaced.



TOOLS:


- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Engine Air Filter



- Unlatch the hood by pulling on the hood release lever.

Step 2

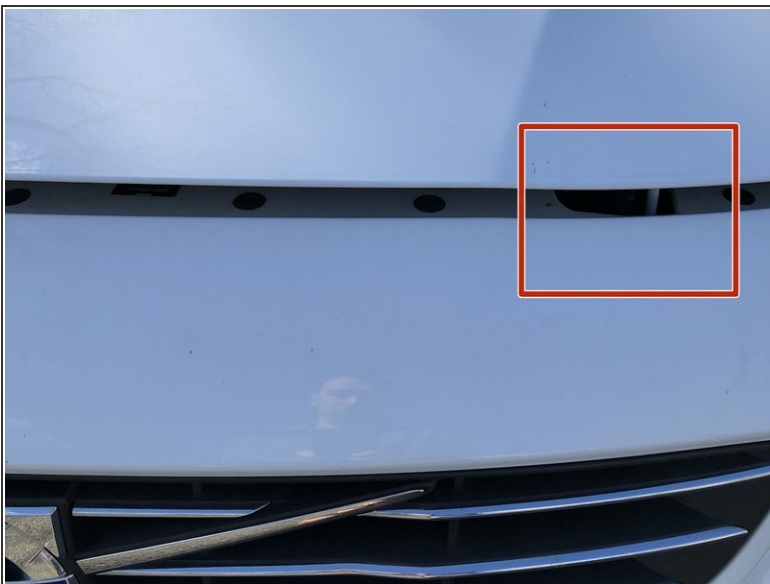

- Open the hood by pushing left on the hood latch.

Step 3




- Remove the two 2 inch screws from the case using the Phillips #2 screwdriver.

Step 4




- Pull the air filter towards you to take out the air filter.

Step 5

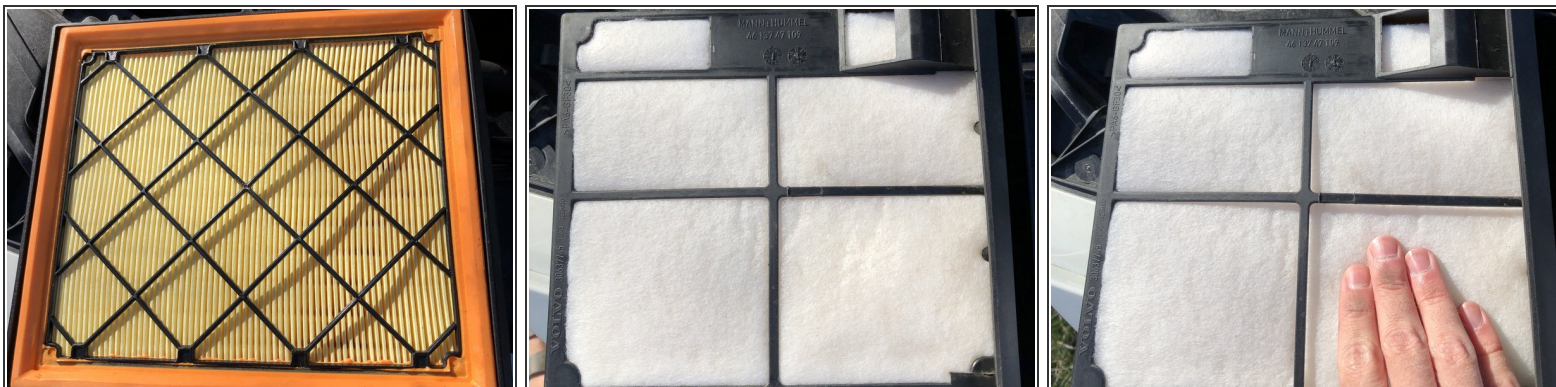

- Take out the old air filter by flipping it over and pushing it out through the bottom.

Step 6

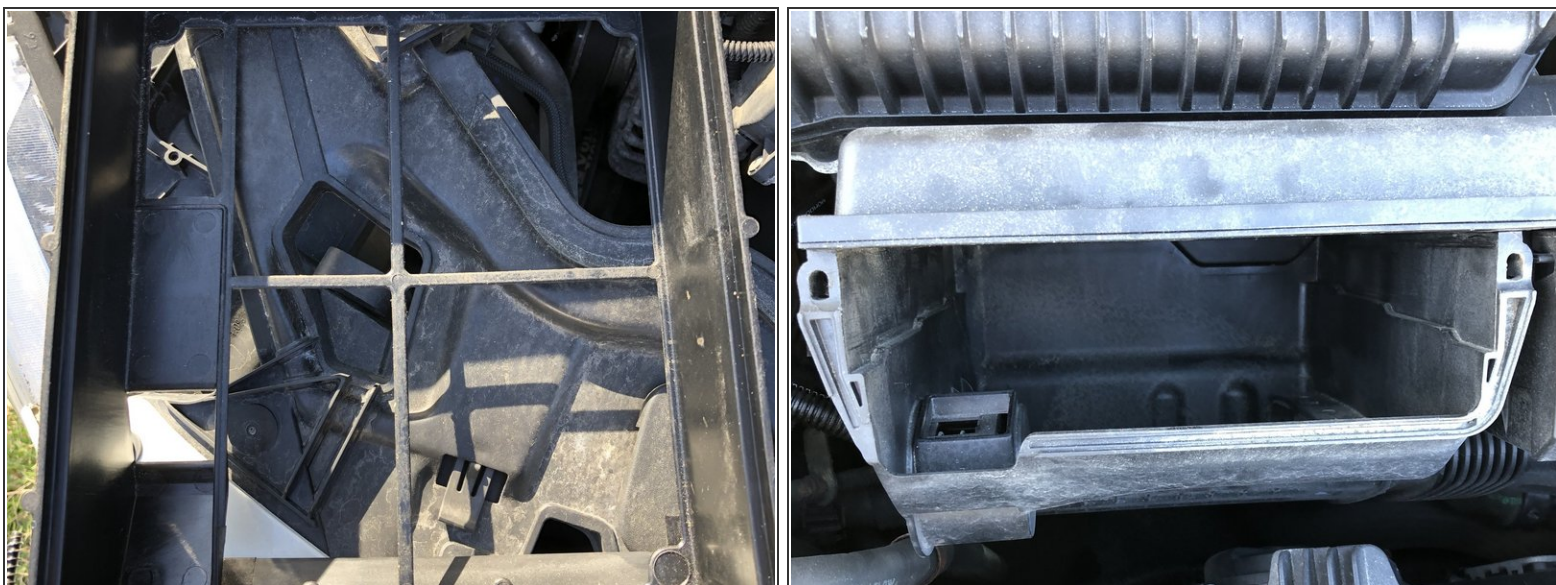

- Clean out any extra debris that maybe in the air filter holder or inside the engine.

To reassemble your device, follow these instructions in reverse order.